

TEMPERATURE /PRESSURE GAUGE INSTALLATION

P/N 240005740 Rev. 1.1 [09/07]

REPLACEMENT PARTS

DESCRIPTION	PART NO.
Gauge, Temp/Press, 2" shank, 1 pc.	1260006SP
Tee, 1 1/4" x 1 1/4" x 3/4", Black Iron	PF05901
Bushing, 3/4" x 1/4", Black Iron	1060002
Nipple, 1 1/4" x 2 1/2", Black Iron	14607044

INSTALLATION

To install the temperature/pressure gauge on the boiler:

1. Remove the box containing the new gauge from the parts bag and remove the gauge from the box.
2. Apply pipe sealant to the threads on the shaft of the gauge as shown in **Figure #1**.

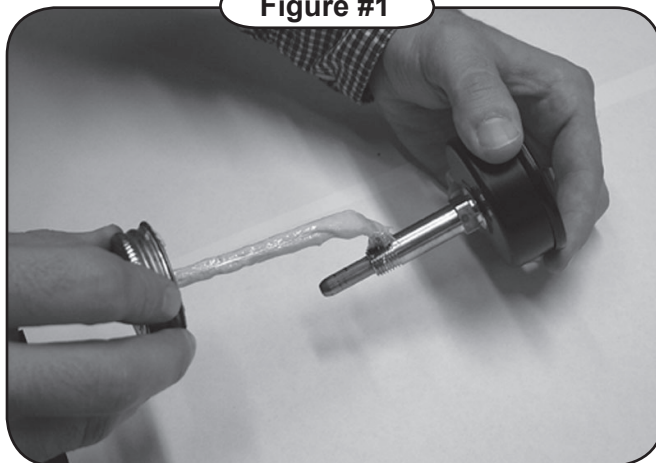


Figure #1

IMPORTANT: DO NOT TIGHTEN GAUGE BY HAND!! Gauge should be tightened using a crescent wrench or 9/16" open end wrench as shown in **Figure #3**.

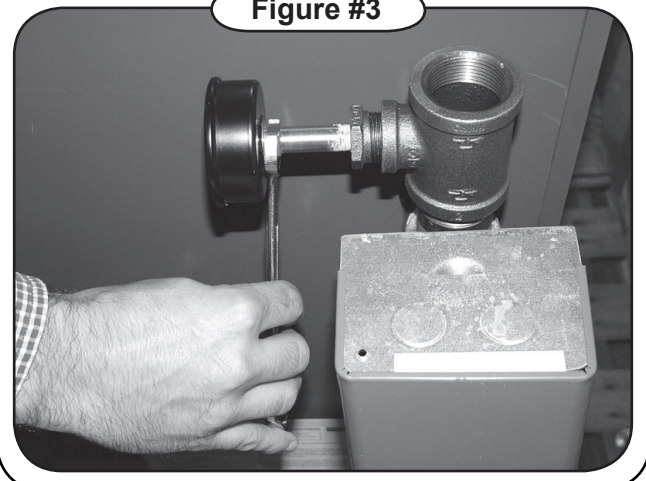


Figure #3

3. Thread the gauge into the supply water tee as shown in **Figure #2**.



Figure #2

4. Once installation is complete, remove sticker from front of the gauge as shown in **Figure #4**.

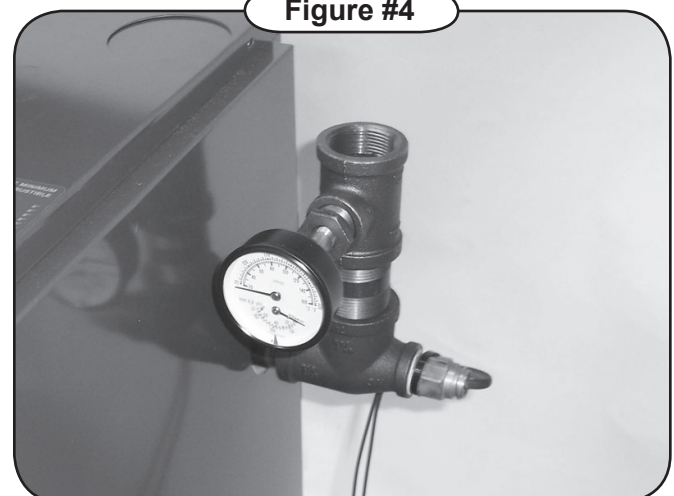


Figure #4

SUPPLEMENTAL INSTRUCTION