



INSTALLATION INSTRUCTIONS

©1998 Lennox Industries Inc.  
Dallas, Texas

503,829M  
3/98

CURRENT SENSING RELAY REPLACEMENT KIT

INSTALLATION INSTRUCTIONS FOR CURRENT SENSING RELAY REPLACEMENT KIT (LB-93804; 26L56)

SHIPPING AND PACKING LIST

- 1- Current sensing relay (21J2401)
- 1- Relay
- 1- Bag assembly containing:
  - 1-#10-32 X 1" Screw
  - 2-#6-32 X 1/2" Screws
  - 1-Wire


APPLICATION

Current sensor 21J2401 and relay 69J5601 replace discontinued current sensing relay 26G1201.

INSTALLATION

- 1- Disconnect all power to unit.
- 2- Disconnect wiring to 26G1201; connect wiring to replacement sensor and relay as shown in figure 1.
- 3- Remove 26G1201 relay from unit.
- 4- Install the 69J5601 relay with two #6 - 32 X 1/2" screws in approximately same location as previous relay.
- 5- Install the 21J2401 current sensor next to the 69J5601 relay; #10 - 32 X 1" screw provided.

WIRING

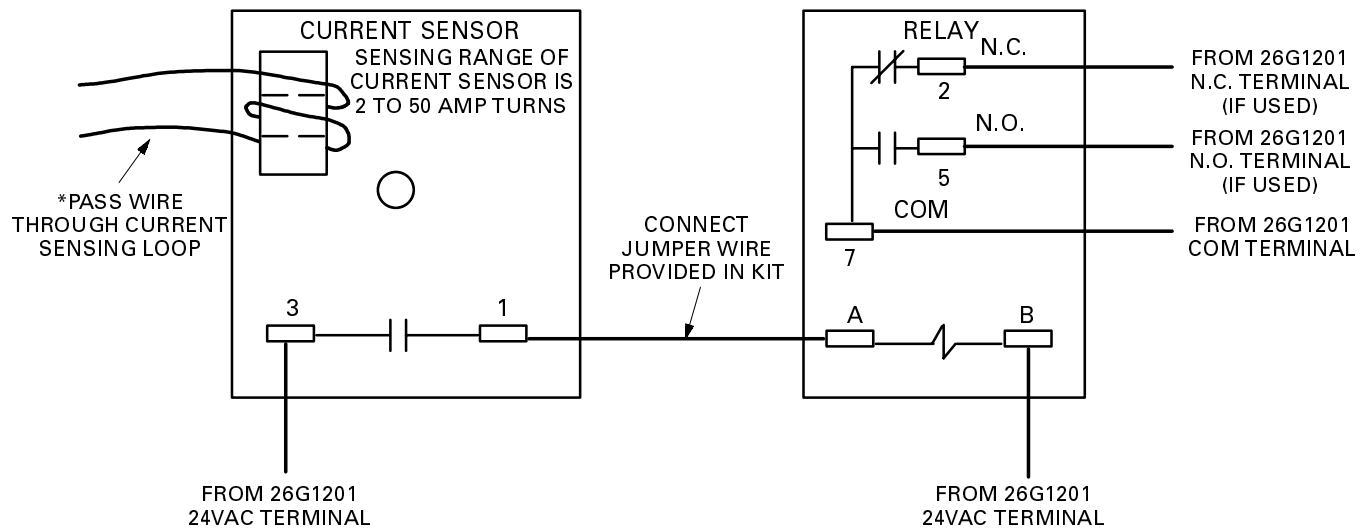

\*The number of passes through the current loop is dependent on the current carried in the wire. For example: if the wire carries a minimum of 2 amps, one pass through the current loop is sufficient. If wire carries a minimum of 1 amp, two passes through the current loop is required. (One amp, multiplied by two passes, equals two amp turns.)

FIGURE 1