



Field Replacement Guide for iCON™ Local Display (16A92)

507705-01, 6/2017



! WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life.

Installation and service must be performed by a licensed professional HVAC installer (or equivalent) or a service agency.

! WARNING

This product contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

Removing Existing Local Display

1. Disconnect power to the entire system.
2. To remove the iCON Local Display from Mag-Mount base rotate in either direction the touchscreen 30 degrees and pull away from wall to remove. **Failure to rotate display before pulling off requires much more force to be used and may pull out wall anchors.**
3. Discard original iCON Local Display.

Installing New Local Display

1. Line up iCON Local Display with Mag-Mount base.
2. Insert bottom of the iCON Local Display at 30 degree angle into tabs at bottom of the Mag-Mount wall base.
3. Rotate the iCON Local Display upward until it snaps into place by pressing on sides.
4. Use the through-hole screw previously removed to secure the iCON Central Hub.
5. Do not remove the label covering the touchscreen until after power is applied to the system.
6. Restore power to system.
7. Remove label covering the Local Display.