




Field Replacement Guide for iCON™ Mag-Mount (16A91) 507706-01, 6/2017

MAG-MOUNT ACCESS
COVER



MAG-MOUNT
WITHOUT ACCESS
COVER

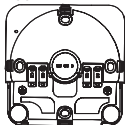

! WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life.

Installation and service must be performed by a licensed professional HVAC installer (or equivalent) or a service agency.



WARNING

This product contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

Removing Existing Mag-Mount

1. Disconnect power to the entire system.
2. Remove iCON Local Display from Mag-Mount.
3. Remove Mag-Mount access cover to allow access to control wiring and screws securing Mag-Mount to wall.
4. Take a picture or make a drawing showing the control wiring terminal connections.
5. Disconnect control wiring.

6. Remove screws securing Mag-Mount to wall.
7. Remove Mag-Mount and discard.

Installing New Mag-Mount

1. Remove new Mag-Mount from shipping container.
2. Remove Mag-Mount access cover.
3. Use existing screws to install new Mag-Mount to wall.
4. Reconnect wires as documented earlier.
5. Replace access cover.
6. Reinstall iCON Local Display.
7. Restore power to system.

IMPORTANT

Excess wires must be flush with Mag-Mount base. The access cover must be flush with the base or it could cause power or communication issues. In addition, wire hole in wall must be sealed to prevent cold or hot air from affecting the temperature sensor in iCON Local Display.