

VARIABLE REFRIGERANT FLOW SYSTEMS



VRF V0STAT53P-1

Non-Programmable ERV Controller

Bulletin No. 210706


July 2014

PRODUCT SPECIFICATIONS

Wall-mount controller for VRVA Energy Recovery Ventilator.



BUTTONS AND FUNCTIONS

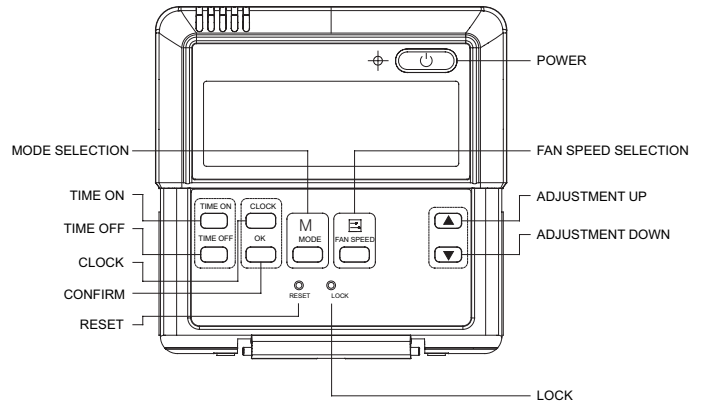

FEATURES

- **Backlight** - Allows easy operation in a dark room. The controller lights when any button is pressed and remains lit during control access.
- **LCD Display** - Displays CLOCK, CLOCK SET (Hour On, Hour Off), TIME ON, TIME OFF, FAN GRAPH, LOCK, MODE (AUTO, HEAT RECOVERY, EXHAUST, BYPASS, SUPPLY).
- **Function Buttons** - MODE SELECTION, POWER, FAN SPEED SELECTION, TIMER ON, TIMER OFF, ADJUSTMENT UP, ADJUSTMENT DOWN, CLOCK, CONFIRM, RESET (Recessed), LOCK (recessed).
- **Permanent Memory** - Maintains clock, fan speed and mode of operation settings following power outages (no battery).
- **Dimensions (H x W x D)** - 4-3/4 x 4-3/4 x 5/8 in. Additional hardware is furnished for installation.
- **Wiring** - Controller uses 5-wire shielded cable (not furnished) for easy low voltage connection to the VRVA Energy Recovery Ventilator.

MODE SELECTION - Push to select mode of operation (AUTO-HEAT RECOVERY-EXHAUST-BYPASS-SUPPLY).

POWER - Turns energy recovery unit on or off.

FAN SPEED SELECTION - Selects fan speed. Each button press cycles through the following settings on display (SLEEP-LOW-MEDIUM-HIGH):



NOTE - Fan Speed is disabled during Auto or Exhaust Mode.

TIMER ON - Sets start time on energy recovery ventilator. Press button to increase timer setting in 30 minute increments (hours 1-10) and one hour increments after 10 hours. Set timer to 0.0 to cancel timer on setting.

TIMER OFF - Sets stop time on energy recovery ventilator. Press button to decrease timer setting in 30 minute increments (hours 1-10) and one hour increments after 10 hours. Set timer to 0.0 to cancel timer off setting.

ADJUSTMENT UP - Sets Clock time.

ADJUSTMENT DOWN - Sets Clock time.


CLOCK - Press and hold to set hours and minutes. Use Adjustment Up and Down Arrows to adjust time. Press Confirm button to set.

CONFIRM - Confirms setting for clock adjustment.

RESET (Recessed) - Resets Controller to factory settings. Recessed to prevent tampering.

LOCK (recessed) - Locks Controller buttons to prevent tampering with settings.

DISPLAY

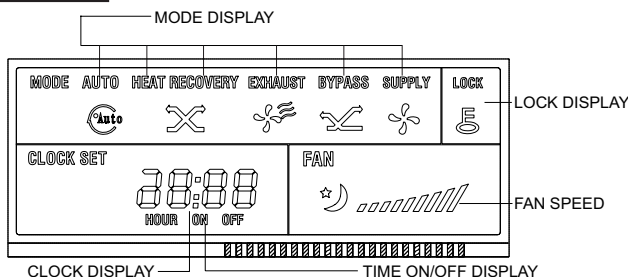



Visit us at www.lennox.com

For the latest technical information, www.lennoxcommercial.com

Contact us at 1-800-4-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability.
Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury.
Installation and service must be performed by a qualified installer and servicing agency.

©2014 Lennox Industries, Inc.