

**COMBUSTION AIR INDUCER
 REPLACEMENT KIT**

**INSTALLATION INSTRUCTIONS FOR COMBUSTION AIR INDUCER REPLACEMENT
 KIT USED ON KG/SG/ZG/LGH024-090 GAS PACKAGED UNITS**

Shipping and Packing List

Package 1 of 1 contains:

1- Combustion air inducer assembly

Bag assembly containing:

1-Gasket

5-#10 Sheet metal screws

Application

See table 1 for usage.

TABLE 1

Heating Input	Speeds	Kit
150, 105	Two-speed	602107-02; 44W30
65, 105, 150	Single-speed (Units Built Through 2015)	LB-112090B; 19W04
65, 105, 150	Single-speed (Units Built 2016 and After)	LB-112090C; 13Y15*

*The 13Y15 kit can be used on units built before 2016 if a new flue tube (elbow) is ordered.

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier

Installation

- 1- Disconnect all power and gas supply to unit.
- 2- Open the heat section access panel. See figure 1, 2, or 3.
- 3- Disconnect jack/plug from harness routed to combustion air inducer.
- 4- Remove screws securing combustion air inducer to flue box. Remove combustion air inducer. See figure 4.

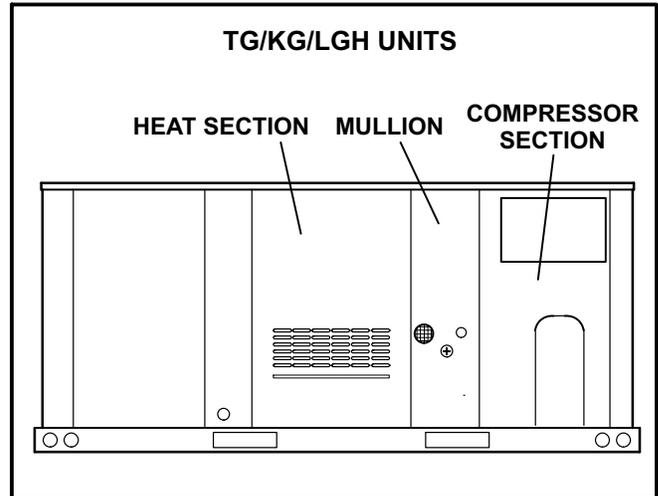


FIGURE 1

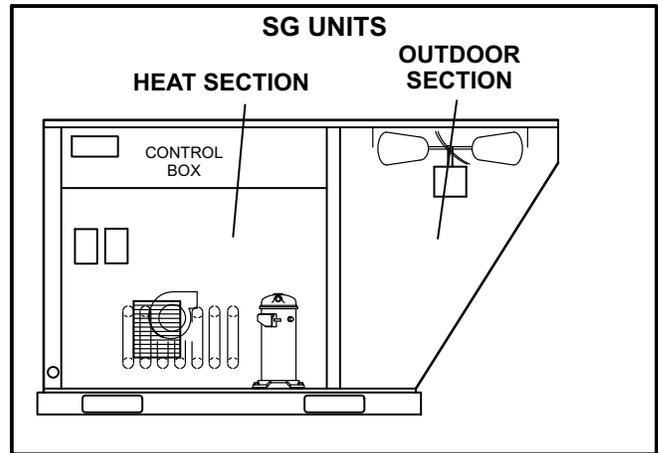


FIGURE 2

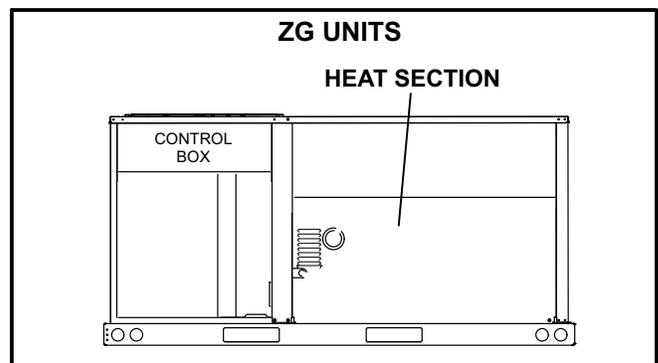


FIGURE 3

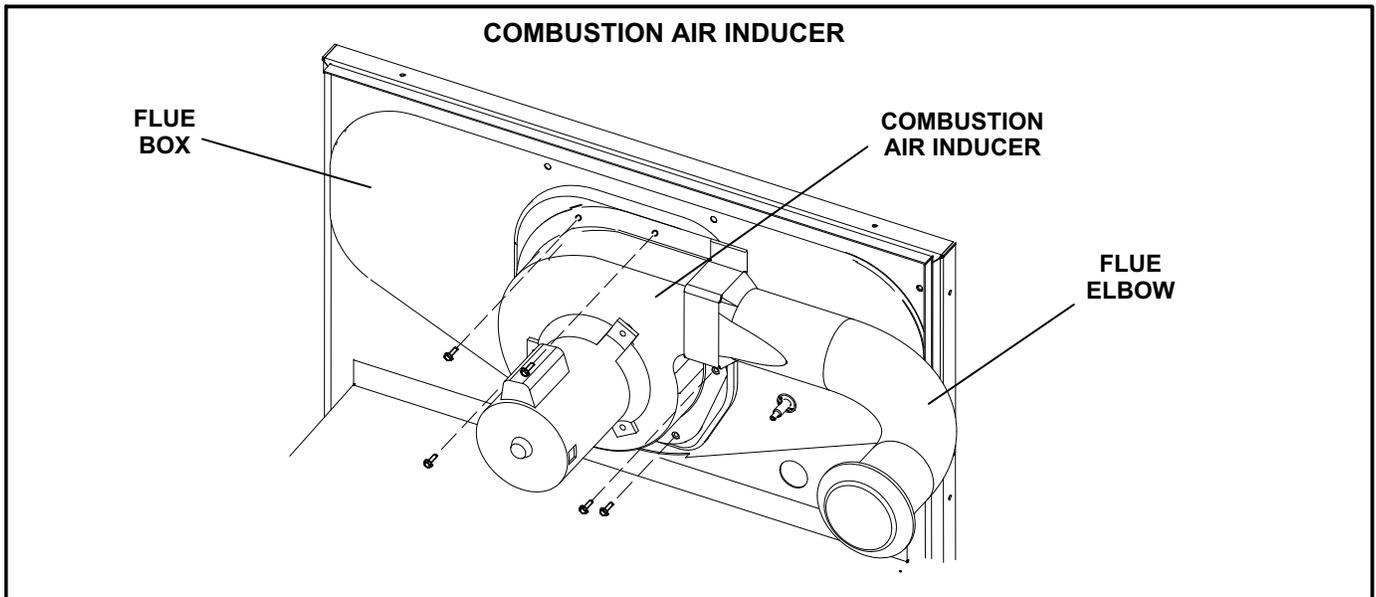


FIGURE 4

⚠ CAUTION

Danger of sharp metallic edges. Can cause injury. Take care when servicing unit to avoid accidental contact with sharp edges.

- 5- Remove flue elbow from combustion air inducer and set aside.
- 6- Fit flue elbow onto replacement combustion air inducer.
- 7- Install replacement combustion air inducer and gasket. See figure 5. Secure with screws provided in kit.
- 8- Connect jack/plug to combustion air inducer.
- 9- Replace heat access panel and connect power and gas. Start unit as shown in unit installation instruction.

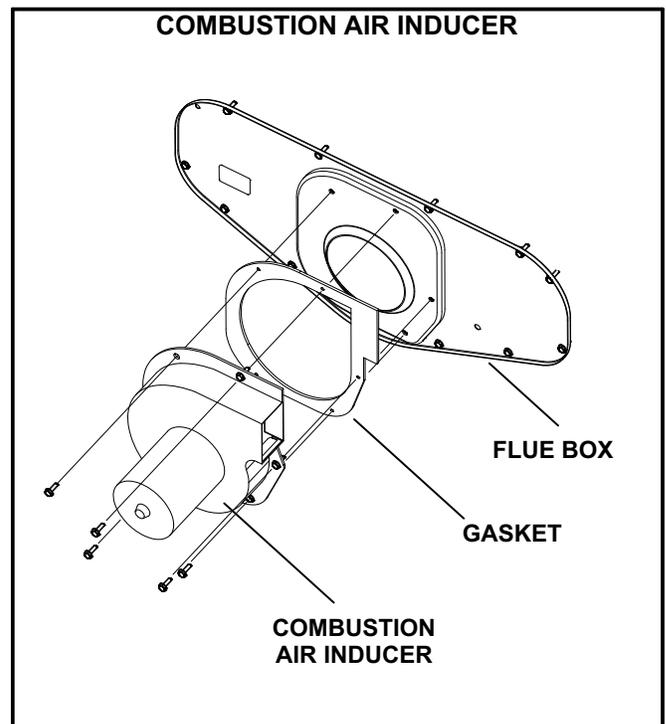


FIGURE 5