

**INSTALLATION INSTRUCTIONS FOR INSULATION KIT
(11U94; LB-112057R) USED WITH LGH/LCH/KG/KC/KH 024-090 UNITS**

Shipping and Packing List

Package 1 of 1 contains:

- 6- Pieces of adhesive-backed foam insulation

Application

Insulation is applied to the ceiling of the compressor section to prevent condensate during extremely low ambient temperatures.

Important - Install this kit at 50°F or above outdoor air.

Installation

- 1- Disconnect all electrical power to unit and open the compressor / control access panel.
- 2- Inspect the ceiling of the control area for moisture or oil. Wipe dry if moisture or oil is present.

Note - Position and cut pieces of insulation to fit before removing plastic backing on adhesive side.

- 3- Position the first piece of insulation on the control box ceiling as far back and to the right as possible. See figure 1.
- 4- Cut to fit the rest of the pieces of insulation in the order shown in figure 1. Make sure there are no gaps between the edges of insulation. Fill in any gaps with extra insulation sheets.
- 5- Remove the plastic backing covering the adhesive side of the insulation. Affix all pieces of insulation in place

Note - Not all pieces of insulation need to be used; extra insulation is provided.

- 6- Close compressor / control access panel and restore power to unit.

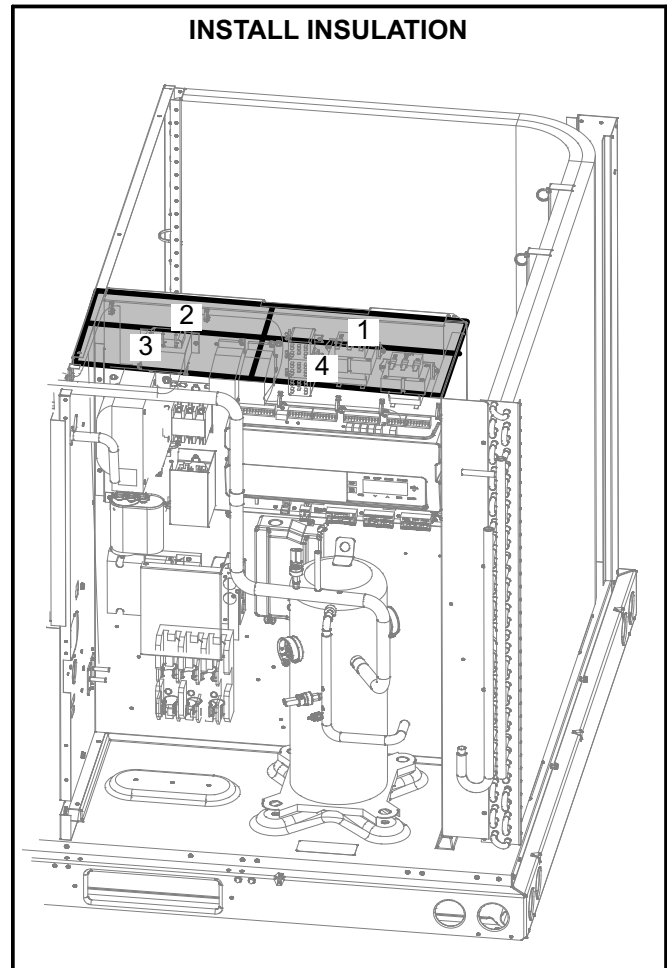


FIGURE 1

⚠ WARNING

The State of California has determined that this product may contain or produce a chemical or chemicals, in very low doses, which may cause serious illness or death. It may also cause cancer, birth defects, or reproductive harm.

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier

⚠ CAUTION

Danger of sharp metallic edges. Can cause injury. Take care when servicing unit to avoid accidental contact with sharp edges.