



KEY	COMPONENT
A1	PANEL-LOGIC
A16	CONTROL-MICROPROCESSOR
A72	CONTROL, REMOTE MIN POS
A75	SENSOR-ROOM
J3	JACK-UNIT, ECONOMIZER
J24	JACK-EXHAUST FAN
J39	JACK-CONTROL INTERFACE
J79	JACK-PIGTAIL
J80	JACK-HEADER
K65	RELAY-EXHAUST FAN
K92	RELAY-INTERLOCK
P3	PLUG-UNIT, ECONOMIZER
P24	PLUG-EXHAUST FAN
P39	PLUG-CONTROL INTERFACE
P79	PLUG-HEADER
P80	PLUG-HEADER
R1	SENSOR-MIXED OR SUPPLY AIR
RT1	SENSOR-DISCHARGE AIR MONITOR
S52	SWITCH-AIRFLOW
TB1	TERMINAL STRIP-24V CLASS II

- ⚠ THERMOSTAT SUPPLIED BY USER
- ⚠ REMOVE P3 WHEN ECONOMIZER IS USED
- ⚠ J3 MAXIMUM LOAD 20VA 24VAC CLASS II

————— DESIGNATES OPTIONAL WIRING
 - - - - - CLASS II FIELD WIRING

07/13		WIRING DIAGRAM	07/13
		537556-01	
CONTROLS			
NOVAR ETM-2024 CONTROL			
SECTION C			REV. 1
Supersedes		New Form No. 537556-01	