



KEY	COMPONENT
A6	CONTROL-SOLID STATE ENTHALPY
A7	SENSOR-SOLID STATE ENTHALPY
A62	SENSOR-ENTHALPY, INDOOR
B7	MOTOR-DAMPER, ECONOMIZER
J10	JACK, ECONOMIZER
P3	PLUG, ECONOMIZER
P4	PLUG-ECONOMIZER
R1	SENSOR-MIXED AIR OR SUPPLY AIR
R2	POT-MINIMUM POSITION
RT26	SENSOR-OUTDOOR AIR TEMP
RT27	SENSOR-INDOOR AIR TEMP
S175	THERMOSTAT, SENSIBLE AIR

△ RT26 AND RT27, TEMPERATURE SENSORS MAY BE USED INSTEAD OF A7 AND A62 ENTHALPY SENSORS

△ A62 ENTHALPY SENSOR OR RT27 USED FOR DIFFERENTIAL SENSING

△ OPTIONAL OUTDOOR AIR THERMOSTAT TO REPLACE RT26 SENSIBLE SENSOR

————— DESIGNATES OPTIONAL WIRING
 - - - - - CLASS II FIELD WIRING

08/15		537620-01	08/15
ACCESSORIES			
ECONOMIZER LANDMARK A-BOX			
SECTION D1			REV 1
Supersedes Form No. 537484-01		New Form No. 537620-01	