

- NOTE- FOR USE WITH COPPER CONDUCTORS ONLY. REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE
- REFER TO COMPRESSOR IN UNIT FOR ACTUAL TERMINAL ARRANGEMENT
- WARNING- ELECTRIC SHOCK HAZARD. CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.
- REMOVE JUMPER FOR TWO STAGE COOL
- ON A92 CUT ONBOARD W914 JUMPER FROM D5 TO R, WHEN HUMIDITY CONTROL IS USED
- ON A92 DO NOT CUT ONBOARD W951 JUMPER FROM R TO O. IT IS USED FOR APPLICATIONS FOR CONDENSING UNITS
- FOR CONDENSING UNIT APPLICATIONS USE R TO O JUMPER. REMOVE IN HEAT PUMP APPLICATIONS
- REMOVE DS TO Y1 JUMPER WHEN HUMIDITY CONTROL IS USED
- WHEN TWO STAGE THERMOSTAT IS USED, CONNECT SECOND STAGE HEAT BULB TO TERMINAL "W2", AND REMOVE JUMPER BETWEEN "R" AND "W2"
- L34 SOLENOID IS LOCATED IN COMPRESSOR. COIL IS 24VDC. DO NOT CONNECT 24VAC TO COIL TERMINALS
- S11 IS OPTIONAL LOW AMBIENT SWITCH


NOTE- IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION.

NOTE- MINIMUM TRANSFORMER REQUIRED IN INDOOR UNIT-40 VA

— LINE VOLTAGE FIELD INSTALLED

- - - CLASS II VOLTAGE FIELD WIRING

← DENOTES OPTIONAL COMPONENTS

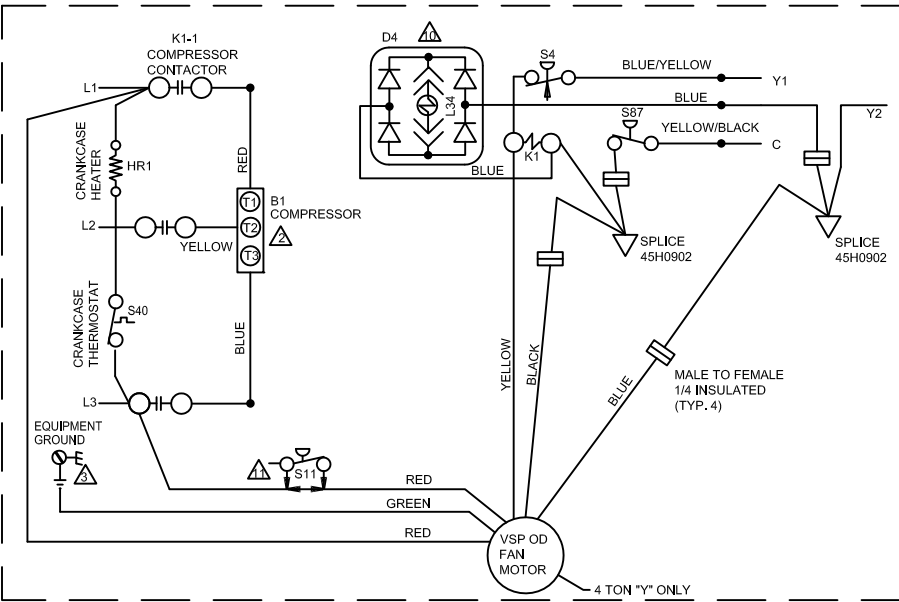

<b>LENNOX</b>		<b>COOLING - CONDENSING</b>
SSB036H4-Y		
SSB048H4-Y		
SSB06014-Y		
		Supersedes
0413	Form No. 537622-01	