



- ▲ NOTE - FOR USE WITH COPPER CONDUCTORS ONLY. REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE.
- ▲ IMPORTANT: TO PREVENT MOTOR BURNOUT, NEVER CONNECT MORE THAN ONE MOTOR LEAD TO ANY ONE CONNECTION. TAPE UNUSED MOTOR LEADS
- ▲ P-Y VOLT T1 WITH 208V TAP
- ▲ ELECTRIC HEAT FIELD OPTION
- ▲ LOW AMBIENT KIT
- ▲ K1-A TO K1-F FAN JUMPER ON G.J.M UNITS ONLY
- ▲ THERMOSTAT/SENSOR SUPPLIED BY USER
- ▲ TIME CLOCK CONTACTS (OPT) CLOSED OCCUPIED
- ▲ AN OUTDOOR AIR TEMPERATURE SENSOR RT26 OR OUTDOOR AIR ENTHALPY SENSOR A7 MAY BE USED. MAKE CONNECTION AS SHOWN.
- ▲ PROGRAMMABLE USE FOR EXHAUST FAN 2 OUTPUT OR ENV OR SYSTEM ALARM OUTPUT.

10/14

WIRING DIAGRAM 10/14

537711-02

UNIT DIAGRAM

ZH - 036, 048, 060

SECTION ALL

Supersedes New Form No. 537711-02

REV. 0

-----> DESIGNATES OPTIONAL WIRING
 -----> CLASS II FIELD WIRING

