



KEY	COMPONENT
A6	CONTROL-SOLID STATE ENTHALPY
A7	SENSOR-SOLID STATE ENTHALPY
A62	SENSOR-ENTHALPY, INDOOR
A183	CONTROL, VFD BOARD
B7	MOTOR-DAMPER, ECONOMIZER
J32	JACK-ECONOMIZER ADAPTOR
P3	PLUG - LESS ECONOMIZER
P4	PLUG - ECONOMIZER
R1	SENSOR-MIXED AIR OR SUPPLY AIR
R2	POT-MINIMUM POSITION
RT26	SENSOR-OUTDOOR AIR TEMP
RT27	SENSOR-INDOOR AIR TEMP
TB11	TERMINAL STRIP

- ⚠ RT26 AND RT27, TEMPERATURE SENSORS MAY BE USED INSTEAD OF A7 AND A62 ENTHALPY SENSORS
- ⚠ A62 ENTHALPY SENSOR OR RT27 USED FOR DIFFERENTIAL SENSING

—————> DESIGNATES OPTIONAL WIRING
 - - - - - CLASS II FIELD WIRING

02/14		WIRING DIAGRAM	02/14
		537724-01	
ACCESSORIES			
ECONOMIZER FOR TSA, TPA UNITS			
SECTION D			REV. 0
Supersedes		New Form No. 537724-01	