



KEY	COMPONENT
A6	CONTROL-SOLID STATE ENTHALPY
A7	SENSOR-SOLID STATE ENTHALPY
A62	SENSOR-ENTHALPY, INDOOR
A183	CONTROL, VFD BOARD
B7	MOTOR-DAMPER, ECONOMIZER
J32	JACK-ECONOMIZER ADAPTOR
P3	PLUG - LESS ECONOMIZER
P4	PLUG - ECONOMIZER
R1	SENSOR-MIXED AIR OR SUPPLY AIR
R2	POT-MINIMUM POSITION
RT26	SENSOR-OUTDOOR AIR TEMP
RT27	SENSOR-INDOOR AIR TEMP
TB11	TERMINAL STRIP

- RT26 AND RT27, TEMPERATURE SENSORS MAY BE USED INSTEAD OF A7 AND A62 ENTHALPY SENSORS
- A62 ENTHALPY SENSOR OR RT27 USED FOR DIFFERENTIAL SENSING
- OPTIONAL OUTDOOR THERMOSTAT TO REPLACE RT26 SENSIBLE SENSOR

—————→ DESIGNATES OPTIONAL WIRING
 - - - - - CLASS II FIELD WIRING

04/14		WIRING DIAGRAM	04/14
		537727-01	
ACCESSORIES			
ECONOMIZER FOR TSA, TPA UNITS			
SECTION D			REV. 0
Supersedes		New Form No. 537727-01	