


BLOWER SPEED CHART

PARAMETER	FACTORY SHIPPED SETTINGS
HEAT	ADJUST
COOL	ADJUST
OVERSIZE	FACTORY DEFAULT
OVERSIZE	HIGH
OVERSIZE	FACTORY DEFAULT
HT/CROSS	FACTORY DEFAULT
HT/CROSS	FACTORY DEFAULT

FURNACE SIZE SELECTION CODE

Character on 7- segment LED (w/dt ON)	FURNACE MODEL A96DS2V	INDOOR HP SIZE (w/dt ON)
8	045812S	1/2
9	070818S	3/4
0	100825S	1
1	130832S	1 1/4

- ▲ CUT W914 JUMPER LABELED "DEHUM OR HARMONY" FROM DS TO R AT A92 CONTROL BOARD WHEN USED WITH THERMOSTAT WITH DEHUM OPTION
- ▲ CUT W91 JUMPER FROM O TO R LABELED "DEHUM" FROM DS TO R AT A92 CONTROL BOARD WHEN USED FOR DUAL FUEL APPLICATIONS
- ▲ JUMPER W95 FROM Y1 TO Y2 IS FACTORY INSTALLED AT A92 CONTROL BOARD. LEAVE IN FOR ONE STAGE COOL THERMOSTAT. CUT JUMPER Y1 TO Y2 FOR TWO STAGE COOL THERMOSTAT.
- ▲ L13 USED ON HP ONLY
- ▲ THERMOSTAT HEAT ANTICIPATION SETTING
- ▲ 4.5 AMP HONEYWELL VALVE
- ▲ 4.5 AMP WHITE RODGERS VALVE
- ▲ TWO STAGE HEAT/COOL
- ▲ S1 ROOM THERMOSTAT
- ▲ DH1 TERMINAL ONLY USED WITH COMFORT SYNC THERMOSTAT
- ▲ DIP SWITCH FACTORY DEFAULTS FOR A TWO STAGE THERMOSTAT
- ▲ FIELD SUPPLIED A/C WIRE
- ▲ USE COPPER CONDUCTORS ONLY
- ▲ DISCHARGE AND OUTDOOR AIR TERMINALS ARE FOR COMFORT SYNC USE ONLY
- ▲ THERMOSTAT CONNECTIONS ARE FOR NON-COMMUNICATING SYSTEM ONLY. REFER TO COMFORT SYNC INSTALLATION INSTRUCTIONS FOR COMMUNICATING SYSTEMS.

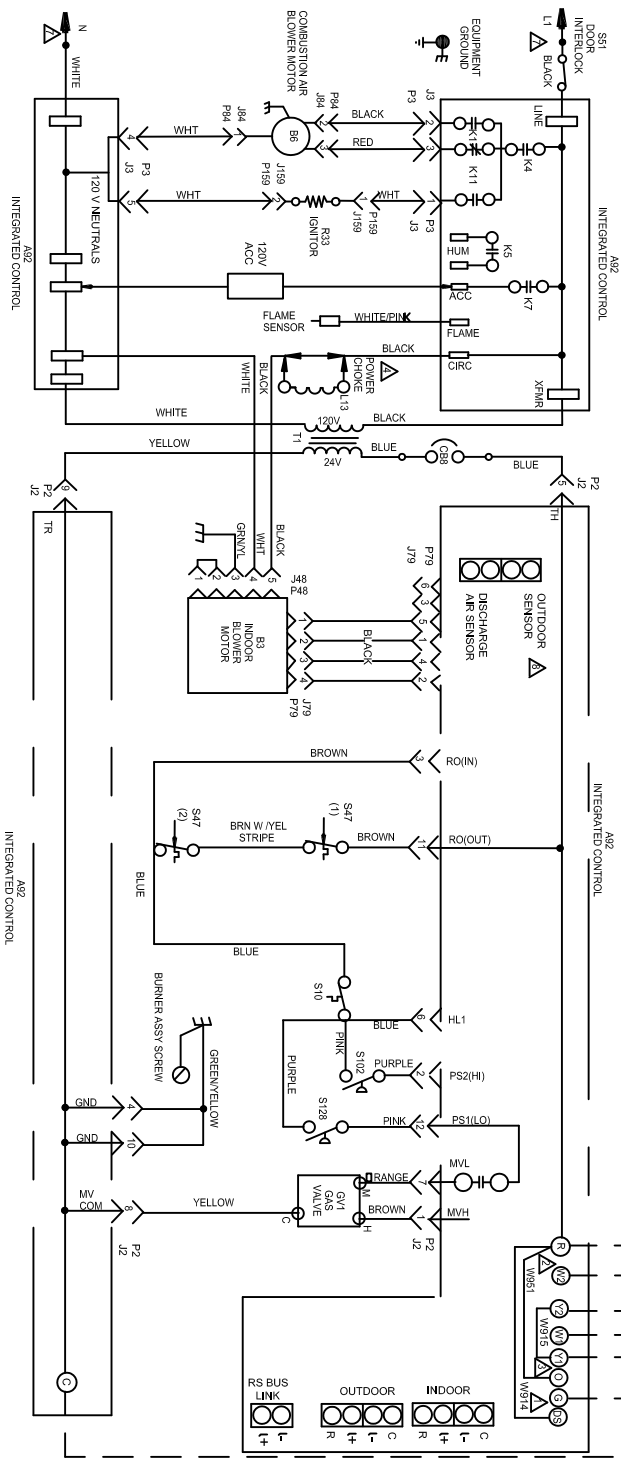

HEATING UNITS-GAS
 A96DS2V045812S A96DS2V090C20S
 A96DS2V070816S A96DS2V110C20S
 2 HEAT/2 COOL
 Form No. 537751-01
 LHM U.S.A.

WARNING:
 ELECTRIC SHOCK HAZARD CAN CAUSE INJURY OR DEATH. ALWAYS DISCONNECT ALL POWER TO THE UNIT BEFORE ATTEMPTING ANY REPAIRS OR MAINTENANCE. ALWAYS FOLLOW ALL NATIONAL AND LOCAL CODES.
 NOTE:
 IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION

LINE VOLTAGE FIELD INSTALLED
 CLASS II VOLTAGE FIELD WIRING
 DENOTES OPTIONAL COMPONENTS

© 2011