

Adjust Temperature

The new setpoint overrides the programmed setpoint for one hour (default) and can be adjusted $\pm 10^{\circ}\text{F}$ (default). Refer to the User's Manual to extend the time and temperature range or to adjust the program on an ongoing basis.

IF THIS TYPE OF SCREEN IS DISPLAYED THE SETPOINT CANNOT BE ADJUSTED BECAUSE THE UNIT IS BEING CONTROLLED BY A THERMOSTAT

1 MAKE SURE THE APPROPRIATE AREA STATUS SCREEN IS DISPLAYED

2 TO VIEW THE TEMPERATURE IN OTHER AREAS, PRESS THE + PUSHBUTTON TO HIGHLIGHT THE AREA ADDRESS

3 PRESS THE ▲ AND ▼ PUSHBUTTONS TO MOVE BETWEEN OTHER AREA DISPLAYS WHEN THERE ARE MORE THAN ONE

4 PRESS THE + PUSHBUTTON UNTIL THE HEATING OR COOLING SETPOINT IS HIGHLIGHTED

5 PRESS THE ▲ AND ▼ PUSHBUTTONS TO INCREASE OR DECREASE THE SETPOINT

NOTE: THE NCP WILL AUTOMATICALLY MAINTAIN A 3 DEGREE TEMPERATURE DIFFERENCE BETWEEN THE HEATING AND COOLING SETPOINTS.

HEATING SETPOINT
COOLING SETPOINT

IF "STAND-BY" IS DISPLAYED THE UNIT HAD BEEN TURNED OFF. USE THE + PUSHBUTTON TO HIGHLIGHT "STAND-BY" AND THE ▼ PUSHBUTTON TITLED "On" TO START THE UNIT.

