

Installation

Use the following steps to install the Controller software to a PC hard drive:

- 1- Place the CD in the CD-ROM drive and it will auto-run. If the CD does not auto-run, select **Start-Run**, browse the CD, and locate the "Setup.exe" file. Click **OK**.
- 2- Follow the installation instructions on the screen.

Running the Software

Select **Start-Programs-Lennox-Commercial Controls-L Connection Software** or double click the L Connection Software icon if one has been created.

If the program is running correctly, the following start-up screen will appear:

Click on **Manuals** to view manuals.

Click on **Unit Controller Software** to start Unit Controller software.

NOTE - The NCP will be offline while Unit Controller Software is running.

*NOTE - **Network Control Panel Software** will only appear if it is installed (purchased separately).*



Unit Controller **LENNOX** (UC) Software Version 2.10

505,078M
3/2008
Supersedes 6/2007

TP Technical
Publications
Litho U.S.A.
© 2008

Application

Unit Controller Software (96L80) is used to locally or remotely setup, diagnose, and monitor L Connection® Network controllers such as the L Series® / S-Class™ IMC, the Network Thermostat Controller (NTC), the Building Controller (BC), Zone Link (ZL), Comfort Sensor (CS), and Comfort Sensor-Zoning (CSZ).

IMPORTANT - For serial port connection, PC to L Connection Converter Kit (96L78) is required to access the L Connection Network. Connect the converter to the PC and the L Connection Network as shown in the instructions provided in the kit.

For dial-up connection, Modem Kit (94L62) is required to access the L Connection network. Connect the modem kit to the L Connection network bus and a phone line.

For TCP/IP connection, an L Connection Network Ethernet Converter (76M77) is required to access the L Connection Network.


03/08



505,078M



SOFTWARE SCREEN INDEX

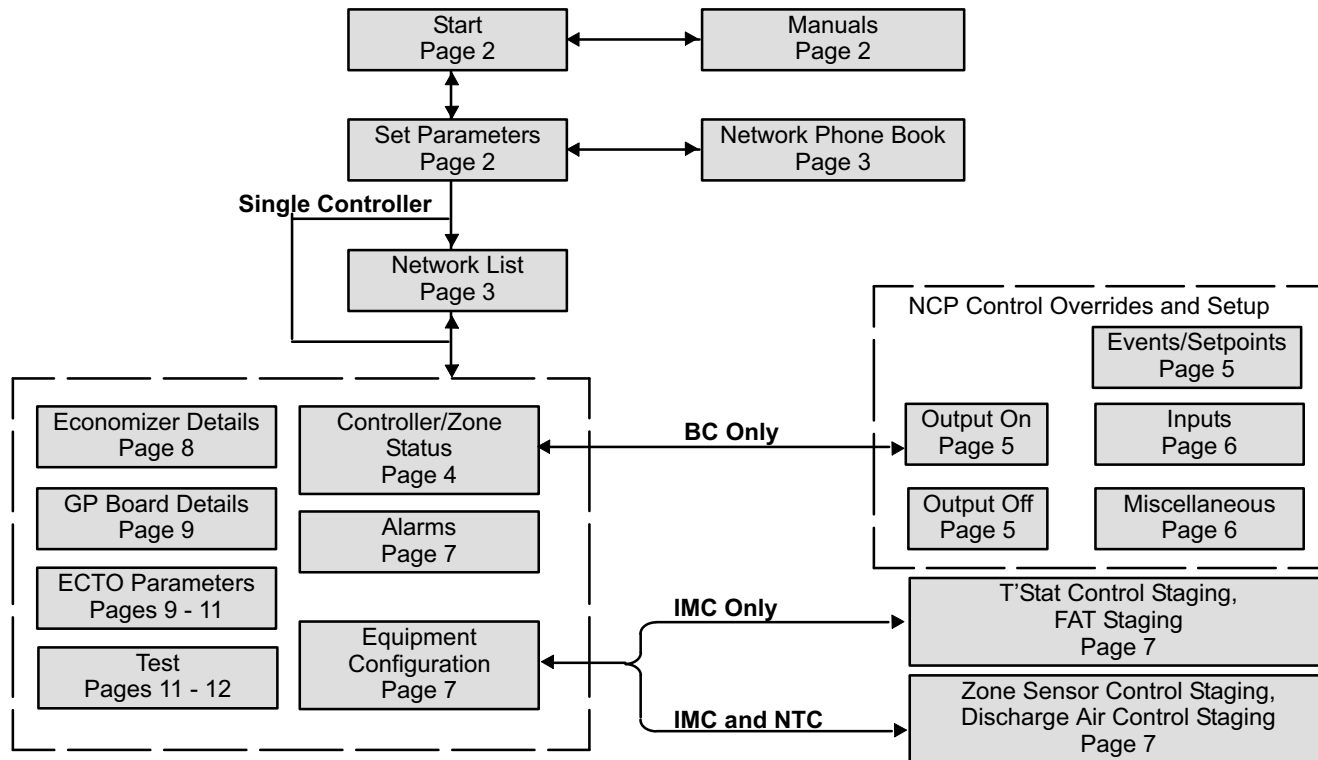

NOTE - Page numbers refer to Software User's Manual.