




507527-01
4/2018
Supersedes 1/2015

PUREAIR™ AIR PURIFICATION SYSTEM PHOTOCATALYTIC OXIDATION (PCO) TECHNOLOGY

INSTALLATION INSTRUCTIONS FOR PUREAIR™ AIR PURIFICATION SYSTEM MODELS PCO3-14-16, PCO3-16-16 AND PCO3-20-16 BALLAST REPLACEMENT

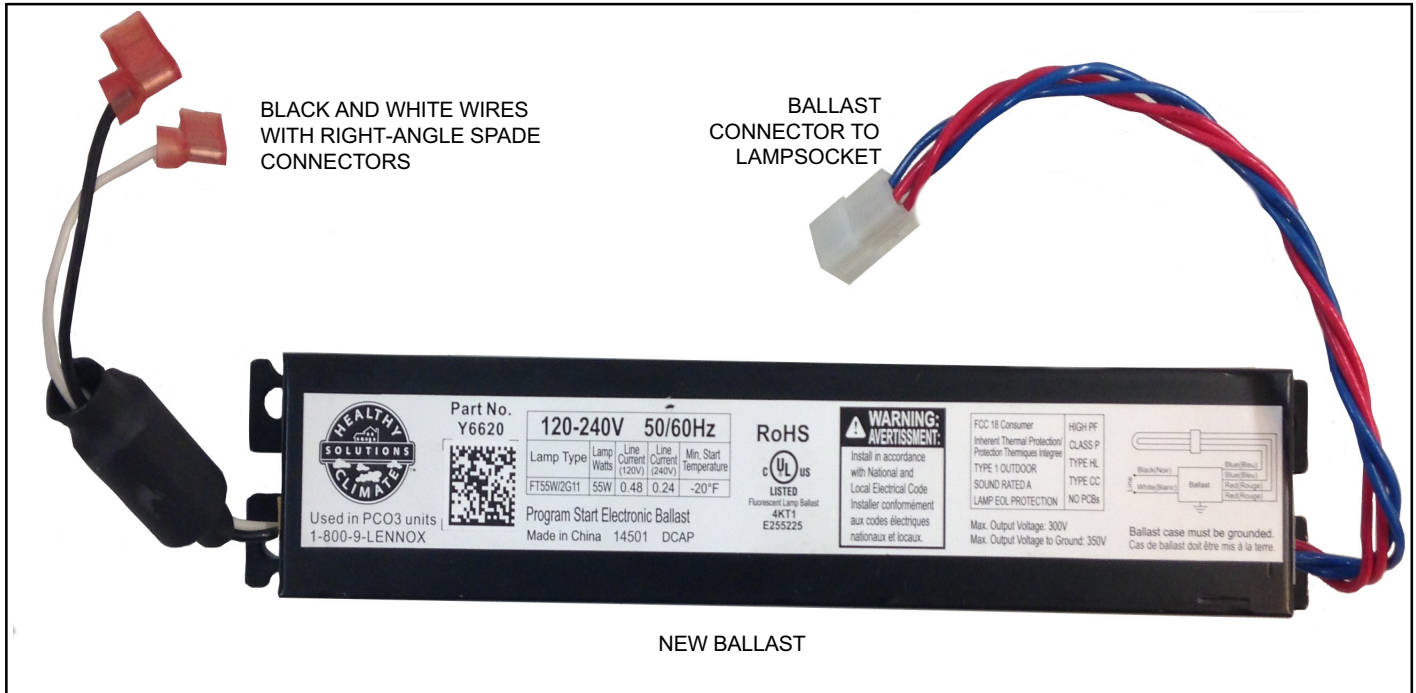

Shipping & Packing List

Assembled PureAir™ air purification system which includes:

- Ballast with connectors
- Installation instruction

Shipping Damage

Check equipment for shipping damage. If damage is found, immediately contact last carrier.

⚠️ WARNING

Risk of property damage, injury, or death.
Installation and service must be performed by a licensed professional installer (or equivalent) or a service agency.

⚠️ WARNING


Electric shock hazard.
Can cause injury or death.
Disconnect all electrical power supplies before servicing.
Access panels must be in place during appliance operation.

⚠️ CAUTION


Sharp edges hazard.
Sharp edges can cause injuries.
Use protective gloves when grasping equipment edges.

Installation


1. Disconnect AC power cord and remove access panel.
2. Rotate control panel out.

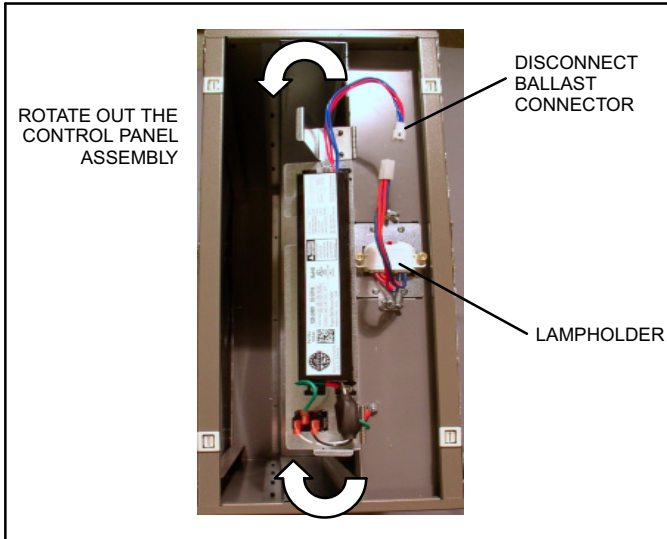

3. Disconnect the lampholder cable assembly from the ballast connector.
4. Disconnect the black and white wires with right-angle spade connectors from the power receptacle.

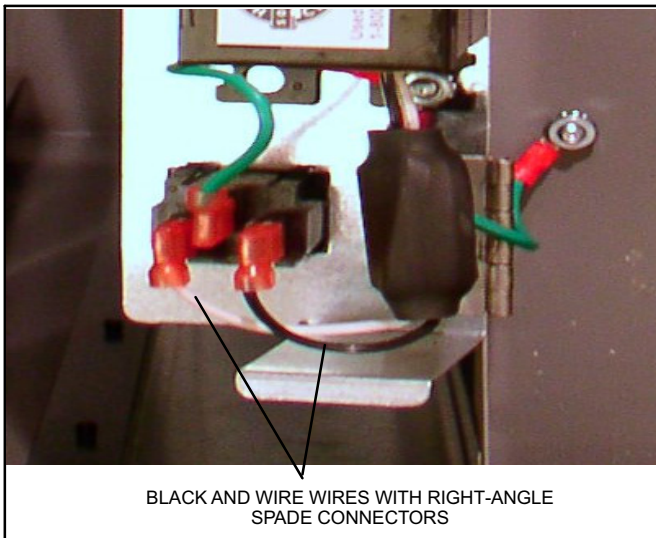

5. Using a 11/32" nut driver, remove the washer nut that is securing the ballast and two ground ring terminals (green) to the control panel.

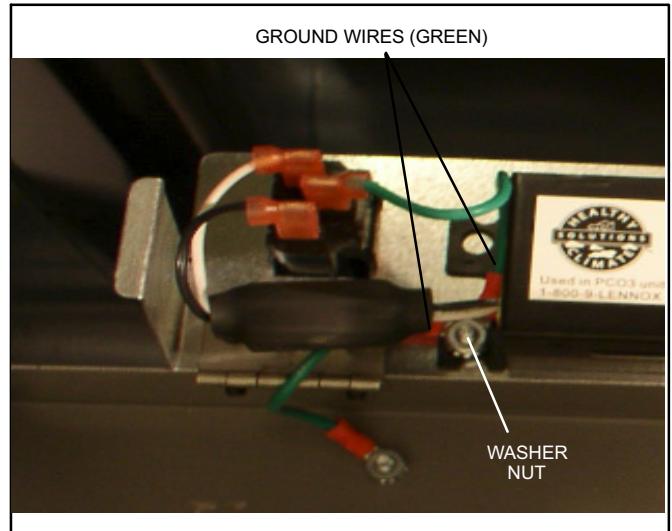

6. Slide the ballast out of the lancing.
7. Install the new ballast by sliding it into the lancing,
8. Secure both the ballast and the two ground ring terminals (green) to the control panel with the 11/32" washer nut removed earlier. **IMPORTANT:** Verify that both ground ring terminals are secure.
9. Connect the white and black wire with the right-angle spade connector from the ballast to the power receptacle.
10. Connect the lampholder cable assembly with the lamp ballast connector.
11. Close the control panel assembly and then re-install the access panel.
12. Reconnect the power cord and check the unit operations using the installation instruction (507477-01).
13. Dispose of the removed ballast in accordance with local codes.