



©2021

# GAS UNITS KITS & ACCESSORIES

507777-03  
01/2021

## REPLACEMENT HEAT EXCHANGER

### INSTALLATION INSTRUCTIONS FOR REPLACEMENT HEAT EXCHANGER KITS FOR USE WITH ML196UHE AND EL196UHE FURNACES

#### **⚠ WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional installer (or equivalent), service agency or the gas supplier.

#### **⚠ WARNING**

Disconnect power before servicing unit.

#### Shipping and Packing List

##### Package 1 of 1 contains:

- 1 - Heat exchanger assembly
- 1 - Condensate trap parts bag
- 1 - Pressure Switch (Provided in 20L52 only)

#### **⚠ CAUTION**

As with any mechanical equipment, personal injury can result from contact with sharp sheet metal edges. Be careful when you handle this equipment.

#### Installation - Upflow / Horizontal Furnaces

Refer to figure 1 as you disassemble the unit. See table 1 for unit capacity and matching kit. Place papers or protective covering in front of the furnace before removing the heat exchanger assembly.

TABLE 1

Model	Cat. No.	Kit
EL/ML196UH030XE36B	614580-01	12Y77
EL/ML196UH045XE36B	614580-63	16H67
EL/ML196UH070XE36B	614580-75	20L52*
ML196UH070XE48B	614580-75	20L52*
ML196UH090XE36C	614580-76	20L96
EL/ML196UH090XE48C	614580-67	16U74
ML196UH090XE60C	614580-76	20L96
EL/ML196UH110XE60C	614580-69	16U76
ML196UH135XE60D	614580-77	20L99

\* Pressure switch provided in 20L52 is only applicable for altitudes 0-4500'. A high altitude kit must be ordered for installation greater than 4500'.

- 1 - Turn off electrical and gas supplies to the furnace.
- 2 - Remove the furnace access panels.
- 3 - Disconnect the wires from the gas valve.
- 4 - Remove gas supply line connected to gas valve.
- 5 - Remove the burner box cover (if equipped) and remove gas valve/manifold assembly.
- 6 - Remove sensor wire from sensor. Disconnect 2-pin plug from the ignitor.
- 7 - Disconnect wires from flame roll-out switches. On some models, disconnect ground wire from burner box mounting lug.
- 8 - Disconnect combustion air intake pipe. It may be necessary to cut the existing pipe to remove burner box assembly.
- 9 - Remove four burner box screws at the vestibule panel and remove burner box. Set burner box assembly aside.  
**NOTE** - If necessary, clean burners at this time. Follow procedures outlined in Burner Cleaning section.
- 10 - Loosen the clamps to the flexible exhaust coupling.
- 11 - Disconnect condensate drain line from the cold end header box.
- 12 - Disconnect condensate drain tubing from flue collar and cold end header box (tubing will be re-used, set aside). Remove screws that secures the flue collar into place. Remove flue collar. It may be necessary to cut the exiting exhaust pipe for removal of the fitting.
- 13 - Mark and disconnect all combustion air pressure tubing from cold end header collector box.
- 14 - Mark and remove wires from pressure switch assembly. Remove the assembly. Keep tubing attached to the pressure switch.
- 15 - Disconnect the plug from the combustion air inducer. Remove two screws which secure combustion air inducer to collector box. Remove combustion air inducer assembly.
- 16 - Remove electrical junction box from the side of the furnace.
- 17 - Mark and disconnect any remaining wiring to heating compartment components. Disengage strain relief bushing and pull wiring and bushing through the hole in the blower deck.



- 18 - Remove the primary limit from the vestibule panel.
- 19 - Remove two screws from the front cabinet flange at the blower deck.
- 20 - Remove screws along vestibule sides and bottom which secure vestibule panel and heat exchanger assembly to cabinet. Remove two screws from blower rail which secure bottom heat exchanger flange. Spread cabinet sides slightly to allow clearance for removal of heat exchanger. Remove heat exchanger from furnace cabinet.
- 21 - Remove indoor blower from the furnace.
- 22 - Install replacement heat exchanger into the cabinet..
- 23 - Secure Heat exchanger to the blower deck using two #8 screws through blower deck first. See figure 2.
- 24 - Re-secure the supporting screws along the vestibule sides and bottom to the cabinet.
- 25 - Reinstall cabinet screws on front flange at blower deck.
- 26 - Reinstall the primary limit on the vestibule panel.
- 27 - Route heating component wiring through hole in blower deck and reinsert strain relief bushing.
- 28 - Reinstall electrical junction box.
- 29 - Reinstall the combustion air inducer. Reconnect the plug to the wire harness.
- 30 - Reinstall pressure switches and reconnect pressure switch wiring. *The pressure switch may be need to be replaced with provided switch in kit. See packing list and table 1 for applicable models.*
- 31 - Carefully connect combustion air pressure switch tubing from pressure switches to proper ports on cold end header collector box.
- 32 - Reconnect condensate drain line to the cold end header box.
- 33 - Use securing screws to reinstall flue collar to the top cap on the furnace. Reconnect exhaust piping and exhaust drain tubing to flue collar and cold end header box.
- 34 - Replace flexible exhaust adapter on combustion air inducer and flue collar. Secure using two existing hose clamps.
- 35 - Reinstall burner box assembly in vestibule area. Secure burner box assembly to vestibule panel using four existing screws. **Make sure burners line up with center of heat exchanger inlets.**
- 36 - Reconnect flame roll-out switch wires. If removed from step 6, reconnect the ground wire to the burner box mounting lug.
- 37 - Reconnect sensor wire and reconnect 2-pin plug from ignitor.
- 38 - Reinstall gas valve manifold assembly. Reconnect gas supply line to gas valve.
- 39 - Reconnect the combustion air intake pipe.
- 40 - Reinstall burner box cover (if equipped).
- 41 - Reconnect wires to gas valve.
- 42 - Replace the blower compartment access panel.
- 43 - Reconnect gas supply piping. Turn on power and gas supply to unit.


- 44 - Follow lighting instructions on unit nameplate to light and operate furnace for 5 minutes to ensure the furnace is operating properly.
- 45 - Check all piping connections, factory and field, for gas leaks. Use a leak detecting solution or other preferred means.
- 46 - Replace heating compartment access panel.

## CAUTION


Some soaps used for leak detection are corrosive to certain metals. Carefully rinse piping thoroughly after leak test has been completed. Do not use matches, candles, flame or other sources of ignition to check for gas leaks.

### Cleaning the Burner Assembly (if needed)

- 1 - Turn off electrical and gas power supplies to furnace. Remove upper and lower furnace access panels.
- 2 - Disconnect the wires from the gas valve.
- 3 - Remove the burner box cover (if equipped).
- 4 - Mark and disconnect sensor wire from the sensor and disconnect the 2-pin plug to the igniter. Disconnect wires from flame rollout switches.
- 5 - Disconnect the gas supply line from the gas valve. Remove gas valve/manifold assembly.
- 6 - Disconnect combustion air intake pipe. It may be necessary to cut the existing pipe to remove burner box assembly.
- 7 - Remove four screws which secure burner box assembly to vest panel. Remove burner box from the unit.
- 8 - Use the soft brush attachment on a vacuum cleaner to gently clean the face of the burners. Visually inspect the inside of the burners and crossovers for any blockage caused by foreign matter. Remove any blockage.
- 9 - Reinstall the burner box assembly using the existing four screws. Make sure that the burners line with center of heat exchanger inlets.
- 10 - Reinstall the gas valve manifold assembly. Reconnect the gas supply line to the gas valve.
- 11 - Reconnect the sensor wire and reconnect the 2-pin plug to the ignitor wiring harness. Reconnect wires to flame rollout switches.
- 12 - Reinstall the burner box cover (if equipped).
- 13 - Reconnect wires to gas valve.
- 14 - Replace the blower compartment access panel.
- 15 - Refer to instruction on verifying gas and electrical connections when re-establishing supplies.
- 16 - Follow lighting instructions to light and operate furnace for 5 minutes to ensure that heat exchanger is clean and dry and that furnace is operating properly.
- 17 - Replace heating compartment access panel.

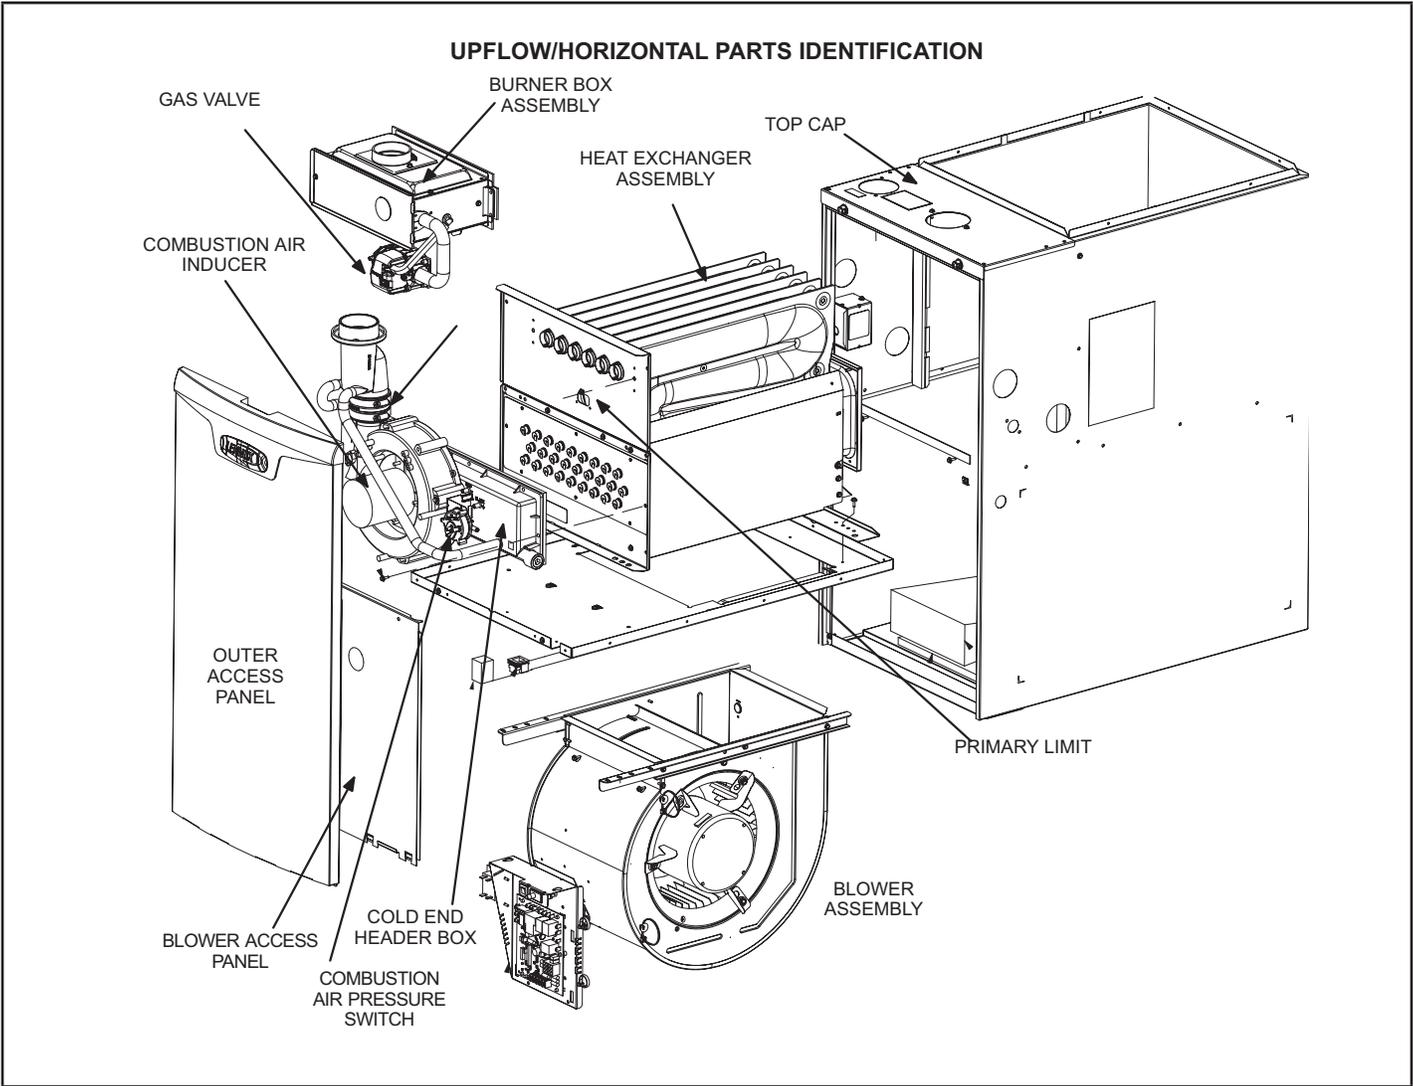

**Figure 1**

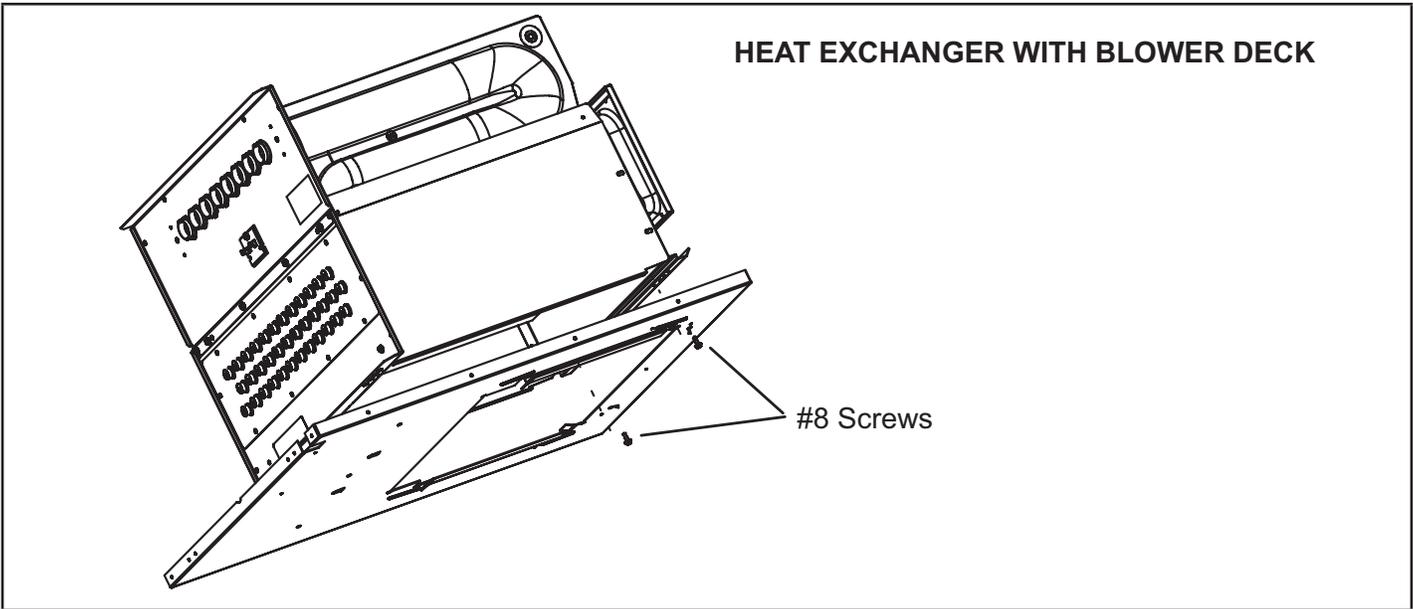

**Figure 2**