

# GAS UNITS KITS & ACCESSORIES

507852-01  
06/ 2018

## Primary Limit Replacement

### INSTALLATION INSTRUCTIONS FOR PRIMARY LIMIT KIT 617344-01 / -07 USED ON ULTRA LOW NOX 90% EFFICIENT FURNACES

#### **⚠ WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier

#### Shipping and Packing List

Package 1 of 1 contains:

1 - Primary limit

#### Application

Use the primary limit kit to replace the primary limit on low nox 90% efficiency gas furnaces.

#### **⚠ CAUTION**

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

#### Installation

#### **⚠ WARNING**

Electric shock hazard. Can cause injury or death. Before attempting to perform any service or maintenance, turn the electrical power to unit OFF at disconnect switch(es). Unit may have multiple power supplies.

Follow the steps below and figure 1 for primary limit replacement.

- 1 - Turn all power off to the unit.
- 2 - Remove furnace panel.
- 3 - Remove existing limit and disconnect wires.
- 4 - Reconnect wires to replacement limit and insert into limit hole on vest panel.

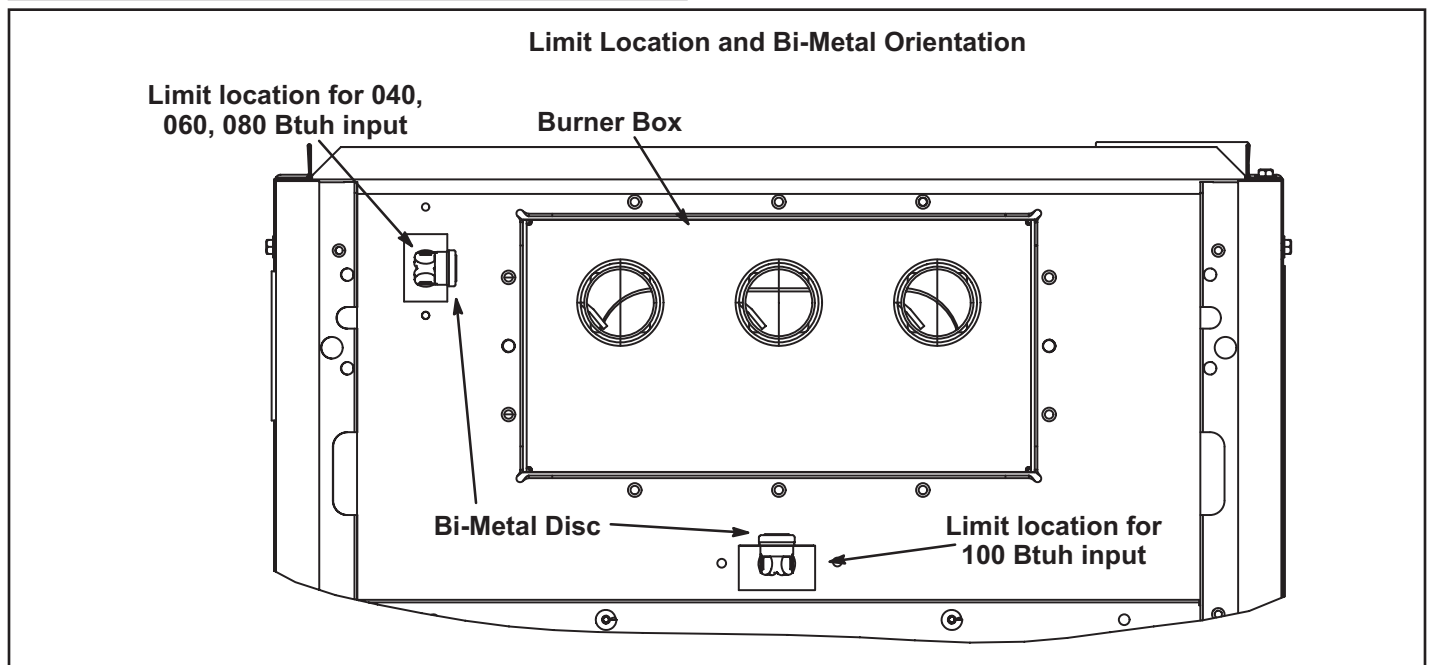


Figure 1