# ROOFTOP UNIT KITS AND ACCESSORIES

507989-02 4/2021 Supersedes 507989-01

# BLOWER ASSEMBLY REPLACEMENT KIT

## INSTALLATION INSTRUCTIONS FOR BLOWER ASSEMBLY REPLACEMENT KIT USED WITH SGH/SCH036 & 060 UNITS

#### **Shipping and Packing List**

#### Package 1 of 1 contains:

- 1- Blower assembly
- 1- Control harness (22J23 & 24 only)

### **AWARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier

#### **Application**

The blower assembly replacement kit is used on SGH/SCH036 & 060 units. See table 1.

#### **TABLE 1**

| Cat. No. | Assembly No. | Voltage |
|----------|--------------|---------|
| 19H45    | 621156-01    | Υ       |
| 19H46    | 621156-02    | G, J    |
| 19H47*   | 621156-03    | Y       |
| 19H48*   | 621156-04    | G, J    |
| 22J23    | 621156-07    | G, J    |
| 22J24*   | 621156-08    | G, J    |

<sup>\*</sup>Corrosion protection

Kit Adapter Control Harness -

Use the kit harness and make the 9-pin control harness connection in the blower compartment on older model SGH/SCH units. Discard the kit harness when the control connector (J335 or Modbus harness) is located in the blower compartment. See figure 2.

#### Installation

- 1- Disconnect electrical power to unit. Wait five minutes before continuing service procedures to avoid electrical shock. This will allow internal capacitors time to fully discharge.
- 2- Open access panels as shown in figure 1.

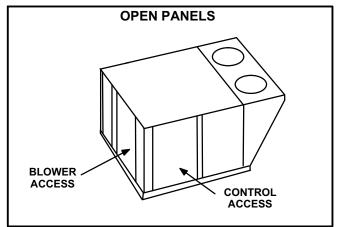


FIGURE 1


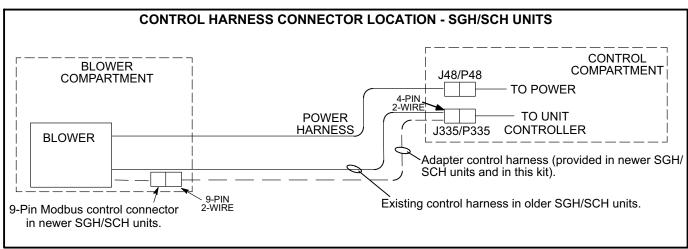


FIGURE 2

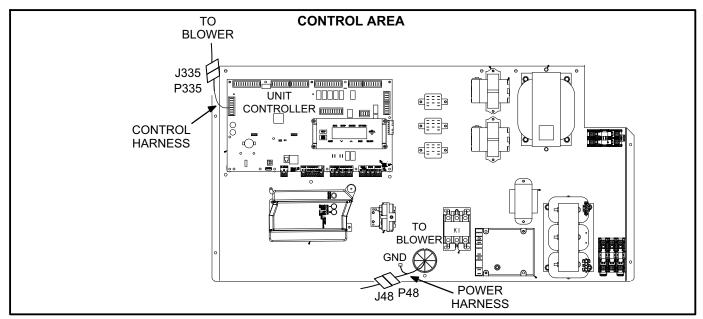

#### FIGURE 3

## **ACAUTION**

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

- 3- Disconnect J48 from P48 in the controls area and unscrew the GND terminal from the control panel. See figure 3.
- 4- Older SGH/SCH Units -

Disconnect J335 from P335 control connectors located in the control box.

Newer SGH/SCH Units -

Disconnect the Modbus 9-pin blower control plug located in the blower area.

Note - The top panel may need to be raised to pull the control harness through the convoluted tubing in between the blower and controls section.

- 5- Remove four screws securing blower assembly to unit. See figure 4.
- 6- If unit was equipped with a blower proving switch, remove switch from existing blower housing. Attach the proving switch to replacement housing in the same manner it was removed.

- 7- Use the handle on the blower assembly to slide the assembly out of unit.
- 8- Install replacement blower assembly flanges into rails on the blower deck in the same manner it was removed. Secure into place using four screws shown in figure 4.
- 9- Uncoil P48 power harness and Modbus control harnesses secured to replacement blower assembly. See figure 5.
- 10- Route P48 harness through unit to control area in the same manner as they were removed. Connect P48 to J48 and screw GND terminal to control panel as shown in figure 3.
- 11- Older SGH/SCH Units -

Locate harness provided in the kit and connect the 9-pin plug to the blower Modbus/P335 control harness. Route the J335 end of the harness through the unit to the control area in the same manner it was removed. Connect J335 to P335.

#### Newer SGH/SCH Units -

Discard the kit harness. Connect the Modbus plug in the blower area to the blower motor 9-pin control plug.

12- Bundle harnesses and use wire ties to secure kit harnesses to unit harnesses in the same manner they were removed.

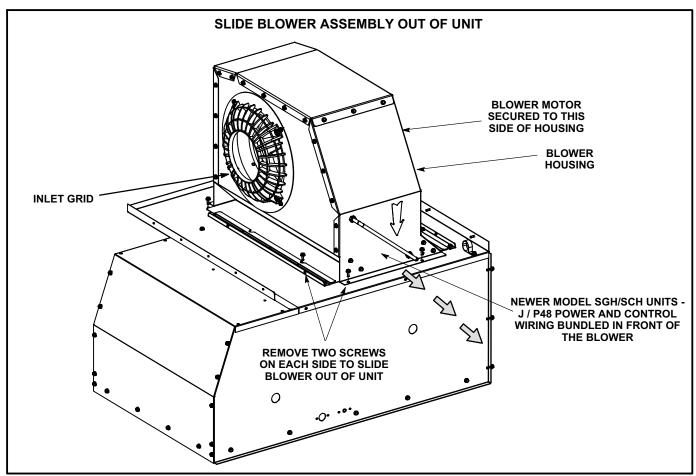


FIGURE 4

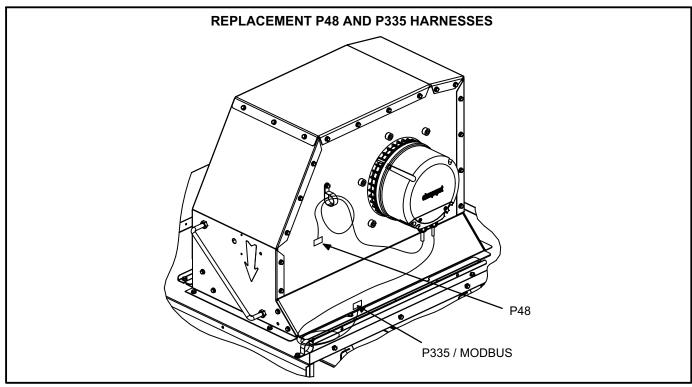


FIGURE 5