

| | |
|---|---|
| 43W47 | INSTALLATION INSTRUCTIONS |
| KITS COMMON TO COOLING AND HEAT PUMP EQUIPMENT | COIL GUARDS FOR LGA/LCA/LAA/LGC 248, 300H AND SCA/SGA 240, SCB/SGB 288 |

APPLICATION

The Coil Guard (43W47) is designed to prevent damage to the condenser coil of the HVAC unit. The following parts are included in the package:

SHIPPING AND PACKING LIST

- 1 ea. - Coil Guard
- 1 ea. - Hardware Package
 - 1 ea - Installation Instructions
 - 6 ea - #10-1/2" Self Drilling Screws

CAUTION

WHEN INSTALLING GUARD, USE CARE TO NOT PUNCTURE CONDENSER COIL

INSTALLATION

STEP 1:

Center Coil Guard over condenser coil and align holes in sides of coil guard to the holes on the rooftop unit. Secure coil guard to the rooftop unit using the supplied screws. Do not remove screws that fall inside slots on both left and right sides. See Figure 1.

NOTE: To avoid coil damage, never use screws longer than 1/2".

 
 
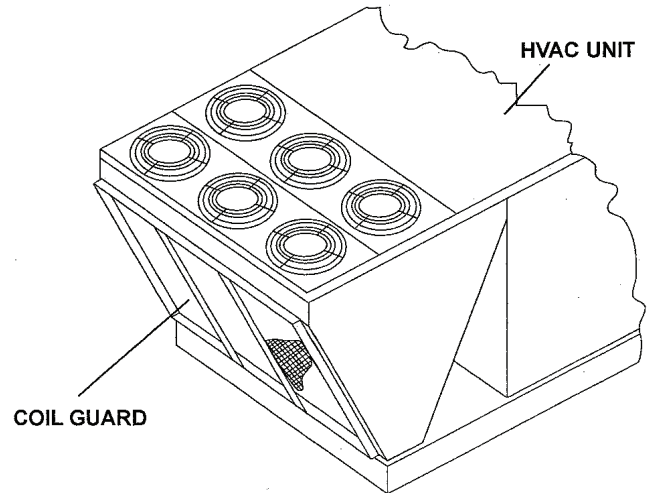 


FIGURE 1

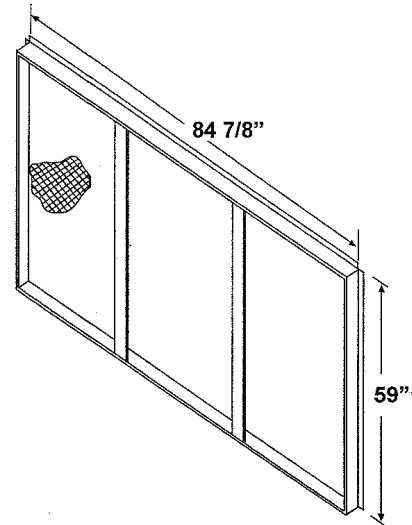

SIDE DETAIL

SLOT DETAIL

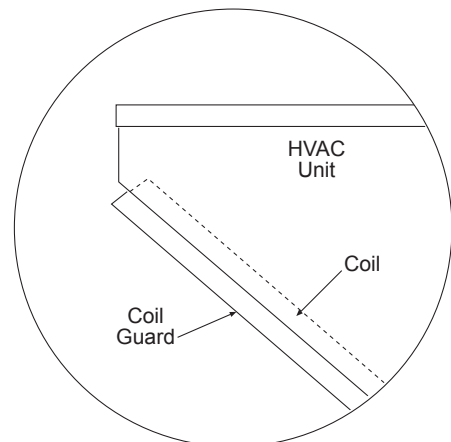