



©2016 Lennox Industries Inc.
Dallas, Texas, USA



INSTALLATION INSTRUCTION

VMDA Medium-Static Units

VRF SYSTEMS -- Indoor Units
507446-03
01/2016

THIS MANUAL MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE

These instructions are intended as a general guide and do not supersede local codes in any way. Consult authorities having jurisdiction before installation.

IMPORTANT!
The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFCs, HCFCs and HFCs) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for noncompliance. These units must be installed as a part of a matched system as specified in the Product Specifications (EHB) bulletin.

⚠ WARNING
Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer, service agency or the gas supplier. Failure to follow safety warnings and these instructions exactly could result in property damage, dangerous operation, serious injury, or death. Any additions, changes, or conversions required in order for the appliance to satisfactorily meet the application needs must be made by a licensed professional HVAC installer (or equivalent) using factory-specified parts. Do not use this system if any part has been under water. A flood-damaged appliance is extremely dangerous. Immediately call a licensed professional HVAC service technician (or equivalent) to inspect the system and to replace all controls and electrical parts that have been wet, or to replace the system, if deemed necessary. The State of California has determined that this product may contain or produce a chemical or chemicals, in very low doses, which may cause serious illness or death. It may also cause cancer, birth defects, or reproductive harm.

General
The VMDA medium-static ducted indoor units are matched with an outdoor heat recovery or heat pump unit to create a VRF (variable refrigerant flow) system that uses HFC-410A refrigerant. Refer to the Product Specification bulletin (EHB) for the proper use of these indoor units with specific heat pumps, heat recovery units, mode switching devices, branch pipes, line sets and controls. These instructions are intended as a general guide and do not supersede local or national codes in any way. Authorities having jurisdiction should be consulted before installation.

Shipping and Packing List
Check the components for shipping damage. If you find any damage, immediately contact the last carrier. Package 1 of 1 contains the following:
1 - Assembled medium static, ducted unit
2 - Condensate drain insulation sleeves
1 - Flexible condensate connector
1 - Hose clamp
1 - Brass flare nut
1 - Resistor
1 - Cable
1 - Installation manual

⚠ CAUTION
As with any mechanical equipment, personal injury can result from contact with sharp sheet metal edges. Be careful when you handle this equipment.

Safety Requirements

⚠ WARNING

ELECTRICAL SHOCK, FIRE, OR EXPLOSION HAZARD.


Do not touch the unit or the controller if your hands are wet.

DO NOT spray water on the indoor unit for any reason.


Do not replace a fuse with a fuse of a different rating. Do not use a jumper wire to replace a fuse. Do not insert your hands, tools or any other item into the air intake or air outlet at either the indoor or outdoor unit.

Do not allow children to operate the system.

Model Number Identification

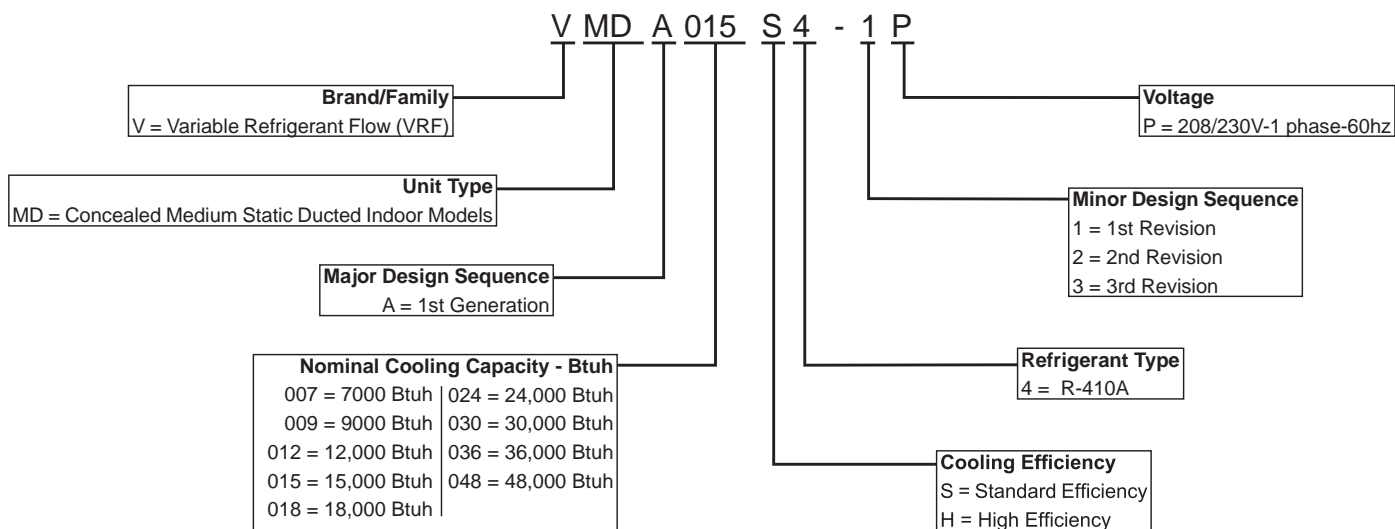


Unit Dimensions - Inches (mm) - Standard Efficiency

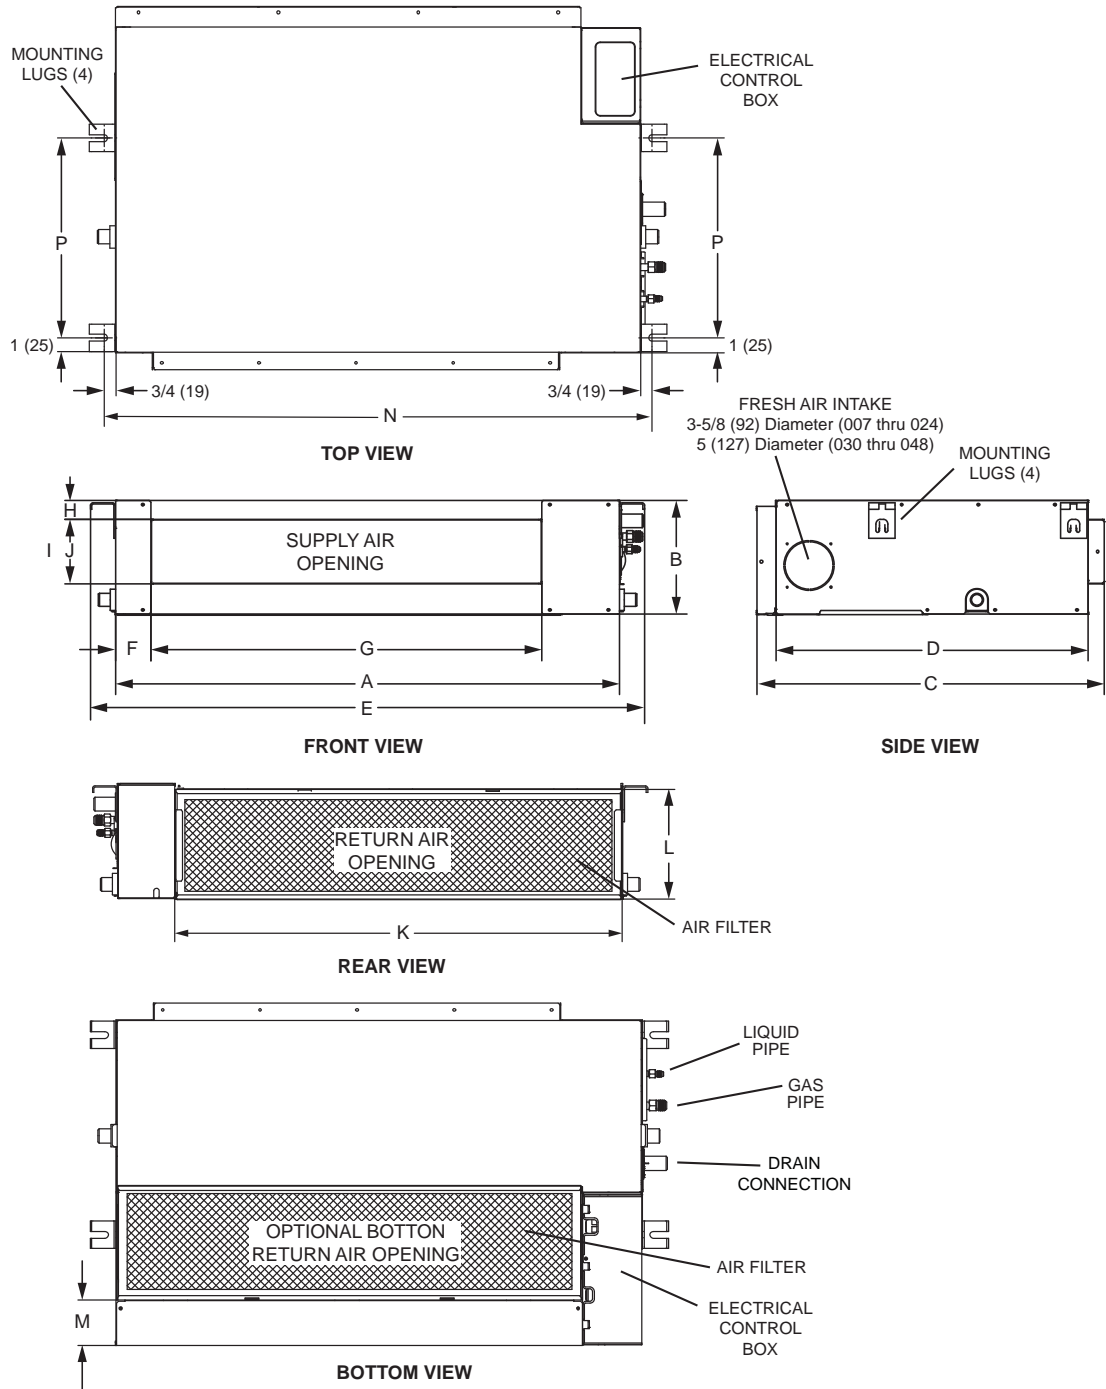

Size	A		B		C		D		E		F		G		H	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
007 thru 012S4	27-5/8	702	8-1/4	210	25	635	22-1/2	572	31-1/8	791	2-5/8	67	19-1/2	495	1-3/8	35
015 thru 018S4	36-1/4	921	8-1/4	210	25	635	22-1/2	572	39-3/4	1010	2-5/8	67	28	711	1-3/8	35
024S4	36-1/4	921	10-5/8	270	25	635	22-1/2	572	39-3/4	1010	2-5/8	67	28	711	1-3/8	35
030 thru 036S4	44-7/8	1140	10-5/8	270	30-1/2	775	28	711	48-1/2	1232	2-5/8	67	36-3/4	933	1-3/8	35
048S4	47-1/4	1200	11-7/8	302	34-1/8	867	31-1/2	800	50-3/4	1289	3-1/8	79	38-1/8	968	1-1/2	38

Size	J		K		L		M		N		P	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
007 thru 012S4	4-5/8	117	23-1/2	597	7-7/8	200	3-1/8	79	29-1/8	740	13-3/4	349
015 thru 018S4	4-5/8	117	32	813	7-7/8	200	3-1/8	79	37-3/4	959	13-3/4	349
024S4	7	178	32	813	10-1/4	260	3/4	19	37-3/4	959	13-3/4	349
030 thru 036S4	7	178	40-3/4	1035	10-1/4	260	3/4	19	46-1/2	1181	19-1/4	489
048S4	8	203	43	1092	11-3/8	289	1-3/4	44	48-7/8	1241	19-5/8	498


Unit Dimensions - Inches (mm) - High Efficiency

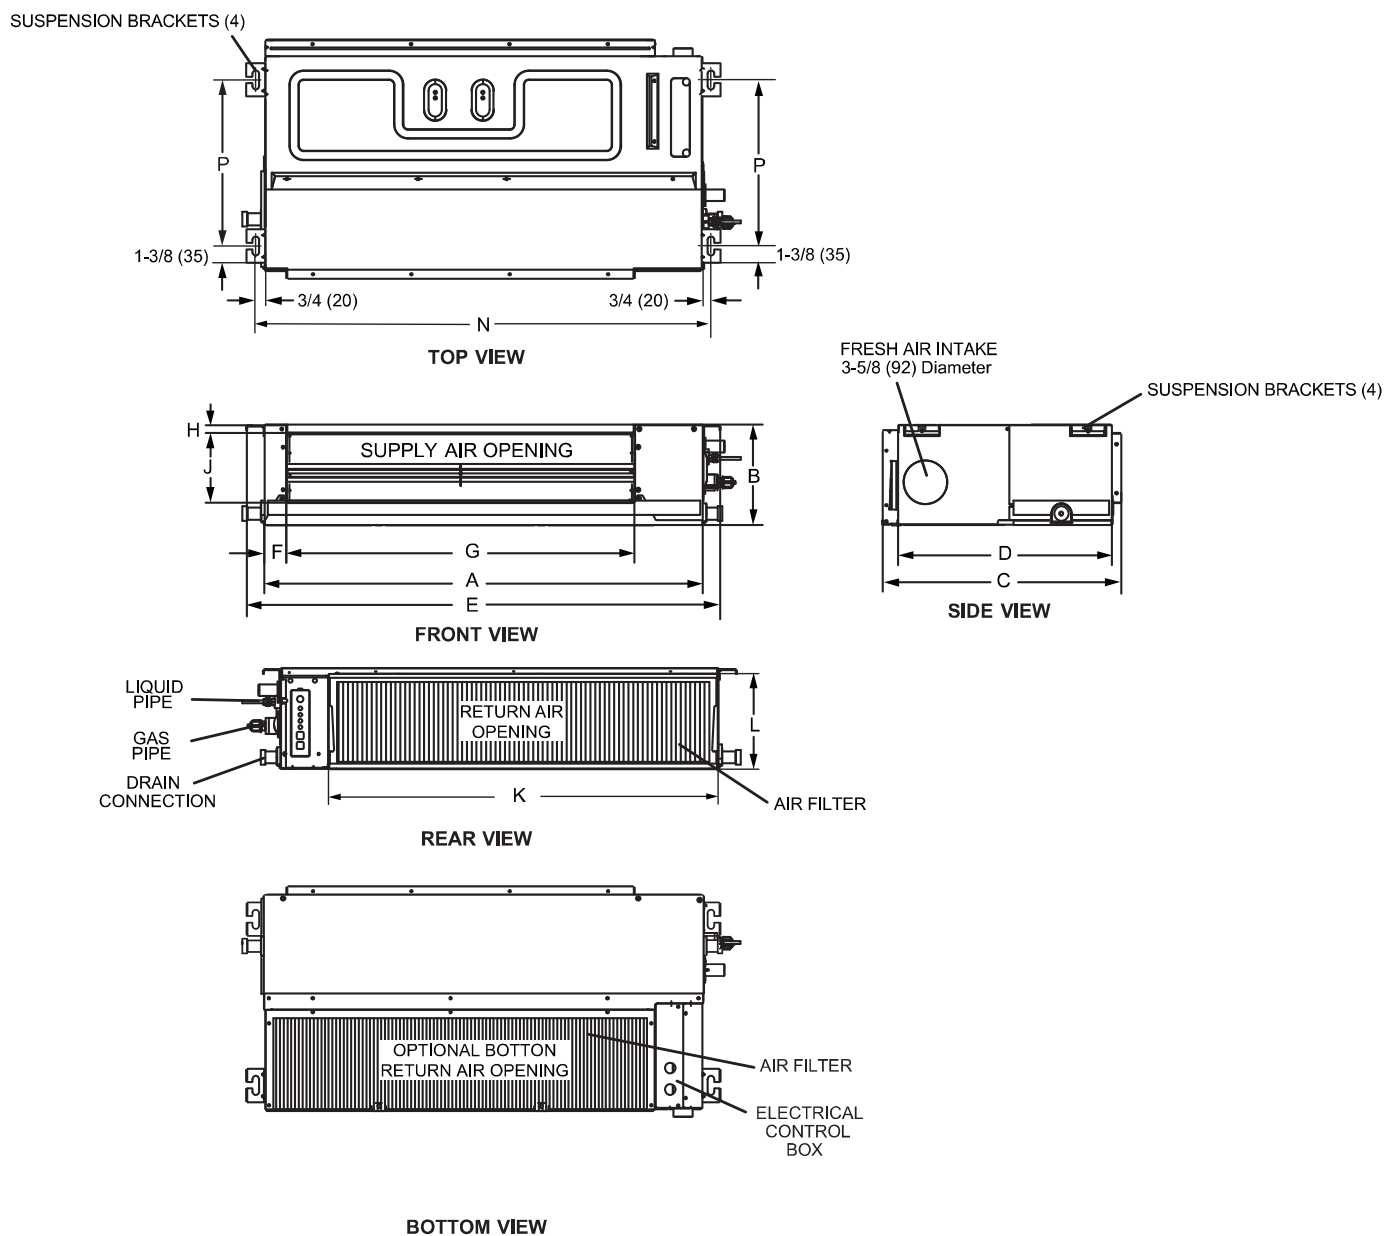

Size	A		B		C		D		E		F		G		H	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
007 thru 012	36-1/4	920	8-1/4	210	19-3/4	500	17-3/4	450	39-1/4	1000	1-1/4	45	28-3/4	732	5/8	17

Size	J		K		L		N		P	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
007 thru 012	5-3/4	145	32-1/4	820	7-7/8	200	37-3/4	960	13-3/4	350

Unit Dimensions - Inches (mm) - High Efficiency

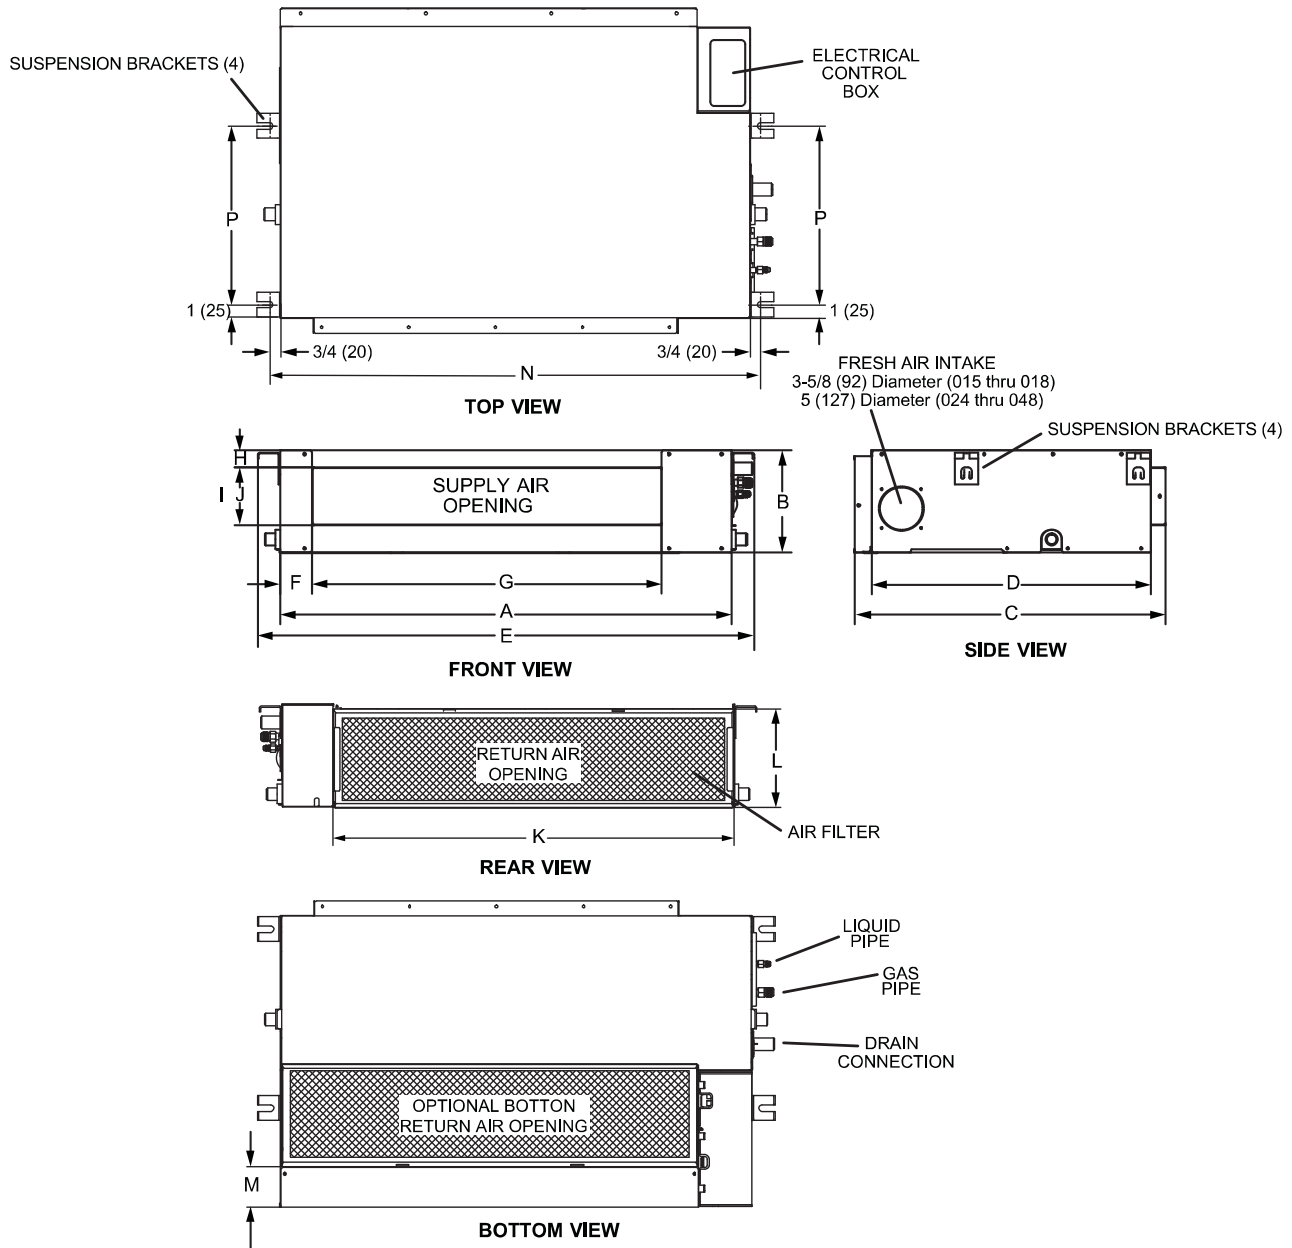

Size	A		B		C		D		E		F		G		H	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
015 thru 018	36-1/4	921	10-5/8	270	25	635	22-1/2	572	39-3/4	1010	2-5/8	67	28	711	1-3/8	35
024 thru 030	44-7/8	1140	10-5/8	270	30-1/2	775	28	711	48-1/2	1232	2-5/8	67	36-3/4	933	1-3/8	35
036 thru 048	47-1/4	1200	11-7/8	302	34-1/8	867	31-1/2	800	50-3/4	1289	3-1/8	79	38-1/8	968	1-1/2	38

Size	J		K		L		M		N		P	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
015 thru 018	7	178	32	813	10-1/4	260	3/4	19	37-3/4	959	13-3/4	349
024 thru 030	7	178	40-3/4	1035	10-1/4	260	3/4	19	46-1/2	1181	19-1/4	489
036 thru 048	8	203	43	1092	11-3/8	289	1-3/4	44	48-7/8	1241	19-5/8	498

Clearances

Refer to figure 1 for minimum clearance requirements.

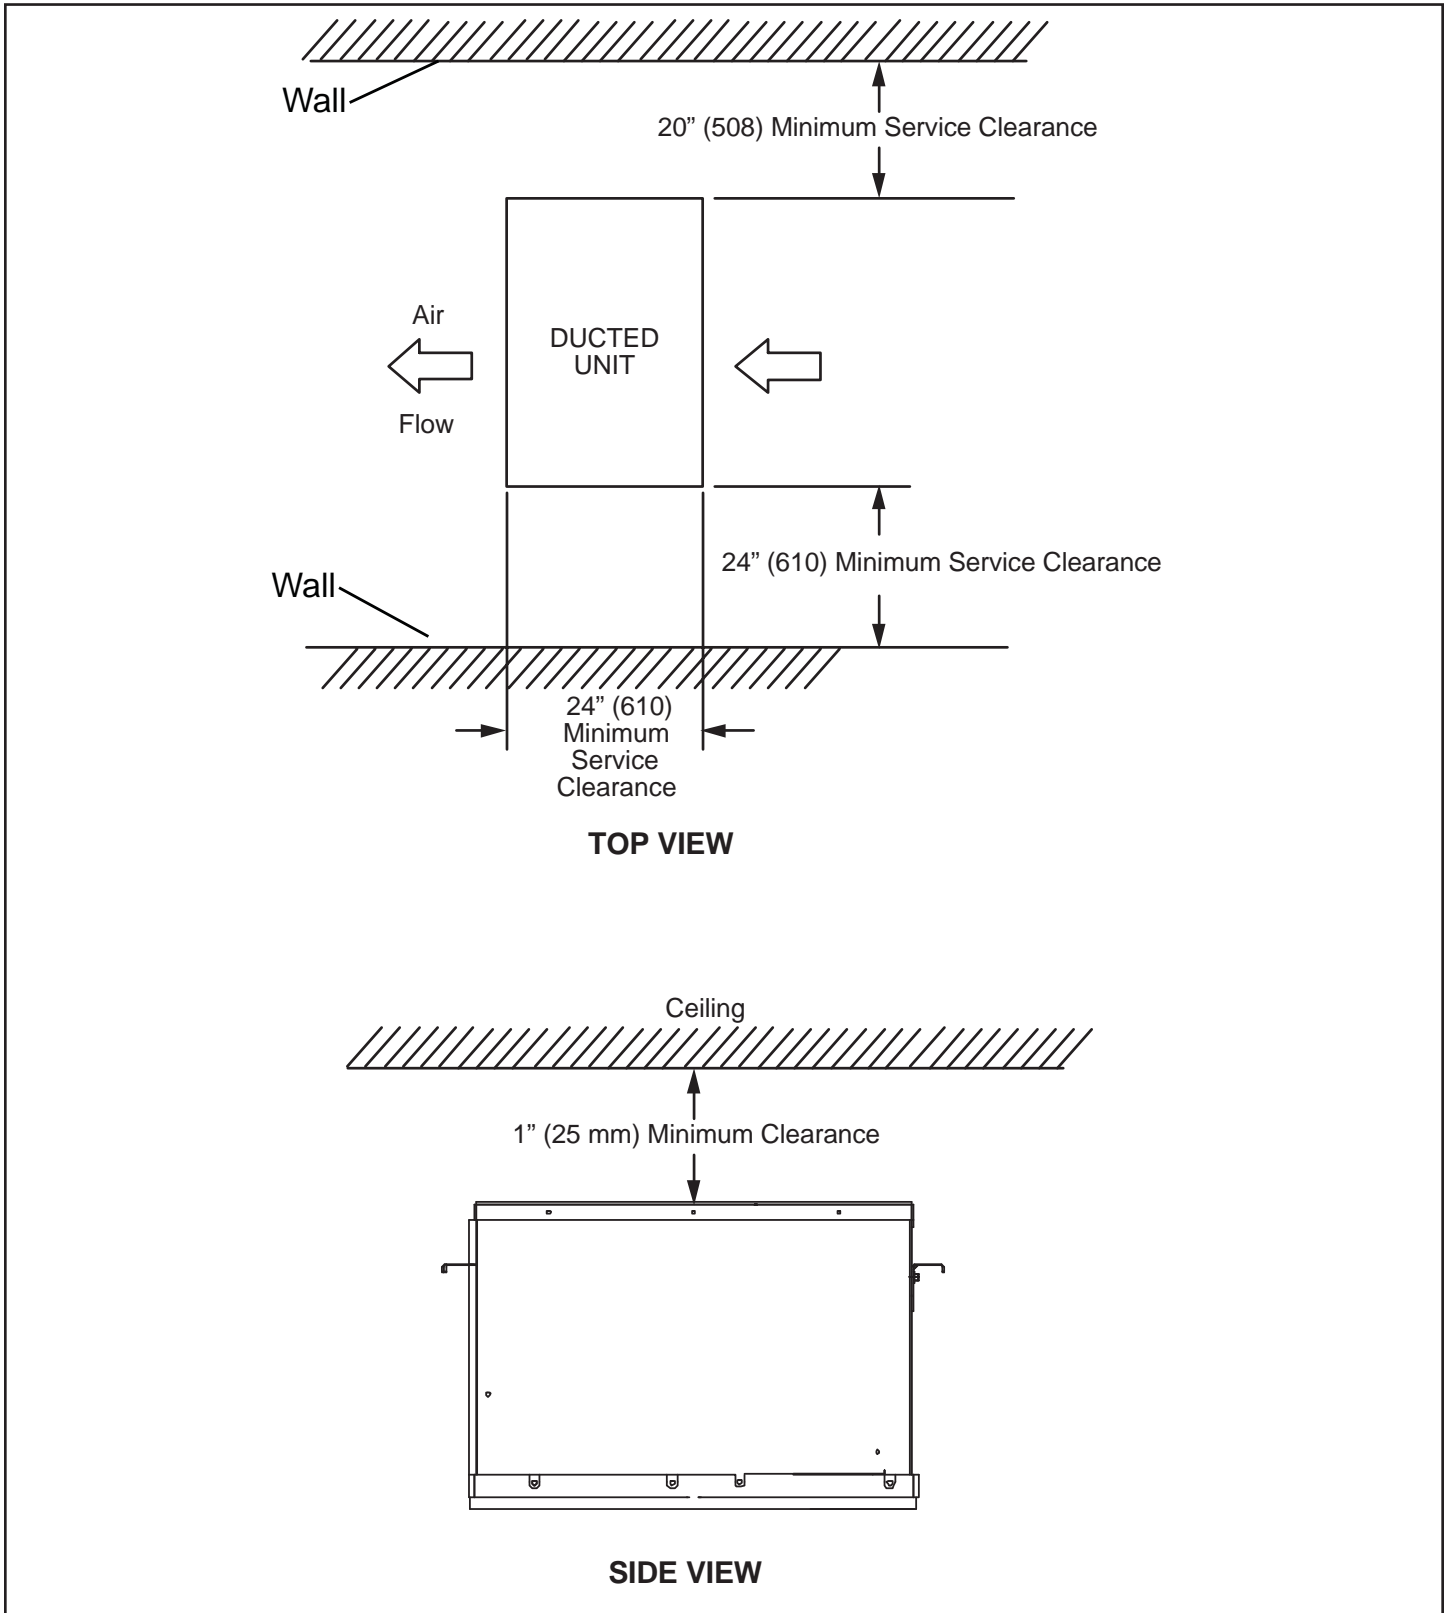


Figure 1. Minimum Installation Clearances

Unit Placement

In addition to clearances, the following items should be considered:

⚠ WARNING

Use the provided and specified components when installing equipment. Failure to do so may result in unit falling, water leaking or electrical shocks, causing personal injury or equipment or property damage. Check stability of wall, floor, or ceiling and unit support. If support is not capable of carrying weight of the unit, unit may fall causing personal injury or equipment damage.

Consider the possibility of earthquakes in your area when installing the equipment. If the unit is not correctly secured, it may fall, causing personal injury or equipment damage.

Safely dispose of packing materials, which include nails, wood and other sharp objects, as well as plastic wrapping. Children playing with plastic wrap or bags risk the danger of suffocation.

AVOID

Do not install the unit in the following locations:

- Areas exposed to petrochemicals or petrochemical products
- Areas exposed to salt or other corrosive materials or caustic gasses
- Areas exposed to extreme voltage variations (such as factories)

⚠ CAUTION

Do not place items which may be damaged by water under or around the indoor unit.

The unit should be installed at least 8 feet above the floor (if possible) to ensure maximum performance and comfort, when installed in the horizontal position only.

- Tightly enclosed areas that may impede service of the unit
- Areas exposed to fossil fuels (such as oil or gas in kitchens)
- Areas exposed to strong electromagnetic forces
- Areas exposed to acids or alkaline detergents (laundry rooms)

DO:

- Locate the unit so that it is not exposed to direct sunlight
- Ensure the structural ceiling can support the weight of the unit.
- Select a location where condensate line will have the shortest run to a suitable drain per local codes.
- Allow sufficient space around unit for proper operation and maintenance
- Install unit a minimum of 3 feet away from any antenna, power cord (line) radio, telephone, security system, or intercom. Electrical interference and radio frequencies from any of these sources may affect operation
- Be sure to instruct customers how to properly operate the unit (especially maintenance of air filter, and operation procedure) by having them carry out operations themselves while looking at the manual provided with the controller.

Installation

1. Make sure that the structural ceiling or slab is able to support the weight of the indoor unit. It may be necessary to add extra support.
2. Install suspension rods in the structural ceiling or concrete slab in a suitable location. If the structural ceiling is constructed of concrete, install anchors to accept four $\frac{3}{8}$ " threaded rods to suspend the indoor unit. If the structural ceiling includes wooden joists, use angle iron or Unistrut channel fixed securely in place to accept the $\frac{3}{8}$ " threaded rods. See figure 2.

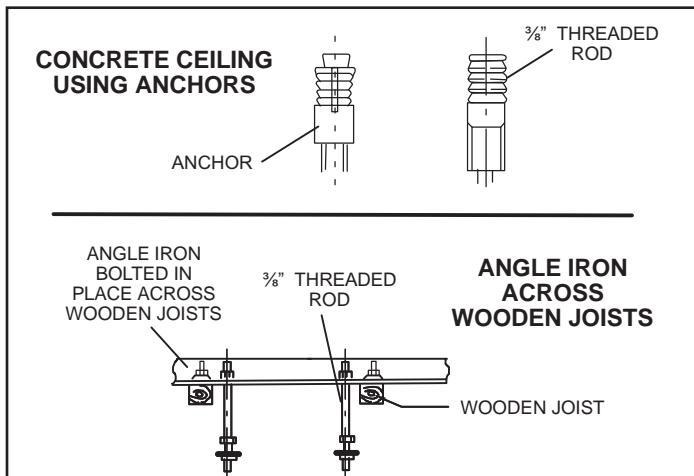


Figure 2. Suspending Methods

3. Slide one nut and one washer onto each threaded rod. Use electrical tape to keep the washer from falling off. Position the nuts slightly above the final resting place of the four suspension brackets. See figure 2.
4. Use either a mechanical lifting device or a minimum of two people to raise the unit and insert the threaded rods into the suspension brackets on the cassette base. Slide a washer and then a nut onto each rod below each suspension bracket. Use the leveling nut (beneath suspension bracket) to adjust the unit to the correct height. Remove the electrical tape holding the upper washers and nuts in place and tighten each of the four nuts above the brackets down onto the brackets. This will ensure that the unit remains level.

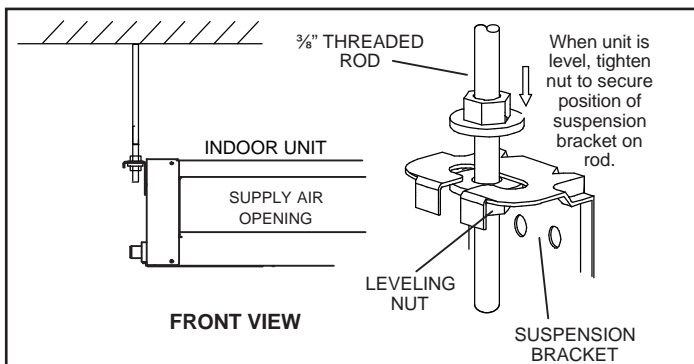


Figure 3. Suspension Hardware

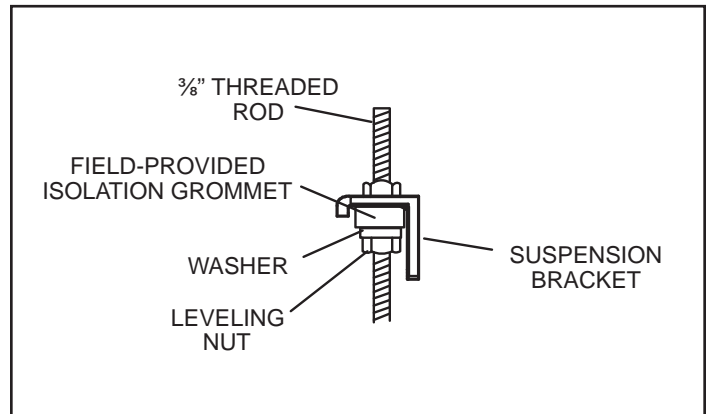



Figure 4. Isolation Grommet

5. If necessary, install a field-provided isolation grommet as shown in figure 4 to prevent transmission of vibration from unit to structural ceiling.
6. If the unit is being installed in an application that includes a sheet rock (plasterboard) ceiling, it is recommended to install an access panel in a suitable location to allow final connection of the refrigerant piping, condensate line and electrical connections. This will also allow access for future maintenance.
7. The unit is factory-configured for the supply air to be delivered from the front and the return air filter at the rear of the unit. The return air filter location can be relocated in the field for bottom return air filter access, if more convenient. See figure 5.


INSTALLATION GUIDELINES

- Install a field-provided isolation grommet as shown in figure 4 to prevent transmission of vibration from unit to structural ceiling.
- Provide separate support for the weight of the duct system. Duct system must not be supported by the indoor unit.
- Use flexible joints (canvas) at the point where the duct connects to the unit on both ends. Material must meet all local and national code requirements.
- When unit is being installed in a location where even the slightest noise would be a problem (meeting room or other very quiet space), design duct system to avoid transmission of vibration to the structure to the extent possible.


- 1** Remove the return air filter from its existing location at the rear of the unit.
- Remove the screws that secure the filter frame to the rear of the unit and set the frame aside.
- Remove the screws that secure the return air cover plate to the bottom of the unit. Set the cover plate aside.

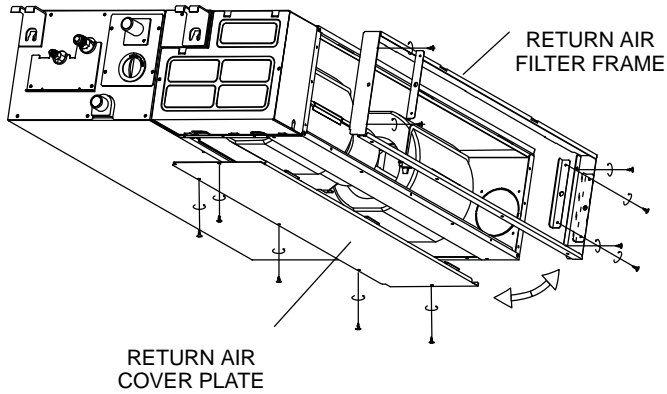

- 2** Apply foam insulating tape to the return air opening on the bottom of the unit as shown.
- Use the existing screws to re-install the return air filter frame on the bottom of the unit.
- Use the existing screws to re-install the return air cover plate on the rear of the unit.

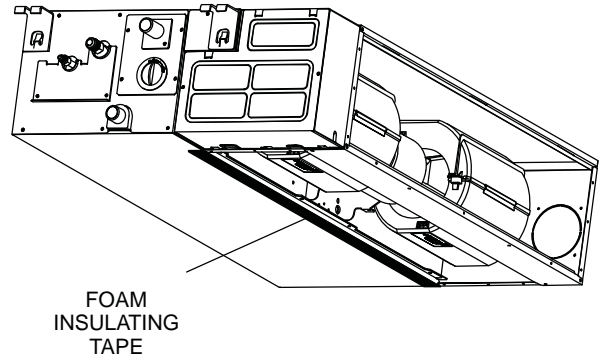

- 3** Re-install the return air filter in the repositioned filter frame in the bottom of the unit. Refer to the arrows in the illustration below.

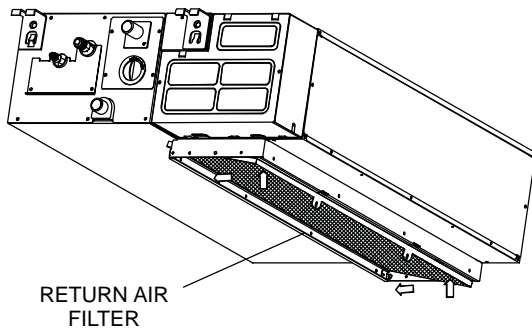

- 4** Use provided clips to secure frame within filter frame as shown in detail below.

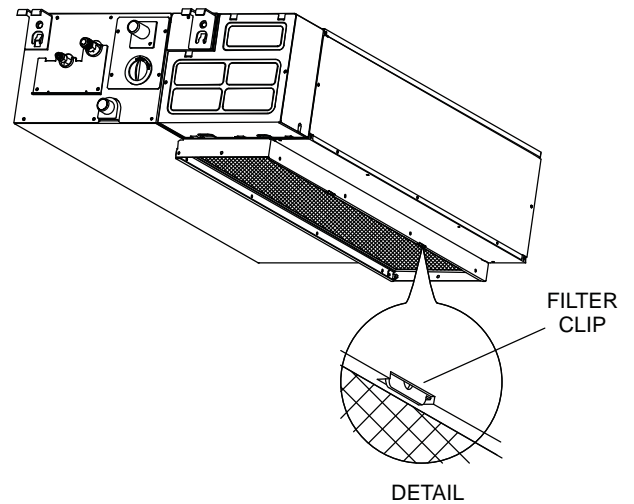


Figure 5. Field-Relocation of Return Air Filter (Typical)

Refrigerant Piping Connections

▲WARNING

Refrigerant leaks are unlikely; however, if a refrigerant leak occurs, open a door or windows to dilute the refrigerant in the room. Turn off the unit and all other appliances that may cause a spark. Call a licensed professional HVAC technician (or equivalent) to repair the leak.

Use only R410A refrigerant to charge this system. Use of other refrigerant or gas will damage the equipment.

Do not allow air or other contaminants to enter system during installation of refrigerant piping. Contaminants will result in lower system capacity and abnormally high operating pressures and may result in system failure or explosion.

Insulate all refrigerant piping.

Refrigerant pipes may be very hot during unit operation. Do not allow contact between wiring and bare copper pipes.

After refrigerant piping connections have been completed, check the system for leaks per commissioning instructions.

Field piping consists of two copper lines connected to the indoor unit. Table 1 lists the connection sizes at the indoor unit. The connections are made using the provided brass flare nuts at the end of the refrigerant piping connections.

Both lines must be individually insulated.

NOTE - Always slide a flare nut onto the field-provided refrigerant piping before flaring the lines.

1. The seal on the unit refrigerant piping connections should remain in place until the last possible moment. This will prevent dust or water from getting into the refrigerant piping before it is connected.
2. Slowly loosen one of the flare nuts to release the factory nitrogen charge.
3. Remove the flare nuts and discard the seal from each of the piping connections.
4. Slide the flare nuts onto the ends of the field-provided refrigerant piping before using a suitable flaring tool to flare the end of the copper pipe.
5. Apply recommended HFC-410A refrigerant lubricant to the outside of the field-provided flared line sets (figure 6 -- A).

IMPORTANT!

The compressor in this unit contains PVE oil (Polyvinylether). PVE oil is formulated for hydrofluorocarbon (HFC) refrigerants, such as R-410a, which this system contains. While it may have some miscibility properties with mineral-based oil and POE oil (Polyolester), it is not recommended to mix PVE oil with any other type of refrigerant oil.

6. Align the union tube and flared refrigerant lines with each other, then tighten the flare nuts lightly at first to obtain a smooth match (figure 6 -- B).

Table 1. Refrigerant Piping Connections

System Size (Btuh)	Liquid Line	Vapor Line
7000 9000 12000 15000	1/4"	1/2"
18000 24000 30000 36000 48000	3/8"	5/8"

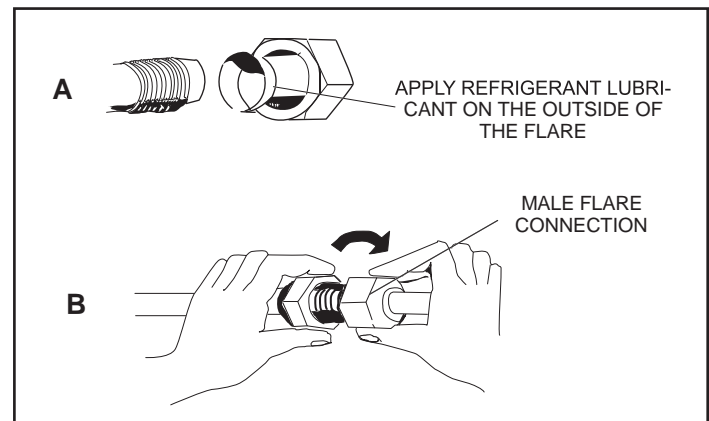


Figure 6. Making Connections at Indoor Unit (Male to Female Connection)

7. Once snug, continue another half-turn on each nut which should create a leak-free joint. A torque wrench may be used to tighten flare nuts using table 2 recommendations. (see figure 7). Do not over-tighten a flared joint. Flared connections should always be accessible and must be insulated to prevent condensation. See figure 8.

IMPORTANT!

Always use two wrenches when tightening flare nuts to avoid twisting refrigerant piping. DO NOT over-tighten flare nuts.

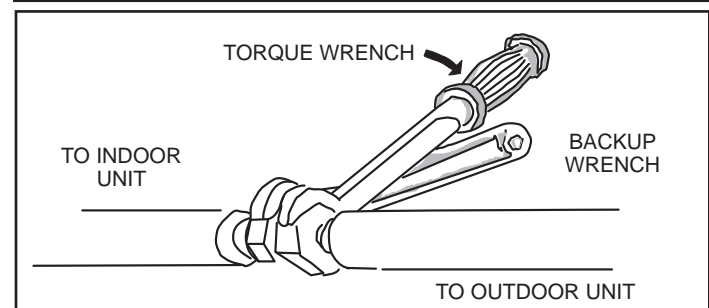


Figure 7. Tighten Flare Nut

Table 2. Flare Nut Torque Recommendations

Outside Diameter	Recommended Torque	No torque wrench available Finger tighten and use an appropriately sized wrench to turn an additional:
Inches	U.S.	
1/4"	15 ft.-lb.	1/4 turn
3/8"	26 ft.-lb.	1/2 turn
1/2"	41 ft.-lb.	7/8 turn
5/8"	48 ft.-lb.	1 full turn

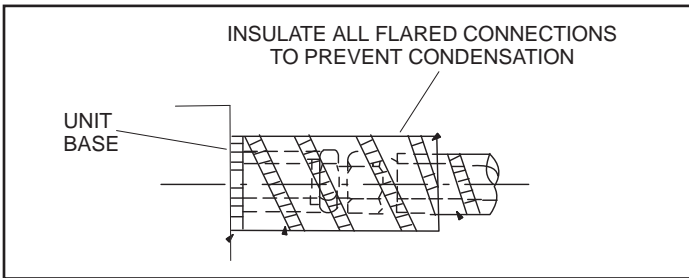


Figure 8. Insulate Flared Connections

Condensate Piping Connections

⚠ CAUTION

Make sure that drain piping is properly routed and insulated in order to prevent both leaks and condensation. Follow these instructions exactly to ensure proper drainage and unit operation.

1. Use the provided hose clamp to secure the provided flexible condensate drain connector and insulating sleeve to the drain line stub on the side of the indoor unit. See figure 9. **NOTE** - Take care not to over-tighten the hose clamps this may damage the drain line stub.

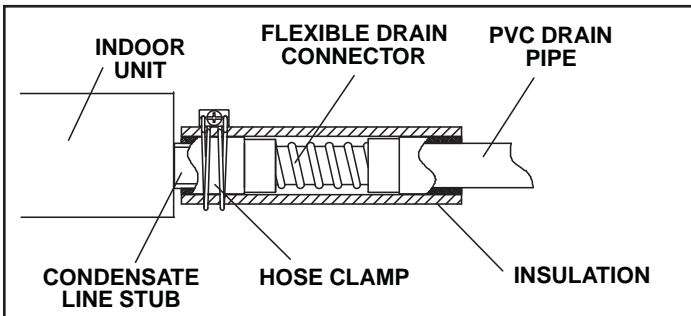


Figure 9. Condensate Drain Connection

2. Make a water-tight connection between the field-provided condensate drain line and the flexible condensate connector. Use 1-1/2" OD / 1-1/4" ID PVC pipe for the drain line.
3. See figure 10 for applications including a single unit and a single gravity drain. In this case, ensure that the drain line is properly sloped (no less than 1/4 inch per foot) and condensate lines are routed to ensure moisture is drained away from the indoor unit. A gravity drain connection port is located on the side of the unit with the refrigerant piping and on the opposite side of the unit. Select one connection to use and leave the unused connection port sealed. Seal and plug the lift pump connection port when using either gravity drain connection port.

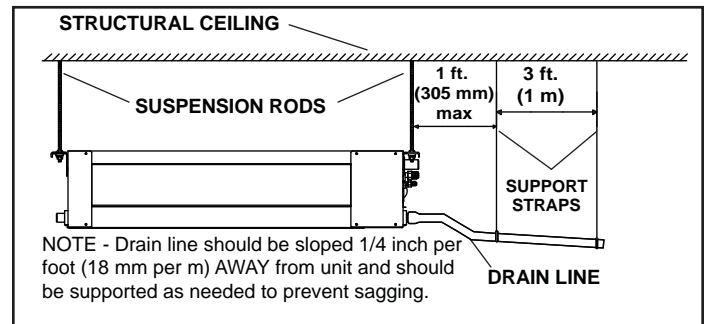


Figure 10. Sloped Condensate Drain -- Single Unit

4. See figure 11 for applications including a single unit using the internal drain pump.

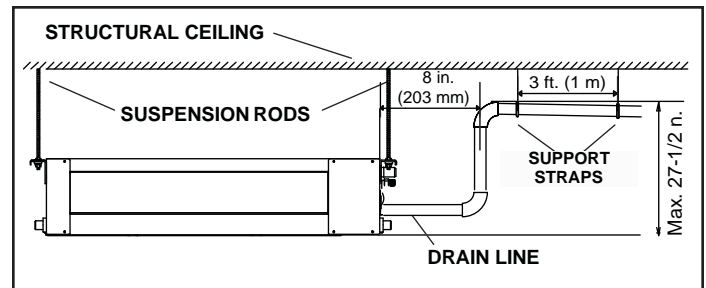


Figure 11. Condensate Drain with Pump -- Single Unit

5. See figure 12 for applications including multiple units using the internal pump to provide lift into a single, correctly sized main drain. In this case, ensure that the main drain line is properly sloped (no less than 1/4 inch per foot) and that each individual drain is connected to the main drain exactly as shown.
6. In all cases, drain should be as short as possible and should not have any droops or kinks that would restrict condensate flow and shall be constructed using an approved pipe. **There must be a 2-inch space between the end of the condensate drain and the final termination point (ground, open drain, etc.) to ensure that the line will drain freely.**

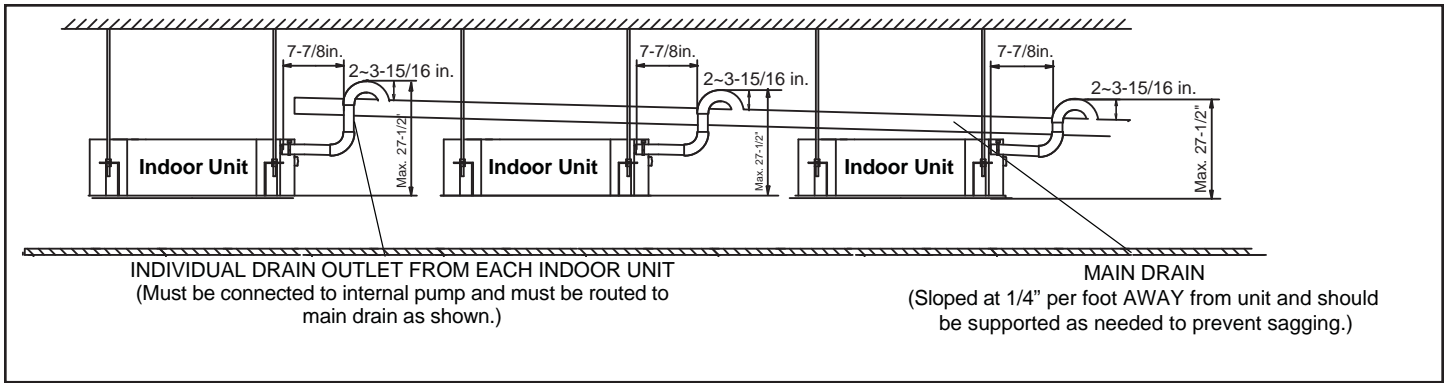


Figure 12. Using a Main Drain to Serve Multiple Indoor Units with Internal Condensate Pumps

7. After system installation is complete, the condensate drain line must be checked for leaks and the condensate pumps must be checked to ensure proper operation. This check is part of the commissioning sequence. Turn the condensate drain pan test cover latch counterclockwise to open the cover and access the drain pan. See figure 13. Funnel enough water to engage the pump into the drain pan through a flexible tube.
8. Operate the system in the cooling mode. If the internal pump is being used, ensure that the pump is operating and the water in the pan is draining freely. If the internal pump is not being used, pour the water into the drain pan and confirm that it has flowed freely out of the pan and out of the drain termination. If a leak is found, shut down power to the unit at once and do not restore power to the unit until the problem has been resolved.
9. Return the test cover and turn the latch clockwise to re-lock it.

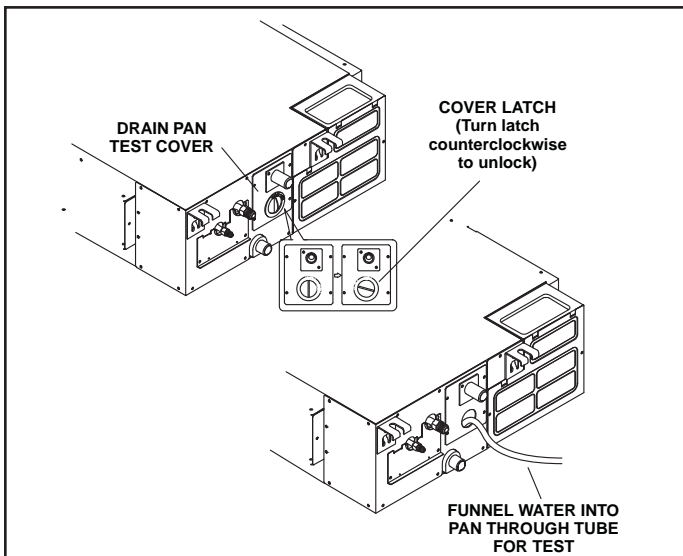


Figure 13. Condensate Drain Test

IMPORTANT!

You must confirm operation of every drain and pump in the system as part of the commissioning procedure.

Wiring Connections

⚠ WARNING

Isolate the power supply before accessing unit electrical terminals.

Install unit so that unit disconnect is accessible.

Follow all local and national codes, as well as this installation instruction, during installation. Do NOT overload electrical circuit, as this may lead to failure and possible fire.

Use specified wiring and cable to make electrical connections. Clamp cables securely and make sure that connections are tight to avoid strain on wiring. Insecure wiring connections may result in equipment failure and risk of fire.

Wiring must be installed so that all cover plates can be securely closed.

In the U.S.A., wiring must conform with current local codes and the current National Electric Code (NEC). In Canada, wiring must conform with current local codes and the current Canadian Electrical Code (CEC). Refer to unit nameplate for minimum circuit ampacity and maximum overcurrent protection size.

NOTE - Three-conductor shielded cable must be used for the communication wiring. This is necessary to ensure proper system communication and operation.

⚠ CAUTION

This unit must be properly grounded and protected by a circuit breaker. The ground wire for the unit must not be connected to a gas or water pipe, a lightning conductor or a telephone ground wire.

Do not connect power wires to the outdoor unit until all other wiring and piping connections have been completed.

Install all wiring at least 3 feet away from televisions, radios or other electronic devices in order to avoid the possibility of interference with the unit operation. Do not install the unit near a lighting appliance that includes a ballast. The ballast may affect remote control operation.

⚠ CAUTION

A disconnection device having an air gap contact separation in all active conductors should be incorporated in the fixed wiring according to the National Wiring Regulation.

- A circuit breaker capable of shutting down the power supply to the entire system must be installed.
 - A single switch can be used to supply power to units on the same system. However, branch switches and circuit breakers must be selected carefully.
 - Fit the power supply wiring of each unit with a switch and fuse as shown in the wiring diagram.
 - Install a wiring interrupter or ground-fault circuit interrupter for the power wiring.
 - Make sure the ground resistance is no greater than 100Ω. This value can be as high as 500Ω when using a grounding fault circuit interrupter since the protective ground resistance can be applied.
1. Remove the screws that secure the control box cover. Remove the cover and place it to the side where it will not be damaged.
 2. Locate the terminal strip in the control box. Connect the power wiring (sized per NEC/CEC and local codes) and communications cable (three-core, shielded cable) per figures 14 and 15. Refer to unit nameplate for rated voltage.
 3. If the indoor unit is the final unit in a group that is wired in series, install the provided resistor across terminals P and Q. Refer to figure 16.
 4. The infra-red receiver / display panel is factory installed and can be repositioned, if necessary. Use optional extension cable kit.

Tightening torque for the terminal screws

- Use the correct screwdriver for fighting the terminal screws. If the screwdriver blade is too small, the head of the screw might be damaged, and the screw will not be properly tightened.
- If the terminal screws are over tightened, screws might be damaged.
- Refer to the table below for the tightening torque of the terminal screws.

Table 3. Terminal Screw Tightening Torque

	Tightening torque (lb-ft)
Terminal base of remote controller/Signal transmission wire (X2M)	0.58-0.72
Terminal base of power supply (X1M)	0.87-1.06
Grounding terminal (M4)	1.06-1.43

- After wiring, confirm all connections are correct; Then turn on power supply to the unit.


IMPORTANT!

DO NOT adjust DIP switch settings. Settings may only be adjusted by a trained technician as part of the commissioning procedures.

Network Address and Commissioning

After the system has been installed, each indoor unit must be assigned an address as part of the commissioning procedure.

KEY	COMPONENT
FM	INDOOR FAN
EEV	ELECTRONIC EXPANSION VALVE
T1	INLET AIR TEMP.
T2B	EVAP OUTLET TEMP IN COOLING MODE
T2	COIL TEMP.
XP1-8	PLUG
XS1-8	JACK
C	FAN CAPACITOR
TR	TRANSFORMER
PUMP	PUMP MOTOR
CS	WATER LEVEL SWITCH
XT1-3	TERMINAL BLOCK

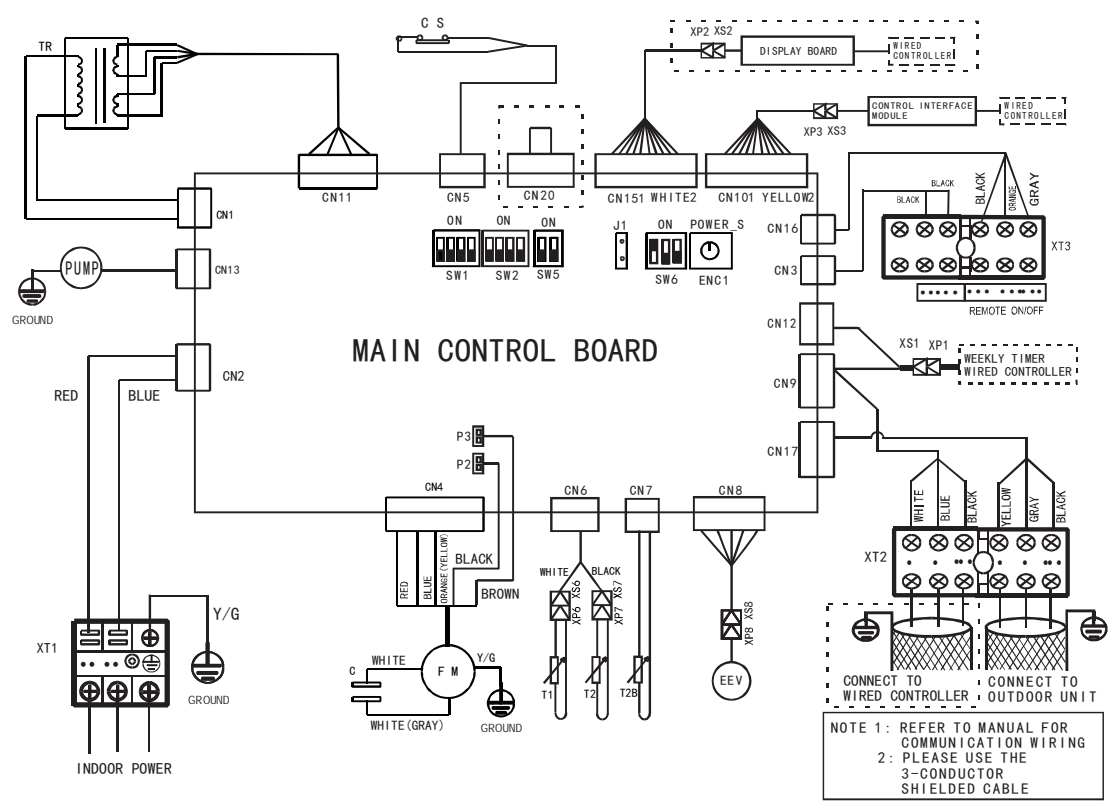


NOTE3
COMPONENT IN DASH
LINE IS OPTIONAL
OR FIELD WIRING

NOTE 1: REFER TO MANUAL FOR
COMMUNICATION WIRING
2: PLEASE USE THE
3-CONDUCTOR
SHIELDED CABLE

Typical wiring diagram. Refer to wiring diagram on the unit for actual wiring.

Figure 14. Wiring Diagram VMDA007S4-1 - VMDA018S4-1 Wiring Diagram

KEY	COMPONENT
FM	INDOOR FAN
EEV	ELECTRONIC EXPANSION VALVE
T1	INLET AIR TEMP.
T2B	EVAP OUTLET TEMP IN COOLING MODE
T2	COIL TEMP.
XP1-8	PLUG
XS1-8	JACK
C	FAN CAPACITOR
TR	TRANSFORMER
PUMP	PUMP MOTOR
CS	WATER LEVEL SWITCH
XT1-3	TERMINAL BLOCK

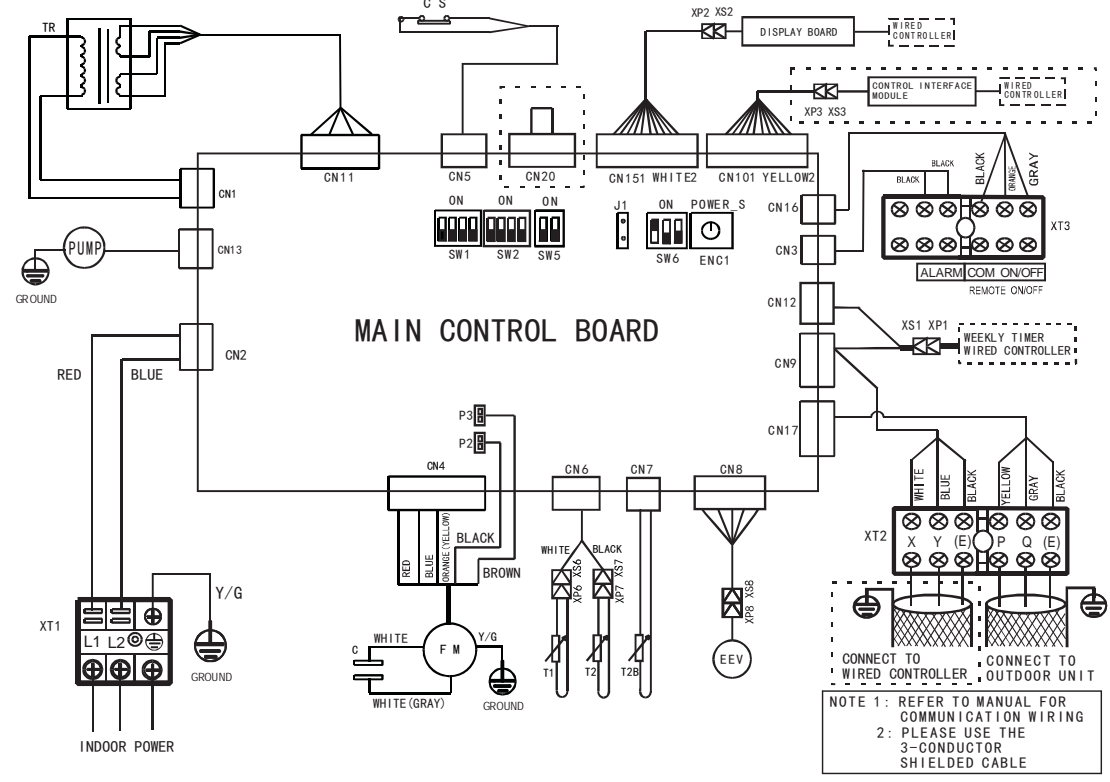

NOTE3
COMPONENT IN DASH
LINE IS OPTIONAL
OR FIELD WIRING


NOTE 1: REFER TO MANUAL FOR
COMMUNICATION WIRING
2: PLEASE USE THE
3-CONDUCTOR
SHIELDED CABLE

Typical wiring diagram. Refer to wiring diagram on the unit for actual wiring.

Figure 15. Wiring Diagram VMDA024S4-1 - VMDA048S4-1 Wiring Diagram

KEY	COMPONENT
FAN1	DC INDOOR FAN
EEV	ELECTRONIC EXPANSION VALVE
T1	INLET AIR TEMP.
T2B	EVAP OUTLET TEMP IN COOLING MODE
T2	COIL TEMP.
XP1-9	PLUG
XS1-9	JACK
PUMP	PUMP MOTOR
CS	WATER LEVEL SWITCH
XT1-2	TERMINAL BLOCK
M1 M2	SWING MOTOR


NOTE:
COMPONENT IN DASH
LINE IS OPTIONAL
OR FIELD WIRING

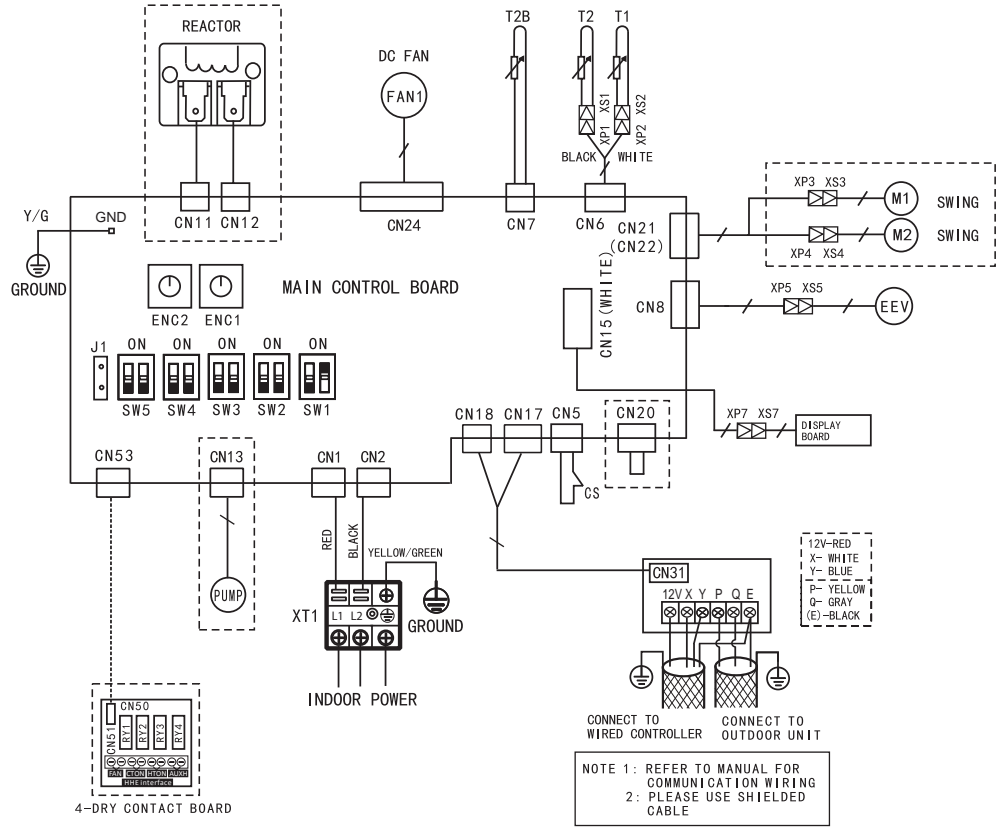

NOTE 1: REFER TO MANUAL FOR
COMMUNICATION WIRING
NOTE 2: PLEASE USE SHIELDED
CABLE

Typical wiring diagram. Refer to wiring diagram on the unit for actual wiring.

Figure 16. Wiring Diagram - VMDA**H4-2 Wiring Diagram

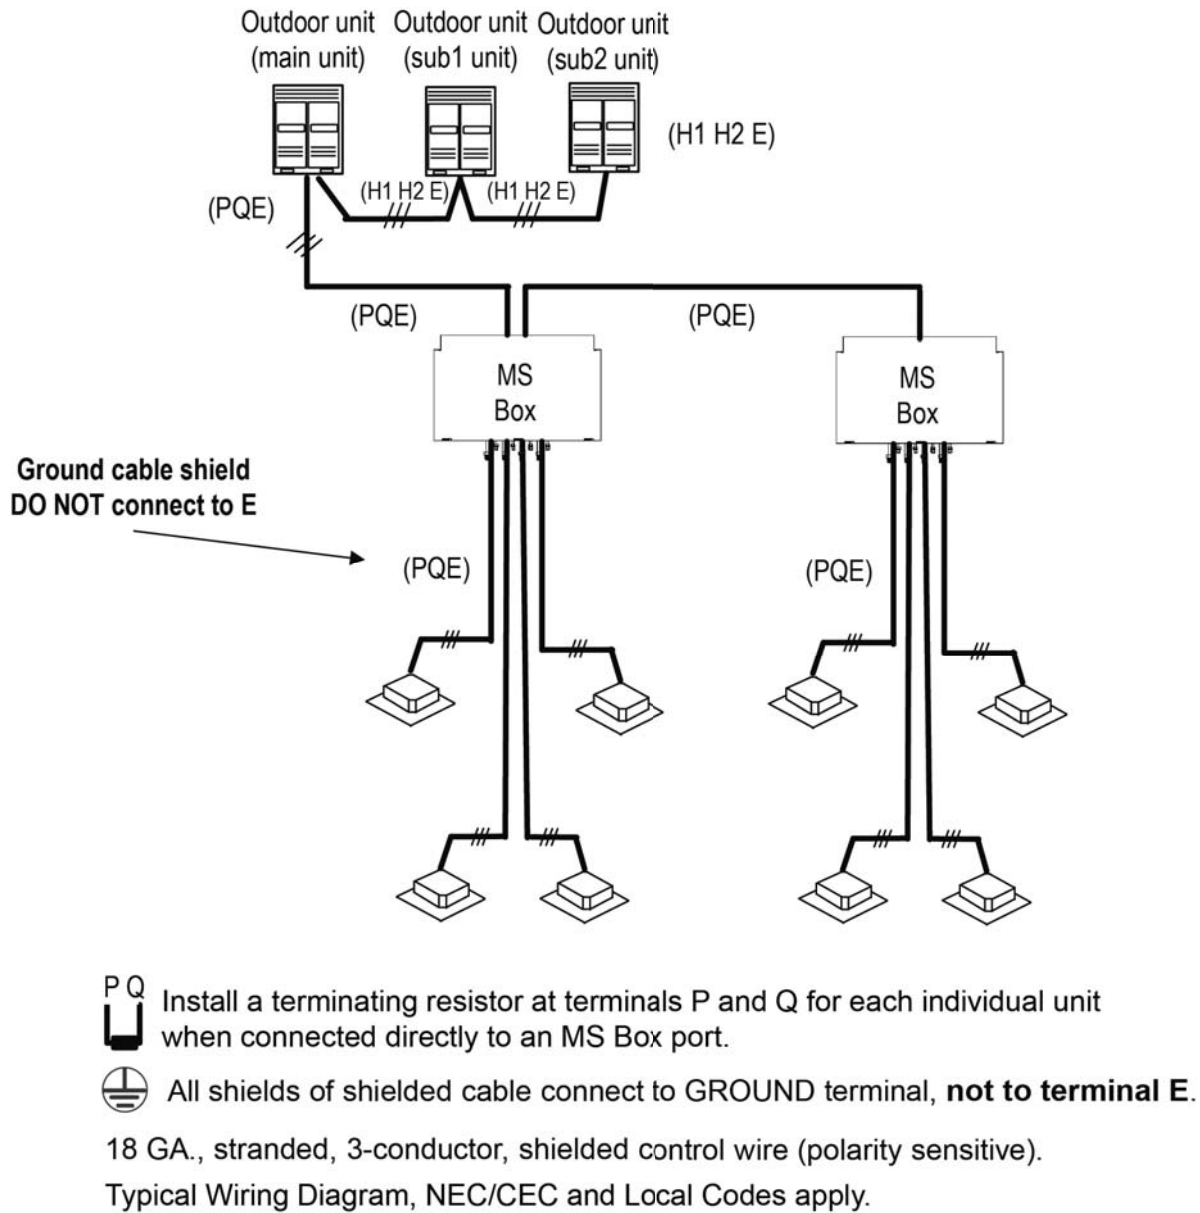

NOTE - Each communication wire from the MS box should follow the refrigerant piping for that port.

Figure 17. Typical Communication Wiring Diagram (VRF Heat Recovery System)