


CBA38MV (HFC-410A) SERIES UNITS

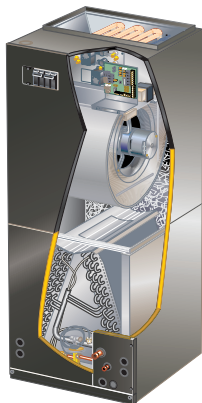

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.

⚠ IMPORTANT

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFCs, HCFCs and HFCs) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for noncompliance.

NOTICE

A thermostat is not included and must be ordered separately.

- A Lennox communicating thermostat must be used in communicating applications.
- In non-communicating applications, the Lennox ComfortSense® thermostat may be used, as well as other non-communicating thermostats.

In all cases, setup is critical to ensure proper system operation.

Field wiring for both communicating and non-communicating applications is illustrated in diagrams, which begin on page 29.

⚠ CAUTION

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

Table of Contents

Specifications	2
Model Number Identification	3
Blower Data	4
CBA38MV Horizontal Left- and Right-Hand Discharge Unit Dimensions	16
CBA38MV Upflow Discharge Unit Dimensions	17
Installation Clearances	17
Installation Requirements	18
Brazing Connections	22
Installing the Condensate Drain	24
Field Control Wiring	26
Air Handler Control Button, Display and Jumpers	38
Target CFM Tables	43
Unit Operating Sequences	45
Heat Pump Operation (Heating and Cooling)	52
Cooling Operation	53
Error Code / Recall Mode	54
Indoor Blower Test	55
Repairing or Replacing Cabinet Insulation	56
Homeowner Maintenance	56
Professional Maintenance	56
Check-out Procedures	57

General Information

This indoor unit **with all-aluminum coil** is designed for installation with optional field-installed electric heat and a matched outdoor unit that is charged with HFC-410A refrigerant. These units, designed for indoor installation in multiple positions, are completely assembled for upflow and horizontal right-hand discharge before being shipped from the factory.

All CBA38MV air handlers are equipped with a factory-installed, internally mounted check / expansion valve, which is suitable for use in HFC-410A applications.

This air handler is compatible with the ComfortSense® non-communicating thermostat and non-communicating outdoor units. In addition, this unit has the enhanced capability of communicating with the iComfort® thermostats and iComfort®-enabled outdoor units using the Lennox RSBus protocols.

NOTE - For downflow or horizontal left-hand air discharge, certain field modifications are required.

IMPORTANT: Special procedures are required for cleaning the all-aluminum coil in this unit. See page 43 in this instruction for information.

Specifications

GENERAL DATA		Model Number	CBA38MV-018/024	CBA38MV-030	CBA38MV-036
		Nominal tonnage	1.5 to 2	2.5	3
		Refrigerant	R-410A	R-410A	R-410A
Connections in.	Suction / vapor (o.d.) line - sweat		3/4	3/4	3/4
	Liquid line (o.d.) - sweat		3/8	3/8	3/8
	Condensate drain - in. (fpt)		(2) 3/4	(2) 3/4	(2) 3/4
Indoor Coil	Net face area - ft. ²		4.4	5.0	5.0
	Tube outside diameter - in.		3/8	3/8	3/8
	Number of rows		3	3	3
	Fins per inch		14	14	14
Blower Data	Wheel nominal diameter x width - in.		10 x 8	11 x 8	11 x 8
	Motor output - hp		1/2	1/2	1/2
Filters	¹ Number and size - in.		(1) 20 x 20 x 1	(1) 20 x 20 x 1	(1) 20 x 20 x 1
Shipping Data - 1 Package - lbs.			141	154	159

ELECTRICAL DATA

	Voltage - phase - 60hz	208/230V-1ph	208/230V-1ph	208/230V-1ph
² Maximum overcurrent protection (unit only)		15	15	15
³ Minimum circuit ampacity (unit only)		5	5	5

GENERAL DATA		Model Number	CBA38MV-042	CBA38MV-048	CBA38MV-060
		Nominal tonnage	3.5	4	5
		Refrigerant	R-410A	R-410A	R-410A
Connections in.	Suction / vapor (o.d.) line - sweat		7/8	7/8	7/8
	Liquid line (o.d.) - sweat		3/8	3/8	3/8
	Condensate drain - in. (fpt)		(2) 3/4	(2) 3/4	(2) 3/4
Indoor Coil	Net face area - ft. ²		7.22	7.22	8.33
	Tube outside diameter - in.		3/8	3/8	3/8
	Number of rows		3	3	3
	Fins per inch		14	14	14
Blower Data	Wheel nominal diameter x width - in.		12 x 9	12 x 9	12 x 9
	Motor output - hp		1	1	1
Filters	¹ Number and size - in.		(1) 20 x 24 x 1	(1) 20 x 24 x 1	(1) 20 x 24 x 1
Shipping Data - 1 Package - lbs.			189	189	199

ELECTRICAL DATA

	Voltage - phase - 60hz	208/230V-1ph	208/230V-1ph	208/230V-1ph
² Maximum overcurrent protection (unit only)		15	15	15
³ Minimum circuit ampacity (unit only)		10	10	10

¹ Disposable frame type filter.

² HACR type circuit breaker or fuse.


³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

Optional Accessories

For up-to-date information, see any of the following publications:

- Lennox CBA38MV Product Specification bulletin (EHB)
- Lennox Commercial Price Book

Model Number Identification

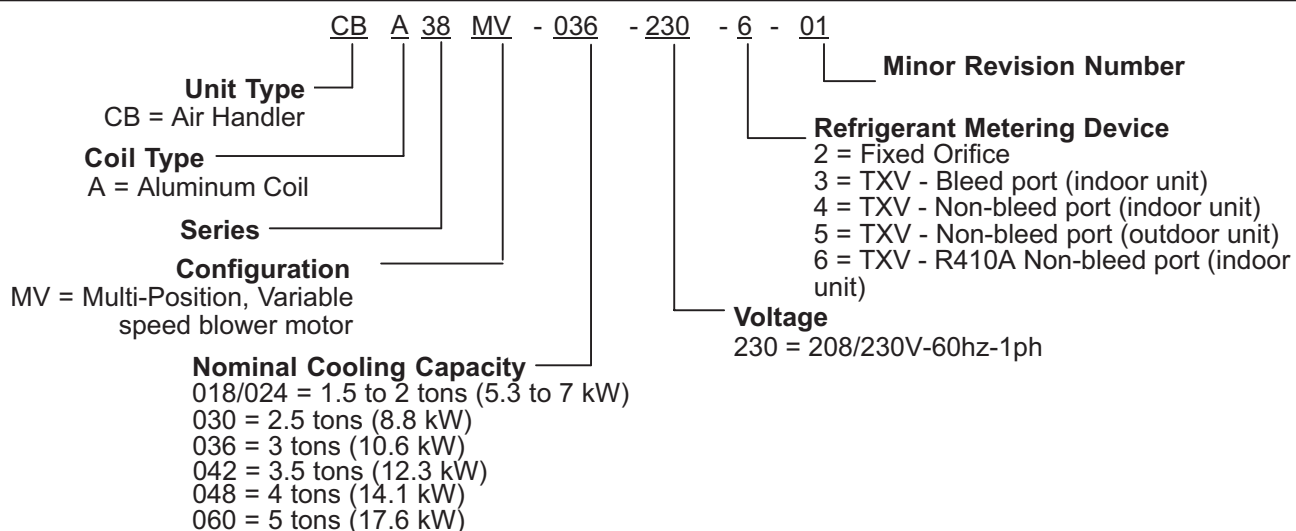

Blower Data

CBA38MV-018/024 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	460	685	885	1050	460	685	885	1050
	400	575	795	940	400	575	795	940
	365	515	715	830	365	515	715	830

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 250 cfm.

CBA38MV-018/024 BLOWER MOTOR WATTS

AT "+" (Plus) SETTING ("Adjust" Jumper at "+" Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	32	44	58	71	90	104	131	145
	Tap 2	NA	56	85	103	121	139	165	190	207
	Tap 3	NA	105	131	161	183	202	241	263	292
	Tap 4	NA	164	194	220	253	277	310	330	360
“COOL” Speed	Tap 1	NA	32	44	58	71	90	104	131	145
	Tap 2	NA	56	85	103	121	139	165	190	207
	Tap 3	NA	105	131	161	183	202	241	263	292
	Tap 4	NA	164	194	220	253	277	310	330	360

AT "NORM" SETTING ("Adjust" Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	27	42	52	69	79	99	114	133
	Tap 2	NA	44	59	77	95	117	137	152	183
	Tap 3	NA	79	108	126	159	181	199	231	252
	Tap 4	NA	117	145	167	197	228	254	273	313
“COOL” Speed	Tap 1	NA	27	42	52	69	79	99	114	133
	Tap 2	NA	44	59	77	95	117	137	152	183
	Tap 3	NA	79	108	126	159	181	199	231	252
	Tap 4	NA	117	145	167	197	228	254	273	313

AT "-" (Minus) SETTING ("Adjust" Jumper at "-" Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	24	40	48	60	76	94	106	117
	Tap 2	NA	37	48	68	93	106	129	145	157
	Tap 3	NA	70	85	106	129	153	181	203	222
	Tap 4	NA	90	117	138	162	190	216	236	265
“COOL” Speed	Tap 1	NA	24	40	48	60	76	94	106	117
	Tap 2	NA	37	48	68	93	106	129	145	157
	Tap 3	NA	70	85	106	129	153	181	203	222
	Tap 4	NA	90	117	138	162	190	216	236	265

CBA38MV-030 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

“ADJUST” Jumper Setting	Jumper Speed Positions							
	“HEAT” Speed				“COOL” Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM –	630	875	1095	1315	630	875	1095	1315
	545	785	995	1195	545	785	995	1195
	510	700	890	1075	510	700	890	1075

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 250 cfm.

CBA38MV-030 BLOWER MOTOR WATTS

AT “+” (Plus) SETTING (“Adjust” Jumper at “+” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	35	55	76	95	116	138	164	179
	Tap 2	NA	80	100	122	148	171	194	214	239
	Tap 3	NA	140	167	189	216	237	273	291	322
	Tap 4	NA	231	262	295	328	355	377	412	441
“COOL” Speed	Tap 1	NA	35	55	76	95	116	138	164	179
	Tap 2	NA	80	100	122	148	171	194	214	239
	Tap 3	NA	140	167	189	216	237	273	291	322
	Tap 4	NA	231	262	295	328	355	377	412	441

AT “NORM” SETTING (“Adjust” Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	36	48	61	80	92	114	124	139
	Tap 2	NA	61	84	104	122	143	169	186	210
	Tap 3	NA	109	134	153	178	203	231	254	281
	Tap 4	NA	174	205	238	264	284	310	338	372
“COOL” Speed	Tap 1	NA	36	48	61	80	92	114	124	139
	Tap 2	NA	61	84	104	122	143	169	186	210
	Tap 3	NA	109	134	153	178	203	231	254	281
	Tap 4	NA	174	205	238	264	284	310	338	372

AT “–” (Minus) SETTING (“Adjust” Jumper at “–” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	29	43	58	77	88	102	119	134
	Tap 2	NA	44	64	89	106	125	157	174	202
	Tap 3	NA	85	104	129	152	176	199	219	239
	Tap 4	NA	133	157	185	207	231	258	285	317
“COOL” Speed	Tap 1	NA	29	43	58	77	88	102	119	134
	Tap 2	NA	44	64	89	106	125	157	174	202
	Tap 3	NA	85	104	129	152	176	199	219	239
	Tap 4	NA	133	157	185	207	231	258	285	317

CBA38MV-036 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

“ADJUST” Jumper Setting	Jumper Speed Positions							
	“HEAT” Speed				“COOL” Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM –	920	1255	1410	1580	920	1255	1410	1580
	815	1165	1315	1435	815	1165	1315	1435
	720	1010	1155	1285	720	1010	1155	1285

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 250 cfm.

CBA38MV-036 BLOWER MOTOR WATTS

AT “+” (Plus) SETTING (“Adjust” Jumper at “+” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	n/a	88	108	132	161	190	208	234	248
	Tap 2	n/a	174	212	237	269	304	328	370	385
	Tap 3	n/a	232	282	314	341	374	410	434	473
	Tap 4	n/a	332	365	409	438	480	520	546	576
“COOL” Speed	Tap 1	n/a	88	108	132	161	190	208	234	248
	Tap 2	n/a	174	212	237	269	304	328	370	385
	Tap 3	n/a	232	282	314	341	374	410	434	473
	Tap 4	n/a	332	365	409	438	480	520	546	576

AT “NORM” SETTING (“Adjust” Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	n/a	70	89	113	137	155	188	199	233
	Tap 2	n/a	145	168	201	221	258	279	316	348
	Tap 3	n/a	200	223	265	293	316	359	374	403
	Tap 4	n/a	259	291	309	351	390	429	447	488
“COOL” Speed	Tap 1	n/a	70	89	113	137	155	188	199	233
	Tap 2	n/a	145	168	201	221	258	279	316	348
	Tap 3	n/a	200	223	265	293	316	359	374	403
	Tap 4	n/a	259	291	309	351	390	429	447	488

AT “–” (Minus) SETTING (“Adjust” Jumper at “–” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	n/a	50	78	97	119	144	163	185	199
	Tap 2	n/a	105	130	156	177	212	239	264	280
	Tap 3	n/a	144	167	197	224	255	281	316	340
	Tap 4	n/a	191	229	253	283	310	339	366	398
“COOL” Speed	Tap 1	n/a	50	78	97	119	144	163	185	199
	Tap 2	n/a	105	130	156	177	212	239	264	280
	Tap 3	n/a	144	167	197	224	255	281	316	340
	Tap 4	n/a	191	229	253	283	310	339	366	398

CBA38MV-042 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

“ADJUST” Jumper Setting	Jumper Speed Positions							
	“HEAT” Speed				“COOL” Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM –	1100	1320	1540	1760	1100	1320	1540	1760
	1000	1200	1400	1600	1000	1200	1400	1600
	900	1080	1260	1440	900	1080	1260	1440

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 450 cfm.

CBA38MV-042 BLOWER MOTOR WATTS

AT “+” (Plus) SETTING (“Adjust” Jumper at “+” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	121	154	177	199	233	252	283	315
	Tap 2	NA	189	221	247	282	310	344	370	403
	Tap 3	NA	283	312	341	382	422	454	481	515
	Tap 4	NA	407	446	488	528	567	583	646	671
“COOL” Speed	Tap 1	NA	121	154	177	199	233	252	283	315
	Tap 2	NA	189	221	247	282	310	344	370	403
	Tap 3	NA	283	312	341	382	422	454	481	515
	Tap 4	NA	407	446	488	528	567	583	646	671

AT “NORM” SETTING (“Adjust” Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	104	134	153	184	207	236	257	286
	Tap 2	NA	142	171	203	234	253	298	327	351
	Tap 3	NA	212	240	269	308	337	371	408	429
	Tap 4	NA	309	341	367	406	441	476	516	559
“COOL” Speed	Tap 1	NA	104	134	153	184	207	236	257	286
	Tap 2	NA	142	171	203	234	253	298	327	351
	Tap 3	NA	212	240	269	308	337	371	408	429
	Tap 4	NA	309	341	367	406	441	476	516	559

AT “–” (Minus) SETTING (“Adjust” Jumper at “–” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	78	104	126	155	175	199	209	247
	Tap 2	NA	115	139	168	196	218	247	274	309
	Tap 3	NA	165	192	220	247	290	316	360	376
	Tap 4	NA	237	269	301	327	356	407	430	481
“COOL” Speed	Tap 1	NA	78	104	126	155	175	199	209	247
	Tap 2	NA	115	139	168	196	218	247	274	309
	Tap 3	NA	165	192	220	247	290	316	360	376
	Tap 4	NA	237	269	301	327	356	407	430	481

CBA38MV-048 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

“ADJUST” Jumper Setting	Jumper Speed Positions							
	“HEAT” Speed				“COOL” Speed			
	1	2	3	4	1	2	3	4
	cfm	cfm	cfm	cfm	cfm	cfm	cfm	cfm
+	1670	1870	2100	2200	1670	1870	2100	2200
NORM	1460	1670	1870	2100	1460	1670	1870	2100
–	1230	1410	1600	1800	1230	1410	1600	1800

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 450 cfm.

CBA38MV-048 BLOWER MOTOR WATTS

AT “+” (Plus) SETTING (“Adjust” Jumper at “+” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	335	374	399	436	495	518	572	611
	Tap 2	NA	459	502	537	586	644	689	724	759
	Tap 3	NA	668	738	778	845	881	957	996	1019
	Tap 4	NA	808	865	922	975	1003	1025	1017	987
“COOL” Speed	Tap 1	NA	335	374	399	436	495	518	572	611
	Tap 2	NA	459	502	537	586	644	689	724	759
	Tap 3	NA	668	738	778	845	881	957	996	1019
	Tap 4	NA	808	865	922	975	1003	1025	1017	987

AT “NORM” SETTING (“Adjust” Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	225	264	289	336	358	396	432	464
	Tap 2	NA	320	374	398	434	484	523	558	610
	Tap 3	NA	451	498	529	583	619	682	721	768
	Tap 4	NA	643	699	731	795	848	919	966	998
“COOL” Speed	Tap 1	NA	225	264	289	336	358	396	432	464
	Tap 2	NA	320	374	398	434	484	523	558	610
	Tap 3	NA	451	498	529	583	619	682	721	768
	Tap 4	NA	643	699	731	795	848	919	966	998

AT “–” (Minus) SETTING (“Adjust” Jumper at “–” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	146	178	207	227	265	299	317	359
	Tap 2	NA	207	243	272	305	345	371	419	438
	Tap 3	NA	290	347	383	412	447	486	525	548
	Tap 4	NA	410	440	491	528	572	613	651	694
“COOL” Speed	Tap 1	NA	146	178	207	227	265	299	317	359
	Tap 2	NA	207	243	272	305	345	371	419	438
	Tap 3	NA	290	347	383	412	447	486	525	548
	Tap 4	NA	410	440	491	528	572	613	651	694

CBA38MV-060 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

“ADJUST” Jumper Setting	Jumper Speed Positions							
	“HEAT” Speed				“COOL” Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM –	1695	1890	2140	2210	1695	1890	2140	2210
	1525	1680	1850	2075	1525	1680	1850	2075
	1300	1450	1630	1800	1300	1450	1630	1800

NOTES - The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.

First stage cooling air volume is 70% of COOL speed setting. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.

Lennox iHarmony® Zoning System applications - minimum blower speed is 450 cfm.

CBA38MV-060 BLOWER MOTOR WATTS

AT “+” (Plus) SETTING (“Adjust” Jumper at “+” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	334	368	412	449	491	532	557	603
	Tap 2	NA	462	511	549	601	640	681	720	762
	Tap 3	NA	670	710	765	820	868	921	963	1005
	Tap 4	NA	757	810	853	909	961	1001	1034	1026
“COOL” Speed	Tap 1	NA	334	368	412	449	491	532	557	603
	Tap 2	NA	462	511	549	601	640	681	720	762
	Tap 3	NA	670	710	765	820	868	921	963	1005
	Tap 4	NA	757	810	853	909	961	1001	1034	1026

AT “NORM” SETTING (“Adjust” Jumper at NORM Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	245	285	319	350	398	425	462	497
	Tap 2	NA	330	368	414	443	469	505	558	600
	Tap 3	NA	442	497	515	554	603	643	685	735
	Tap 4	NA	600	653	701	752	798	842	889	935
“COOL” Speed	Tap 1	NA	245	285	319	350	398	425	462	497
	Tap 2	NA	330	368	414	443	469	505	558	600
	Tap 3	NA	442	497	515	554	603	643	685	735
	Tap 4	NA	600	653	701	752	798	842	889	935

AT “–” (Minus) SETTING (“Adjust” Jumper at “–” Setting)

Jumper Speed Positions		Motor Watts @ Various External Static Pressures - in. wg.								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
“HEAT” Speed	Tap 1	NA	181	204	235	261	304	323	357	383
	Tap 2	NA	218	259	283	315	357	390	422	457
	Tap 3	NA	300	333	365	395	443	476	527	559
	Tap 4	NA	400	430	470	515	543	592	639	678
“COOL” Speed	Tap 1	NA	181	204	235	261	304	323	357	383
	Tap 2	NA	218	259	283	315	357	390	422	457
	Tap 3	NA	300	333	365	395	443	476	527	559
	Tap 4	NA	400	430	470	515	543	592	639	678

ELECTRIC HEAT DATA – CBA38MV-018/024

Model Number	No. of Stages	Volts Input	kW Input	¹ Btuh Input	² Blower Motor Full Load Amps	³ Minimum Circuit Ampacity	⁵ Maximum Overcurrent Protection
SINGLE PHASE							
4 kW 4 lbs.	ECB38-4 (16V86) Terminal Block ECB38-4CB (16V87) 30A Circuit breaker	1	208	3.0	10,250	3.9	⁴ 25
			220	3.4	11,450	4.0	⁴ 25
			230	3.7	12,550	4.0	⁴ 25
			240	4.0	13,650	4.0	30
5 kW 4 lbs.	ECB38-5 (16V88) Terminal Block ECB38-5CB (16V89) 35A Circuit breaker	1	208	3.8	12,800	4.0	⁴ 30
			220	4.2	14,300	4.0	⁴ 30
			230	4.6	15,700	4.0	⁴ 30
			240	5.0	17,100	4.0	35
6 kW 4 lbs.	EB38-6 (16V90) Terminal Block ECB38-6CB (16V91) 40A Circuit breaker	1	208	4.5	15,400	4.0	⁴ 35
			220	5.0	17,100	4.0	35
			230	5.5	18,800	4.0	⁴ 35
			240	6.0	20,500	4.0	40
8 kW 5 lbs.	ECB38-8 (16V92) Terminal Block ECB38-8CB (16V93) 50A Circuit breaker	1	208	6.0	20,500	4.0	⁴ 45
			220	6.7	22,900	4.0	⁴ 45
			230	7.3	25,100	4.0	⁴ 45
			240	8.0	27,300	4.0	50
9 kW 5 lbs.	ECB38-9CB (16V94) 60A Circuit breaker	2	208	6.8	23,100	4.0	⁴ 50
			220	7.6	25,800	4.0	⁴ 50
			230	8.3	28,200	4.0	50
			240	9.0	30,700	4.0	60

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

¹ Electric heater capacity only - does not include additional blower motor heat capacity.

² Amps shown are for blower motor only.

³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

⁴ Bold text indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size noted.

⁵ HACR type circuit breaker or fuse.

ELECTRIC HEAT DATA - CBA38MV-030

Model Number	No. of Stages	Volts Input	kW Input	¹ Btuh Input	² Blower Motor Full Load Amps	³ Minimum Circuit Ampacity		⁵ Maximum Overcurrent Protection		Single Point Power Source	
						Ckt 1	Ckt 2	Ckt 1	Ckt 2	³ Minimum Circuit Ampacity	⁵ Maximum Overcurrent Protection
SINGLE PHASE											
4 kW 4 lbs. ECB38-4 (16V86) Terminal Block ECB38-4CB (16V87) 30A Circuit breaker	1	208	3.0	10,250	3.9	23	---	⁴ 25	---	23	25
		220	3.4	11,450	3.9	24	---	⁴ 25	---	24	25
		230	3.7	12,550	3.9	25	---	⁴ 25	---	25	25
		240	4.0	13,650	3.9	26	---	30	---	26	30
5 kW 4 lbs. ECB38-5 (16V88) Terminal Block ECB38-5CB (16V89) 35A Circuit breaker	1	208	3.8	12,800	3.9	28	---	⁴ 30	---	28	30
		220	4.2	14,300	3.9	29	---	⁴ 30	---	29	30
		230	4.6	15,700	3.9	30	---	⁴ 30	---	30	30
		240	5.0	17,100	3.9	31	---	35	---	31	35
6 kW 4 lbs. EB40-6 (16V90) Terminal Block ECB38-6CB (16V91) 40A Circuit breaker	1	208	4.5	15,400	3.9	32	---	⁴ 35	---	32	35
		220	5.0	17,100	3.9	33	---	⁴ 35	---	33	35
		230	5.5	18,800	3.9	35	---	⁴ 35	---	35	35
		240	6.0	20,500	3.9	36	---	40	---	36	40
8 kW 5 lbs. ECB38-8 (16V92) Terminal Block ECB38-8CB (16V93) 50A Circuit breaker	1	208	6.0	20,500	3.9	41	---	⁴ 45	---	41	45
		220	6.7	22,900	3.9	43	---	⁴ 45	---	43	45
		230	7.3	25,100	3.9	45	---	⁴ 45	---	45	45
		240	8.0	27,300	3.9	47	---	50	---	47	50
9 kW 5 lbs. ECB38-9CB (16V94) 60A Circuit breaker	2	208	6.8	23,100	3.9	46	---	⁴ 50	---	46	50
		220	7.6	25,800	3.9	48	---	⁴ 50	---	48	50
		230	8.3	28,200	3.9	50	---	50	---	50	50
		240	9.0	30,700	3.9	52	---	60	---	52	60
12.5 kW 10 lbs. ECB38-12.5CB (16V95) (1) 30A and (1) 45A Circuit breaker	2	208	9.4	32,000	3.9	24	38	⁴ 25	⁴ 40	61	70
		220	10.5	35,800	3.9	25	40	⁴ 25	⁴ 40	65	70
		230	11.5	39,200	3.9	26	42	30	45	67	70
		240	12.5	42,600	3.9	27	44	30	45	71	80
15 kW 12 lbs. ECB38-15CB (16V96) (1) 35A and (1) 60A Circuit breaker	2	208	11.3	38,400	3.9	28	45	⁴ 30	⁴ 45	72	80
		220	12.6	43,000	3.9	29	48	⁴ 30	⁴ 50	76	80
		230	13.8	47,000	3.9	30	50	⁴ 30	⁴ 50	80	80
		240	15.0	51,200	3.9	31	52	35	60	83	90

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

¹ Electric heater capacity only - does not include additional blower motor heat capacity.

² Amps shown are for blower motor only.

³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

⁴ Bold text indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size noted.

⁵ HACR type circuit breaker or fuse.

ELECTRIC HEAT DATA - CBA38MV-036

Model Number		No. of Stages	Volts Input	kW Input	¹ Btuh Input	² Blower Motor Full Load Amps	³ Minimum Circuit Ampacity		⁵ Maximum Overcurrent Protection		Single Point Power Source	
							Ckt 1	Ckt 2	Ckt 1	Ckt 2	³ Minimum Circuit Ampacity	⁵ Maximum Overcurrent Protection
SINGLE PHASE												
5 kW 4 lbs.	ECB38-5 (16V88) Terminal Block ECB38-5CB (16V89) 35A Circuit breaker	1	208	3.8	12,800	5.2	29	---	⁴ 30	---	29	30
			220	4.2	14,300	5.2	30	---	⁴ 30	---	30	35
			230	4.6	15,700	5.2	32	---	⁴ 35	---	32	35
			240	5.0	17,100	5.2	33	---	35	---	33	35
6 kW 4 lbs.	ECB38-6 (16V90) Terminal Block ECB38-6CB (16V91) 40A Circuit breaker	1	208	4.5	15,400	5.2	34	---	⁴ 35	---	34	35
			220	5.0	17,100	5.2	35	---	⁴ 35	---	35	35
			230	5.5	18,800	5.2	36	---	⁴ 40	---	36	40
			240	6.0	20,500	5.2	38	---	40	---	38	40
8 kW 5 lbs.	ECB38-8 (16V92) Terminal Block ECB38-8CB (16V93) 50A Circuit breaker	1	208	6.0	20,500	5.2	43	---	⁴ 45	---	43	45
			220	6.7	22,900	5.2	45	---	⁴ 45	---	45	45
			230	7.3	25,100	5.2	46	---	⁴ 50	---	46	50
			240	8.0	27,300	5.2	48	---	50	---	48	50
9 kW 5 lbs.	ECB38-9CB (16V94) 60A Circuit breaker	2	208	6.8	23,100	5.2	47	---	⁴ 50	---	47	50
			220	7.6	25,800	5.2	50	---	⁴ 50	---	50	50
			230	8.3	28,200	5.2	52	---	⁴ 60	---	52	60
			240	9.0	30,700	5.2	53	---	60	---	53	60
12.5 kW 10 lbs.	ECB38-12.5CB (16V95) (1) 30A and (1) 45A Circuit breaker	2	208	9.4	32,000	5.2	25	38	⁴ 25	⁴ 40	63	70
			220	10.5	35,800	5.2	26	40	⁴ 30	⁴ 40	66	70
			230	11.5	39,200	5.2	27	42	30	45	69	70
			240	12.5	42,600	5.2	28	44	30	45	72	80
15 kW 12 lbs.	ECB38-15CB (16V96) (1) 35A and (1) 60A Circuit breaker	2	208	11.3	38,400	5.2	29	45	⁴ 30	⁴ 45	74	80
			220	12.6	43,000	5.2	30	48	⁴ 30	⁴ 50	78	80
			230	13.8	47,000	5.2	32	50	⁴ 35	⁴ 50	82	90
			240	15.0	51,200	5.2	33	52	35	60	85	90
20 kW 19 lbs.	ECB38-20CB (16V97) (2) 60A Circuit breaker	2	208	15.0	51,200	5.2	47	50	⁴ 50	⁴ 50	97	100
			220	16.8	57,300	5.2	49	53	⁴ 50	60	102	110
			230	18.4	62,700	5.2	51	55	⁴ 60	60	106	110
			240	20.0	68,200	5.2	53	57	60	60	111	125
THREE PHASE												
8 kW 5 lbs.	ECB38-8 (16V99) Terminal Block	1	208	6.0	20,500	5.2	28	---	30	---	28	30
			220	6.7	22,900	5.2	29	---	30	---	29	30
			230	7.3	25,100	5.2	30	---	30	---	30	30
			240	8.0	27,300	5.2	30	---	30	---	30	35
10 kW 6 lbs.	ECB38-10 (16W67) Terminal Block	1	208	7.5	25,600	5.2	33	---	35	---	33	35
			220	8.4	28,700	5.2	35	---	35	---	35	35
			230	9.2	31,400	5.2	36	---	40	---	36	40
			240	10.0	34,100	5.2	37	---	40	---	37	40
15 kW 12 lbs.	ECB38-15CB (16W68) 50A Circuit breaker	1	208	11.3	38,400	5.2	46	---	⁴ 50	---	46	50
			220	12.6	43,000	5.2	48	---	50	---	48	50
			230	13.5	47,000	5.2	50	---	50	---	50	60
			240	15.0	51,200	5.2	52	---	60	---	52	60
20 kW 19 lbs.	ECB38-20CB (16W69) (2) 35A Circuit breaker	2	208	15.0	51,200	5.2	33	26	35	⁴ 30	59	60
			220	16.8	57,300	5.2	35	28	35	⁴ 30	62	70
			230	18.4	62,700	5.2	36	29	40	⁴ 30	65	70
			240	20.0	68,200	5.2	37	30	⁴ 40	35	67	70

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

¹ Electric heater capacity only - does not include additional blower motor heat capacity.

² Amps shown are for blower motor only.

³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

⁴ Bold text indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size noted.

⁵ HACR type circuit breaker or fuse.

ELECTRIC HEAT DATA - CBA38MV-042

Model Number		No. of Stages	Volts Input	kW Input	1 Btuh Input	2 Blower Motor Full Load Amps	3 Minimum Circuit Ampacity			5 Maximum Overcurrent Protection			Single Point Power Source	
							Ckt 1	Ckt 2	Ckt 3	Ckt 1	Ckt 2	Ckt 3	3 Minimum Circuit Ampacity	5 Maximum Overcurrent Protection
SINGLE PHASE														
4 kW 4 lbs.	ECB38-4 (16V86)	1	208	3.0	10,250	6.9	27	---	---	4 30	---	---	27	30
	Terminal Block		220	3.4	11,450	7.4	28	---	---	4 30	---	---	28	30
	ECB38-4CB (16V87)		230	3.7	12,550	7.4	28	---	---	4 30	---	---	28	30
	35A Circuit breaker		240	4.0	13,650	7.4	29	---	---	4 30	---	---	29	30
5 kW 4 lbs.	ECB38-5 (16V88)	1	208	3.8	12,800	7.4	31	---	---	35	---	---	31	35
	Terminal Block		220	4.2	14,300	7.4	32	---	---	35	---	---	32	35
	ECB38-5CB (16V89)		230	4.6	15,700	7.4	34	---	---	35	---	---	34	35
	35A Circuit breaker		240	5.0	17,100	7.4	35	---	---	4 35	---	---	35	35
6 kW 4 lbs.	ECB38-6 (16V90)	1	208	4.5	15,400	7.4	36	---	---	40	---	---	36	40
	Terminal Block		220	5.0	17,100	7.4	37	---	---	40	---	---	37	40
	ECB38-6CB (16V91)		230	5.5	18,800	7.4	39	---	---	40	---	---	39	40
	40A Circuit breaker		240	6.0	20,500	7.4	40	---	---	4 40	---	---	40	40
8 kW 5 lbs.	ECB38-8 (16V92)	1	208	6.0	20,500	7.4	45	---	---	45	---	---	45	45
	Terminal Block		220	6.7	22,900	7.4	47	---	---	50	---	---	47	50
	ECB38-8CB (16V93)		230	7.3	25,100	7.4	48	---	---	50	---	---	48	50
	50A Circuit breaker		240	8.0	27,300	7.4	50	---	---	4 50	---	---	50	60
9 kW 5 lbs.	ECB38-9CB (16V94)	2	208	6.8	23,100	7.4	49	---	---	50	---	---	49	50
	60A Circuit breaker		220	7.6	25,800	7.4	52	---	---	60	---	---	52	60
			230	8.3	28,200	7.4	54	---	---	60	---	---	54	60
			240	9.0	30,700	7.4	56	---	---	60	---	---	56	60
12.5 kW 10 lbs.	ECB38-12.5CB (16V95)	2	208	9.4	32,000	7.4	27	38	---	30	4 40	---	65	70
			220	10.5	35,800	7.4	29	40	---	30	4 40	---	68	70
	(1) 30A and		230	11.5	39,200	7.4	29	42	---	30	45	---	71	80
	(1) 45A Circuit breaker		240	12.5	42,600	7.4	31	44	---	4 35	45	---	74	80
15 kW 12 lbs.	ECB38-15CB (16V96)	2	208	11.3	38,400	7.4	31	45	---	35	4 45	---	76	80
	(1) 35A and		220	12.6	43,000	7.4	32	48	---	35	4 50	---	80	90
	(1) 60A Circuit breaker		230	13.5	47,000	7.4	34	50	---	35	4 50	---	84	90
			240	15.0	51,200	7.4	35	52	---	4 35	60	---	87	90
20 kW 19 lbs.	ECB38-20CB (16V97)	2	208	15.0	51,200	7.4	49	50	---	4 50	4 50	---	99	100
	(2) 60A Circuit breaker		220	16.8	57,300	7.4	52	53	---	60	60	---	104	110
			230	18.4	62,700	7.4	54	55	---	60	60	---	108	110
			240	20.0	68,200	7.4	56	57	---	60	60	---	113	125
THREE PHASE														
8 kW 5 lbs.	ECB38-8 (16V99)	1	208	6.0	20,500	7.4	30	---	---	35	---	---	30	35
	Terminal block		220	6.7	22,900	7.4	31	---	---	35	---	---	31	35
			230	7.3	25,100	7.4	32	---	---	35	---	---	32	35
			240	8.0	27,300	7.4	33	---	---	35	---	---	33	35
10 kW 6 lbs.	ECB38-10 (16W67)	1	208	7.5	25,600	7.4	35	---	---	40	---	---	35	40
	Terminal block		220	8.4	28,700	7.4	37	---	---	40	---	---	37	40
			230	9.2	31,400	7.4	38	---	---	40	---	---	38	40
			240	10.0	34,100	7.4	39	---	---	40	---	---	39	40
15 kW 12 lbs.	ECB38-15CB (16W68)	1	208	11.3	38,400	7.4	48	---	---	50	---	---	48	35
	50A Circuit breaker		220	12.6	43,000	7.4	51	---	---	4 60	---	---	51	35
			230	13.5	47,000	7.4	52	---	---	4 60	---	---	52	35
			240	15.0	51,200	7.4	54	---	---	4 60	---	---	54	35
20 kW 19 lbs.	ECB38-20CB (16W69)	2	208	15.0	51,200	7.4	35	26	---	4 40	4 30	---	61	70
	(2) 35A Circuit breaker		220	16.8	57,300	7.4	37	28	---	4 40	4 30	---	64	70
			230	18.4	62,700	7.4	38	29	---	4 40	4 30	---	67	70
			240	20.0	68,200	7.4	39	30	---	4 40	35	---	69	70

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

¹ Electric heater capacity only - does not include additional blower motor heat capacity.

² Amps shown are for blower motor only.

³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

⁴ Bold text indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size noted.

⁵ HACR type circuit breaker or fuse.

ELECTRIC HEAT DATA - CBA38MV-048 AND CBA38MV-060

Model Number		No. of Stages	Volts Input	kW Input	¹ Btuh Input	² Blower Motor Full Load Amps	³ Minimum Circuit Ampacity			⁵ Maximum Overcurrent Protection			Single Point Power Source		
							Ckt 1	Ckt 2	Ckt 3	Ckt 1	Ckt 2	Ckt 3	³ Minimum Circuit Ampacity	⁵ Maximum Overcurrent Protection	
SINGLE PHASE															
4 kW 4 lbs.	ECB38-4 (16V86)	1	208	3.0	10,250	6.9	27	---	---	⁴ 30	---	---	27	30	
	Terminal Block		220	3.4	11,450	6.9	28	---	---	⁴ 30	---	---	28	30	
	ECB38-4CB (16V87)		230	3.7	12,550	6.9	28	---	---	⁴ 30	---	---	28	30	
	35A Circuit breaker		240	4.0	13,650	6.9	29	---	---	⁴ 30	---	---	29	30	
5 kW 4 lbs.	ECB38-5 (16V88)	1	208	3.8	12,800	6.9	31	---	---	35	---	---	31	35	
	Terminal Block		220	4.2	14,300	6.9	32	---	---	35	---	---	32	35	
	ECB38-5CB (16V89)		230	4.6	15,700	6.9	34	---	---	35	---	---	34	35	
	35A Circuit breaker		240	5.0	17,100	6.9	35	---	---	⁴ 35	---	---	35	35	
6 kW 4 lbs.	ECB38-6 (16V90)	1	208	4.5	15,400	6.9	36	---	---	40	---	---	36	40	
	Terminal Block		220	5.0	17,100	6.9	37	---	---	40	---	---	37	40	
	ECB38-6CB (16V91)		230	5.5	18,800	6.9	39	---	---	40	---	---	39	40	
	40A Circuit breaker		240	6.0	20,500	6.9	40	---	---	⁴ 40	---	---	40	40	
8 kW 5 lbs.	ECB38-8 (16V92)	1	208	6.0	20,500	6.9	45	---	---	45	---	---	45	45	
	Terminal Block		220	6.7	22,900	6.9	47	---	---	50	---	---	47	50	
	ECB38-8CB (16V93)		230	7.3	25,100	6.9	48	---	---	50	---	---	48	50	
	50A Circuit breaker		240	8.0	27,300	6.9	50	---	---	⁴ 50	---	---	50	60	
9 kW 5 lbs.	ECB38-9CB (16V94)	2	208	6.8	23,100	6.9	49	---	---	50	---	---	49	50	
	60A Circuit breaker		220	7.6	25,800	6.9	52	---	---	60	---	---	52	60	
			230	8.3	28,200	6.9	54	---	---	60	---	---	54	60	
			240	9.0	30,700	6.9	56	---	---	60	---	---	56	60	
12.5 kW 10 lbs.	ECB38-12.5CB (16V95)	2	208	9.4	32,000	6.9	27	38	---	30	⁴ 40	---	65	70	
			220	10.5	35,800	6.9	29	40	---	30	⁴ 40	---	68	70	
	(1) 30A and		230	11.5	39,200	6.9	29	42	---	30	45	---	71	80	
	(1) 45A Circuit breaker		240	12.5	42,600	6.9	31	44	---	⁴ 35	45	---	74	80	
15 kW 12 lbs.	ECB38-15CB (16V96)	2	208	11.3	38,400	6.9	31	45	---	35	⁴ 45	---	76	80	
	(1) 35A and		220	12.6	43,000	6.9	32	48	---	35	⁴ 50	---	80	90	
	(1) 60A Circuit breaker		230	13.5	47,000	6.9	34	50	---	35	⁴ 50	---	84	90	
			240	15.0	51,200	6.9	35	52	---	⁴ 35	60	---	87	90	
20 kW 19 lbs.	ECB38-20CB (16V97)	2	208	15.0	51,200	6.9	49	50	---	⁴ 50	⁴ 50	---	99	100	
	(2) 60A Circuit breaker		220	16.8	57,300	6.9	52	53	---	60	60	---	104	110	
			230	18.4	62,700	6.9	54	55	---	60	60	---	108	110	
			240	20.0	68,200	6.9	56	57	---	60	60	---	113	125	
25 kW 19 lbs.	ECB38-25CB (16V98)	3	208	18.8	64,100	6.9	46	38	38	⁴ 50	⁴ 40	⁴ 40	122	125	
	(1) 60A and		220	21.0	71,700	6.9	48	40	40	⁴ 50	⁴ 40	⁴ 40	128	150	
	(2) 45A Circuit breaker		230	23.0	78,300	6.9	50	42	42	50	45	45	134	150	
			240	25.0	85,300	6.9	52	44	44	60	45	45	140	150	

THREE PHASE														
8 kW 5 lbs.	ECB38-8 (16V99) Terminal block	1	208	6.0	20,500	6.9	30	---	---	35	---	---	30	35
			220	6.7	22,900	6.9	31	---	---	35	---	---	31	35
			230	7.3	25,100	6.9	32	---	---	35	---	---	32	35
			240	8.0	27,300	6.9	33	---	---	35	---	---	33	35
10 kW 6 lbs.	ECB38-10 (16W67) Terminal block	1	208	7.5	25,600	6.9	35	---	---	40	---	---	35	40
			220	8.4	28,700	6.9	37	---	---	40	---	---	37	40
			230	9.2	31,400	6.9	38	---	---	40	---	---	38	40
			240	10.0	34,100	6.9	39	---	---	40	---	---	39	40
15 kW 12 lbs.	ECB38-15CB (16W68) 50A Circuit breaker	1	208	11.3	38,400	6.9	48	---	---	50	---	---	48	35
			220	12.6	43,000	6.9	51	---	---	⁴ 60	---	---	51	35
			230	13.5	47,000	6.9	52	---	---	⁴ 60	---	---	52	35
			240	15.0	51,200	6.9	54	---	---	⁴ 60	---	---	54	35
20 kW 19 lbs.	ECB38-20CB (16W69) (2) 35A Circuit breaker	2	208	15.0	51,200	6.9	35	26	---	⁴ 40	⁴ 30	---	61	70
			220	16.8	57,300	6.9	37	28	---	⁴ 40	⁴ 30	---	64	70
			230	18.4	62,700	6.9	38	29	---	⁴ 40	⁴ 30	---	67	70
			240	20.0	68,200	6.9	39	30	---	⁴ 40	35	---	69	70
25 kW 19 lbs.	ECB38-25CB (16W70) (1) 50A and (1) 40A Circuit breaker	2	208	18.8	64,100	6.9	42	33	---	⁴ 45	⁴ 35	---	74	80
			220	21.0	71,700	6.9	44	34	---	⁴ 45	⁴ 35	---	78	80
			230	23.0	78,300	6.9	45	36	---	50	40	---	81	90
			240	25.0	85,300	6.9	47	38	---	50	40	---	84	90

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

¹ Electric heater capacity only - does not include additional blower motor heat capacity.


² Amps shown are for blower motor only.

³ Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.


⁴ Bold text indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size noted.

⁵ HACR type circuit breaker or fuse.

CBA38MV Horizontal Left- and Right-Hand Discharge Unit Dimensions – Inches (mm)

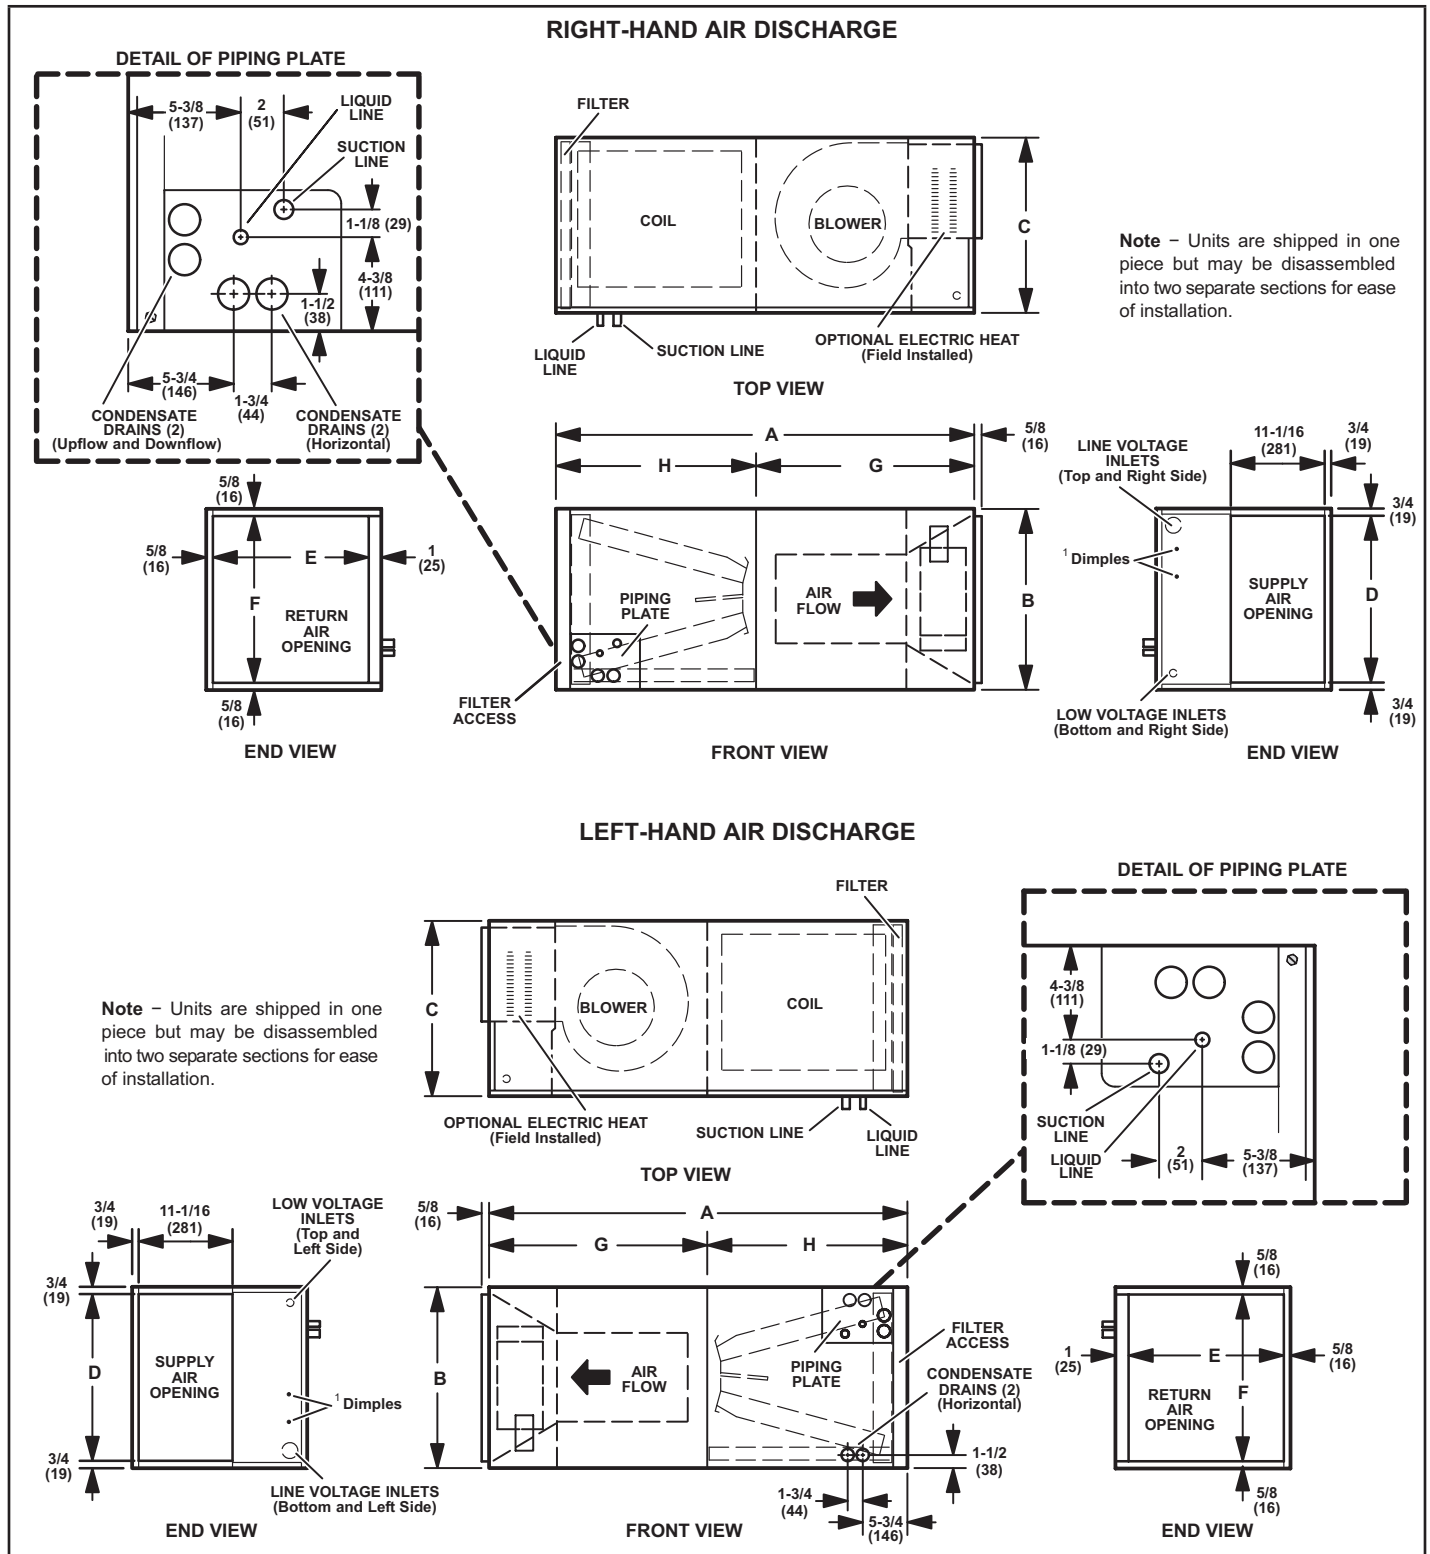

CBA38MV Upflow Discharge Unit Dimensions – Inches (mm)

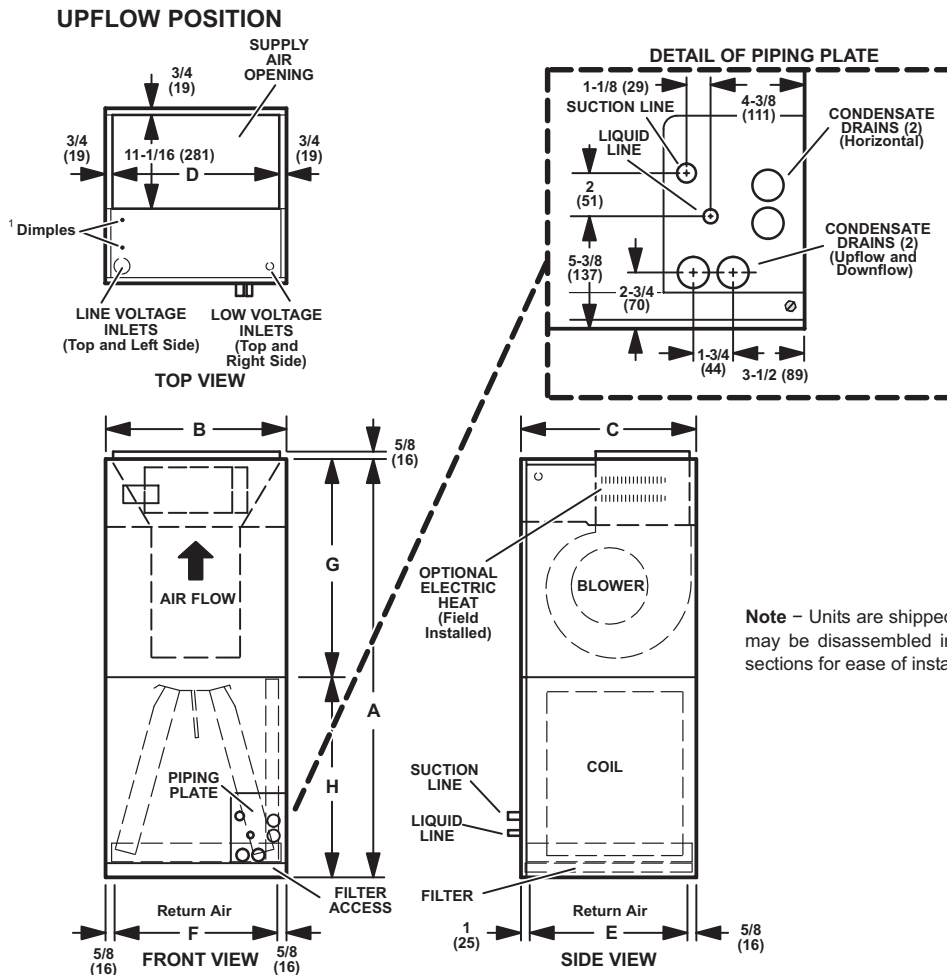

Installation Clearances

Cabinet	0 inch (0mm)
To Plenum	1 inch (25mm)
To Outlet Duct within 3 ft. (914mm)	1 inch (25mm)
Floor	See Note #1
Service / Maintenance	See Note #2

1 Units installed on combustible floors in the down-flow position with electric heat require optional down-flow additive base.

2 Front Service Access - 24 inches (610mm) minimum.

NOTE - If cabinet depth is more than 24 inches (610 mm), allow a minimum of the cabinet depth plus 2 inches (51 mm).

⚠ WARNING

During blower operation, the ECM motor emits energy that may interfere with pacemaker operation. Interference is reduced by both the sheet metal cabinet and distance.

⚠ WARNING

Improper installation of the air handler can result in personal injury or death.

Do not allow external combustion products or other contaminants to enter the return air system or to be mixed with air that will be supplied to the living space. Use sheet metal screws and joint tape or duct mastic to seal return air system to air handler. In platform installations, the air handler should be sealed airtight to the return air plenum. A door must never be used as a portion of the return air duct system. The base must provide a stable support and an airtight seal to the air handler. Allow absolutely no sagging, cracks, gaps, etc.

For no reason should return and supply air duct systems ever be connected to or from other heating devices such as a fireplace or stove, etc. Fire, explosion, carbon monoxide poisoning, personal injury and/or property damage could result.

Requirements

In addition to conforming to manufacturer's installation instructions and local municipal building codes, installation of Lennox air handler units (with or without optional electric heat), MUST conform with the following National Fire Protection Association (NFPA) standards:

- NFPA No. 90A – Standard for Installation of Air Conditioning and Ventilation Systems
- NFPA No. 90B — Standard for Installation of Residence Type Warm Air Heating and Air Conditioning Systems

This unit is approved for installation clearance to combustible material as stated on the unit rating plate. Accessibility and service clearances must take precedence over combustible material clearances.

Installation Requirements

CBA38MV units are factory-configured for upflow and horizontal right-hand discharge installation. For downflow or horizontal left-hand discharge, certain field modifications are required.

DISASSEMBLE AND REASSEMBLE AIR HANDLER UNIT

This unit consists of two sections which are shipped assembled from the factory. If necessary, the unit may be disassembled to facilitate setting the unit. Follow the steps below:

To disassemble:

- 1 - Remove access panels.
- 2 - Remove both blower and coil assemblies. This will lighten the cabinet for lifting.
- 3 - Remove one screw from the left and right posts inside the unit. Remove one screw from each side on the back of the unit. Unit sections will now separate.

To reassemble:

- 1 - Align cabinet sections together.
- 2 - Reinstall screws.
- 3 - Replace blower and coil assemblies.
- 4 - Replace access panel.

UPFLOW APPLICATION

Use the following procedures to configure the unit for upflow operations:

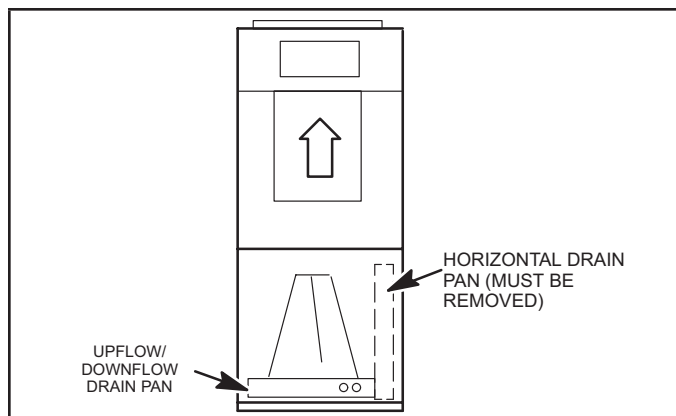


FIGURE 1. Upflow Configuration

- 1 - The horizontal drain pan must be removed when the coil blower is installed in the upflow position. Removing horizontal drain pan will allow proper airflow and increase efficiency.
- 2 - After removing horizontal drain pan, place the unit in desired location. Set unit so that it is level. Connect return and supply air plenums as required using sheet metal screws as illustrated in Figure 1.
- 3 - Install units that have no return air plenum on a stand that is at least 14" from the floor to allow for proper air return. Lennox offers an optional upflow unit stand as listed in Table 1.

TABLE 1. Optional Unit Side Stand (Upflow Only)

Models	Kit Numbers
-018, -024	45K31
-030, -036, -048, -060	45K32

HORIZONTAL RIGHT-HAND DISCHARGE APPLICATION

NOTE - When air handler is located above a finished space, the secondary drain pan must have a larger footprint than the air handler. In addition, a 3/4" (19.1MM) overflow drain line must be:

- Connected to secondary drain pan

or

- Connected to the overflow drain outlet of the air handler drain pan.

Use the following procedures to configure the unit for horizontal right-hand discharge operations:

NOTE - For horizontal applications, a secondary drain pan is recommended. Refer to local codes.

- 4 - No further adjustment is necessary. Set unit so that it is sloped 1/4 inch (6.35mm) towards the drain pan end of the unit.

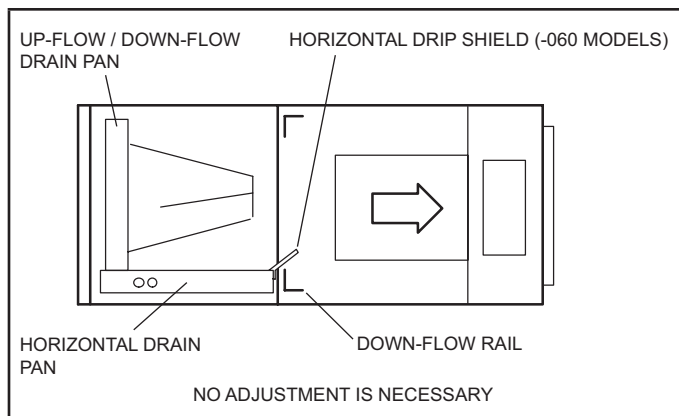


FIGURE 2. Right-Hand Discharge Configuration

- 5 - If the unit is suspended, the entire length of the cabinet must be supported. If you use a chain or strap, use a piece of angle iron or sheet metal attached to the unit (either above or below) to support the length of the cabinet. Use securing screws no longer than 1/2 inch (12.7mm) to avoid damaging the coil or filter as illustrated in Figure 3. Use sheet metal screws to connect the return and supply air plenums as required.

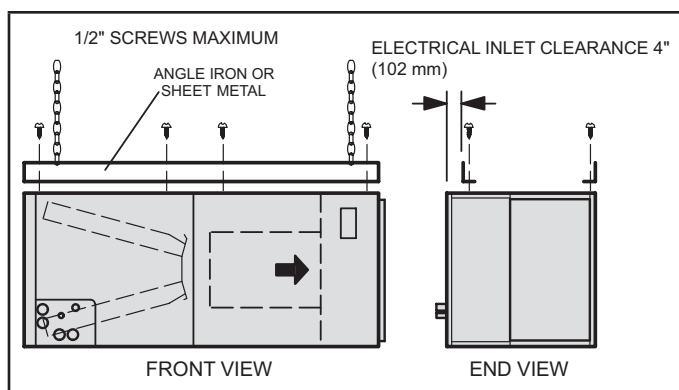


FIGURE 3. Suspending Horizontal Unit

HORIZONTAL RIGHT-HAND DISCHARGE APPLICATION IN HIGH HUMIDITY AREAS

For horizontal applications in high humidity areas remove the downflow rail closest to the drain pan.

To remove rail:

- 1 - Remove the screws from the rail at the back of unit and at the cabinet support rail.
- 2 - Remove the downflow rail then replace screws.
- 3 - Seal around the exiting drain pipe, liquid line, and suction line to prevent humid air from infiltrating into the unit.

NOTE – For horizontal applications, a secondary drain pan is recommended. Refer to local codes.

NOTE – When air handler is located above a finished space, the secondary drain pan must have a larger foot-print than the air handler. In addition, a 3/4" (19.1MM) overflow drain line must be:

- Connected to secondary drain pan

or

- Connected to the overflow drain outlet of the air handler drain pan.

NOTE - (-060 Model Only) Before operating the unit, remove access panels and the horizontal drip shield and the corrugated padding between the blower and coil assembly. Discard the corrugated padding and the downflow drip shields.

NOTE - (-060 Model Only) Install the horizontal shield on the front edge of the horizontal drain pan as illustrated in figure 2.

! IMPORTANT

When removing the coil, there is possible danger of equipment damage and personal injury. Be careful when removing the coil assembly from a unit installed in right- or left-hand applications. The coil may tip into the drain pan once it is clear of the cabinet. Support the coil when removing it.

HORIZONTAL LEFT-HAND DISCHARGE APPLICATION

Use the following procedures to configure the unit for horizontal left-hand discharge operations:

NOTE – For horizontal applications, a secondary drain pan is recommended. Refer to local codes.

NOTE - (-060 Model Only) Before operating the unit, remove access panels and the horizontal drip shield and the corrugated padding between the blower and coil assembly. Discard the corrugated padding and the downflow drip shields. (The shields are used for downflow applications only.)

! IMPORTANT

After removal of drain pan plug(s), check drain hole(s) to verify that drain opening is fully open and free of any debris. Also check to make sure that no debris has fallen into the drain pan during installation that may plug up the drain opening.

- 1 - Pull the coil assembly from unit. Pull off the horizontal drain pan.
- 2 - Remove the drain plugs from back drain holes on horizontal drain pan and reinstall them on front holes.
- 3 - Rotate drain pan 180° front-to-back and install it on the opposite side of the coil.
- 4 - Remove screws from top cap. Remove horizontal drip shield screw located in the center of the back coil end seal as illustrated in figure 4.
- 5 - Rotate horizontal drip shield 180° front-to-back.

- 6 - Remove plastic plug from left hole on coil front end seal and reinstall plug in back hole. Reinstall horizontal drip shield screw in front coil end seal. Drip shield should drain downward into horizontal drain pan inside coil.
- 7 - Rotate top cap 180° front-to-back and align with unused screw holes. Holes must align with front and back coil end plates. The top cap has a 45° bend on one side and a 90° bend on the other. The 90° bend must be on the same side as the horizontal drain pan as illustrated in Figure 4.

NOTE – Be very careful when reinstalling the screws into the coil end plate engaging holes. Misaligned screws may damage the coil.

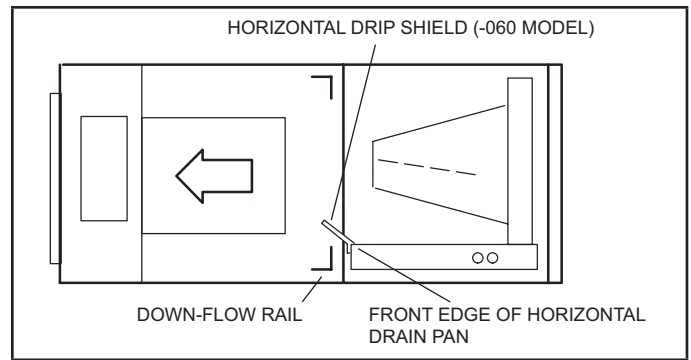


FIGURE 4. Left-Hand Discharge Configuration

- 8 - From the upflow position, flip cabinet 90° to the left and set into place. Replace blower assembly. Secure coil in place by bending down the tab on the cabinet support rail as illustrated in figures 4 and 5.
- 9 - Install the horizontal shield (-060 model) on the front edge of the horizontal drain pan as illustrated in figures 4 and 5.

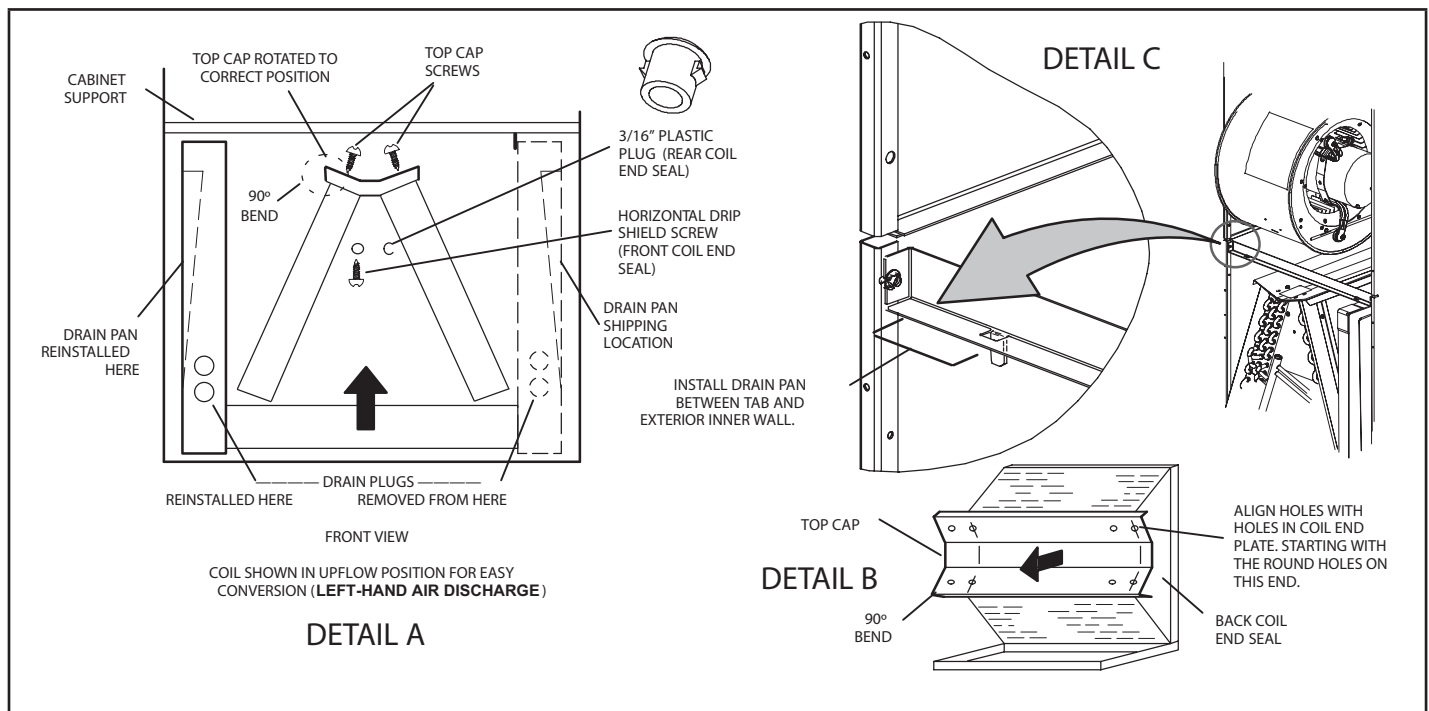


FIGURE 5. Field Modification for Left-Hand Discharge

NOTE – For horizontal applications in high humidity areas, remove the downflow rail closest to the drain pan. To remove rail, remove screw from rail at back of unit and at cabinet support rail. Remove downflow rail then replace screws. Also, seal around the exiting drain pipe, liquid and suction lines to prevent infiltration of humid air.

- 10 - Knock out drain seal plate from access door. Secure plate to cabinet front flange with screw provided.
- 11 - Flip access door and replace it on the unit.
- 12 - Set unit so that it is sloped 1/4" toward the drain pan end of the unit. Connect return and supply air plenums as required using sheet metal screws.

- 13 - If suspending the unit, it must be supported along the entire length of the cabinet. If using chain or strap, use a piece of angle iron or sheet metal attached to the unit (either above or below) so that the full length of the cabinet is supported. Use securing screws no longer than 1/2" to avoid damage to coil or filter, as illustrated in figure 3. Connect return and supply air plenums as required using sheet metal screws.

DOWNFLOW APPLICATION

Use the following procedures to configure the unit for downflow operations:

! IMPORTANT

If electric heat section with circuit breakers (ECB29/ECB31) is installed in a CBA38MV unit in a downflow application, the circuit breakers must be rotated 180° to the UP position. See ECB29/ECB31 installation instructions for more details.

Table 2 outlines the sizes of the various drip shields.

NOTE - (-060 Model Only) Remove access panels and horizontal drip shield from the corrugated padding between the blower and coil assembly.

- 1 - Remove the coil assembly from the unit.
- 2 - For best efficiency and air flow, remove the horizontal drain pan from the units in downflow positions as illustrated in figure 6.
- 3 - Rotate cabinet 180° from the upright position. See figure 6. You may need to first remove the blower assembly to lighten the cabinet for lifting.
- 4 - Foam tape that is provided creates a seal between the drip shield and the coil so that water does not leak into the air stream. The foam tape pieces are precut. Apply the tape to the drip shields as illustrated in figure 7 and specified as follows:
 - Apply two pieces of foam tape provided down both ends of each shield. The tape should measure 4-3/4" X 2" (120 X 25 mm). Ensure that the tape covers both sides of the shield equally.
 - Apply the longer piece of 1 inch wide foam tape between the end pieces of tape.
- 5 - From the underside of the coil, install the downflow drip shield firmly in place as illustrated in figure 8.

TABLE 2. Downflow Drip Shields (Tape Required)

Units	Length	Width
-018/024	Not Required	Not Required
-030	15-7/8"	4-11/16"
-036, -042	17-7/8"	4-11/16"
-048, -060	19-7/8"	4-11/16"

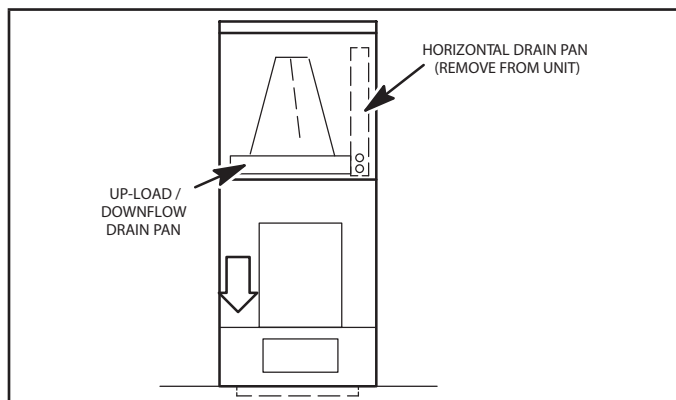


FIGURE 6. Downflow Discharge Position

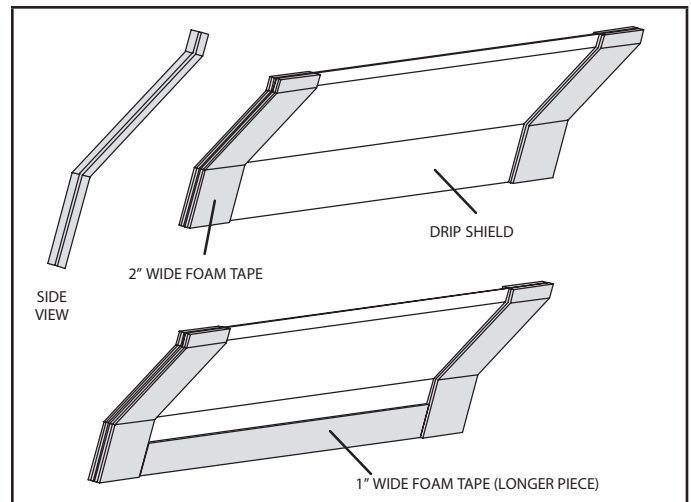


FIGURE 7. Applying Foam Tape to Drip Shield

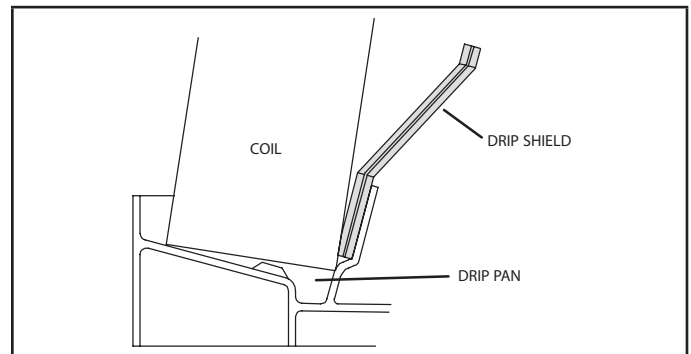


FIGURE 8. Downflow Drip Shields

- 6 - Replace the coil assembly and blower if you have removed it. Replace the coil access panel.
- 7 - Set the unit so that it is level. Using sheet metal screws, connect the return and supply air plenums as required.

NOTE - For downflow application, metal or Class I supply and return air plenums must be used.

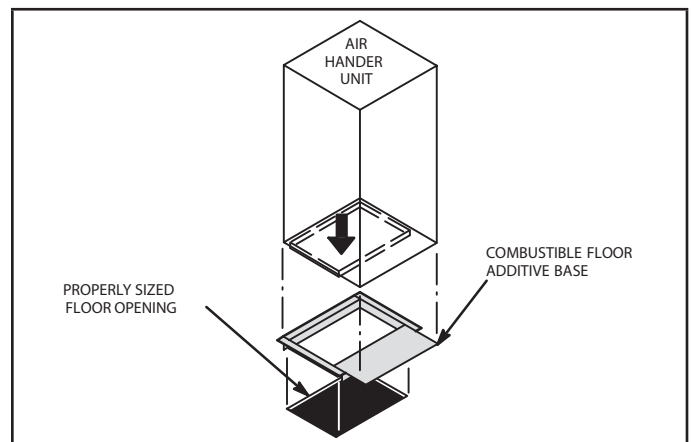


FIGURE 9. Downflow Combustible Flooring Base

- 8 - For downflow installation on combustible flooring, an additive base must be used as illustrated in figure 9. See CBA38MV Engineering Handbook for downflow combustible flooring base kits available for this air handler.

- 9 - Cut an opening appropriately sized for combustible base. Base dimensions are illustrated in figure 10. After opening has been cut, set the additive base into opening. Connect outlet air plenum to the additive base. Set the unit on the additive base so flanges of the unit drop into the base opening and seal against the insulation strips. The unit is now locked in place. Install return air plenum and secure with sheet metal screws.

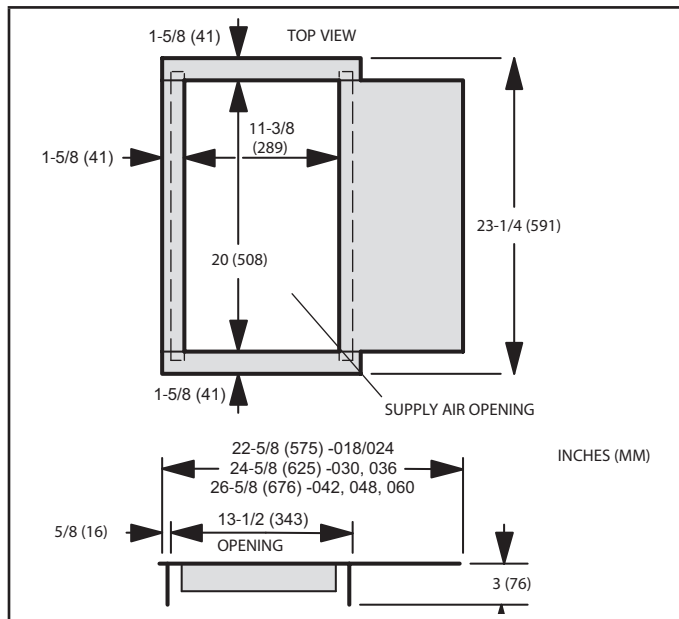


FIGURE 10. Downflow Combustible Base Dimensions

Brazing Connections

! WARNING

Polyol ester (POE) oils used with HFC-410A refrigerant absorb moisture very quickly. It is very important that the refrigerant system be kept closed as much as possible. DO NOT remove line set caps or service valve stub caps until you are ready to make connections.

! WARNING

Danger of fire. Bleeding the refrigerant charge from only the high side may result in pressurization of the low side shell and suction tubing. Application of a brazing torch to a pressurized system may result in ignition of the refrigerant and oil mixture. Check the high and low pressures before applying heat.

! IMPORTANT

To prevent the build-up of high levels of nitrogen when purging, it must be done in a well-ventilated area. Purge low-pressure nitrogen (1 to 2 psig) through the refrigerant piping during brazing. This will help to prevent oxidation and the introduction of moisture into the system.

! WARNING



Danger of explosion!

Can cause equipment damage, injury, or death.

When using a high pressure gas such as nitrogen to pressurize a refrigeration or air conditioning system, use a regulator that can control the pressure down to 1 or 2 psig (6.9 to 13.8 kPa).

! CAUTION

Brazing alloys and flux contain materials which are hazardous to your health.

Avoid breathing vapors or fumes from brazing operations. Perform operations only in well ventilated areas.

Wear gloves and protective goggles or face shield to protect against burns.

Wash hands with soap and water after handling brazing alloys and flux.

! WARNING



When using a high pressure gas such as nitrogen to pressurize a refrigeration or air conditioning system, use a regulator that can control the pressure down to 1 or 2 psig (6.9 to 13.8 kPa).


TABLE 3. CBA38MV Refrigerant Connections and Line Set Requirements

Model	Liquid Line	Vapor Line	L15 Line Sets
-018/024	3/8" (10mm)	3/4" (19mm)	L15 line set sizes are dependant on unit match-up. See Product Specifications (EHB) for outdoor unit to determine correct line set sizes
-030-036	3/8" (10mm)	3/4" (19mm)	
-042-048	3/8" (10mm)	7/8" (22mm)	
-060	3/8" (10mm)	7/8" (22mm)	Field fabricated

NOTE - Some applications may require a field-provided 7/8" to 1-1/8" adapter.

NOTE - When installing refrigerant lines longer than 50 feet, see the Lennox Refrigerant Piping Design and Fabrication Guidelines, CORP. 9351-L9, or contact Lennox Technical Support Product Applications for assistance.

PLEASE READ IMPORTANT ISSUES CONCERNING BRAZING OPERATIONS ON PAGE 10 BEFORE PROCEEDING.

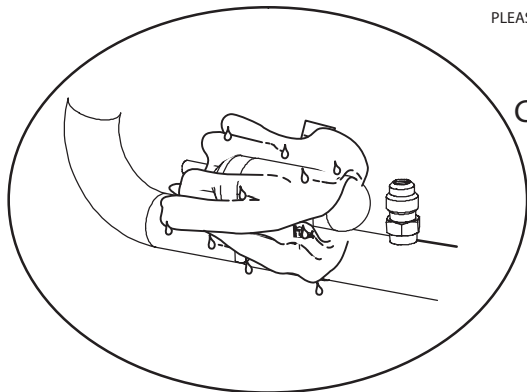


C USE A WET RAG TO PROTECT CTXV SENSING BULB WHEN BRAZING SUCTION LINE CONNECTIONS.

NOTE — REFER TO OUTDOOR UNIT INSTALLATION INSTRUCTIONS FOR REFRIGERANT PIPING SIZE REQUIREMENTS

NOTE - Use silver alloy brazing rods with five or six percent minimum silver alloy for copper-to-copper brazing, 45 percent alloy for copper-to-brass and copper-to-steel brazing.


A REMOVE ACCESS PANEL

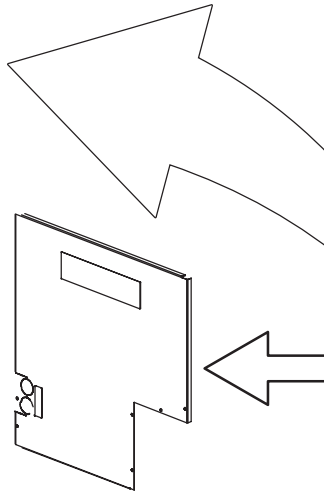

B REMOVE RUBBER PLUG FROM BOTH LIQUID AND SUCTION LINES


NOTE — CBA38MV SERIES UNITS USE NITROGEN OR DRY AIR AS A HOLDING CHARGE. IF THERE IS NO PRESSURE WHEN THE RUBBER PLUGS ARE REMOVED, CHECK THE COIL FOR LEAKS BEFORE INSTALLING.

D EITHER REMOVE OR PUSH PIPE WRAPPING BACK THROUGH HOLE IN PIPING PLATE BEFORE LINE SET CONNECTION AND BRAZING.

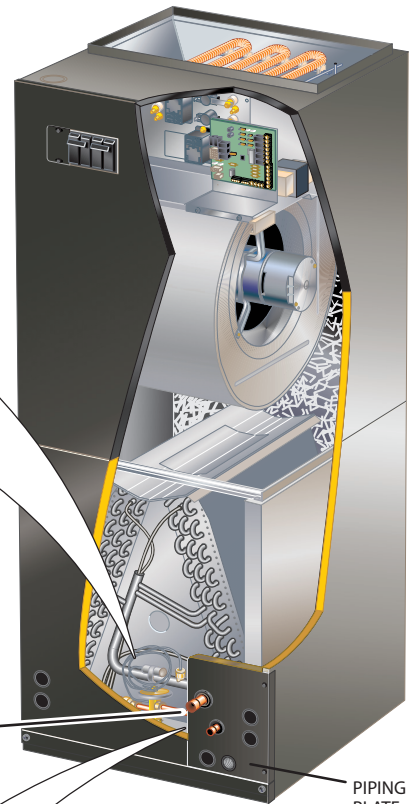


PIPING PLATE

F CONNECT GAUGES AND START NITROGEN FLOW

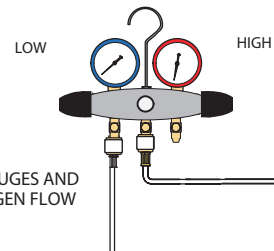

FLOW REGULATED NITROGEN (AT 1 TO 2 PSIG) THROUGH THE REFRIGERATION GAUGE SET INTO THE VALVE STEM PORT T CONNECTION ON THE OUTDOOR UNIT LIQUID LINE SERVICE VALVE AND OUT OF THE VALVE STEM PORT CONNECTION ON THE SUCTION SERVICE VALVE.

NITROGEN

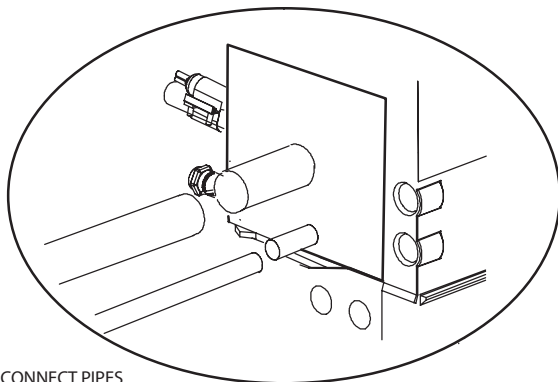


E CONNECT PIPES

NOTE — REFRIGERANT LINE SETS SHOULD BE ROUTED TO ALLOW FILTER ACCESSIBILITY.

G PLACE A WET RAG AGAINST PIPING PLATE AND AROUND THE SUCTION LINE CONNECTION. A

H BRAZE CONNECTION. ALLOW PIPE TO COOL BEFORE REMOVING WET RAG FROM CTXV SENSING BULB AND PIPING PANEL AREA.

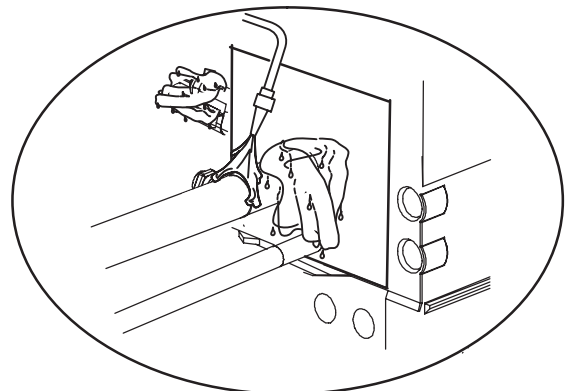

I REPEAT PREVIOUS PROCEDURE FOR LIQUID LINE.

REFER TO INSTRUCTIONS PROVIDED WITH OUTDOOR UNIT FOR LEAK TESTING, EVACUATING AND CHARGING PROCEDURES

FIGURE 11. Brazing Connections

Installing the Condensate Drain

⚠ IMPORTANT

After removal of drain pan plug(s), check drain hole(s) to verify that drain opening is fully open and free of any debris. Also check to make sure that no debris has fallen into the drain pan during installation that may plug up the drain opening.

MAIN DRAIN

Connect the main drain and route downward to drain line or sump. Do not connect drain to a closed waste system. See Figure 13 for typical drain trap configuration.

OVERFLOW DRAIN

It is recommended that the overflow drain is connected to an overflow drain line for all units. If overflow drain is not connected, it must be plugged with provided cap.

For downflow orientation, the overflow drain **MUST** be connected and routed to a overflow drain line. See Figure 12 for main and overflow drain locations based on coil orientation.

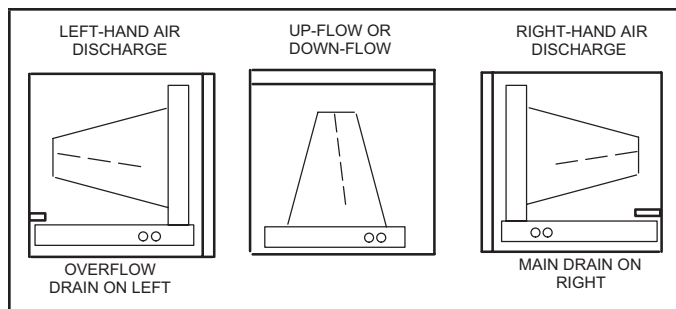


FIGURE 12. Main and Overflow Drain Locations Based on Coil Orientation

BEST PRACTICES

The following best practices are recommended for the condensate removal process:

- Main and overflow drain lines should **NOT** be smaller than both drain connections at drain pan.
- Overflow drain line should run to an area where homeowner will notice drainage.
- It is recommended that the overflow drain line be vented and a trap installed. Refer to local codes.
- Condensate drain lines must be configured or provided with a cleanout to permit the clearing of blockages and for maintenance without requiring the drain line to be cut.

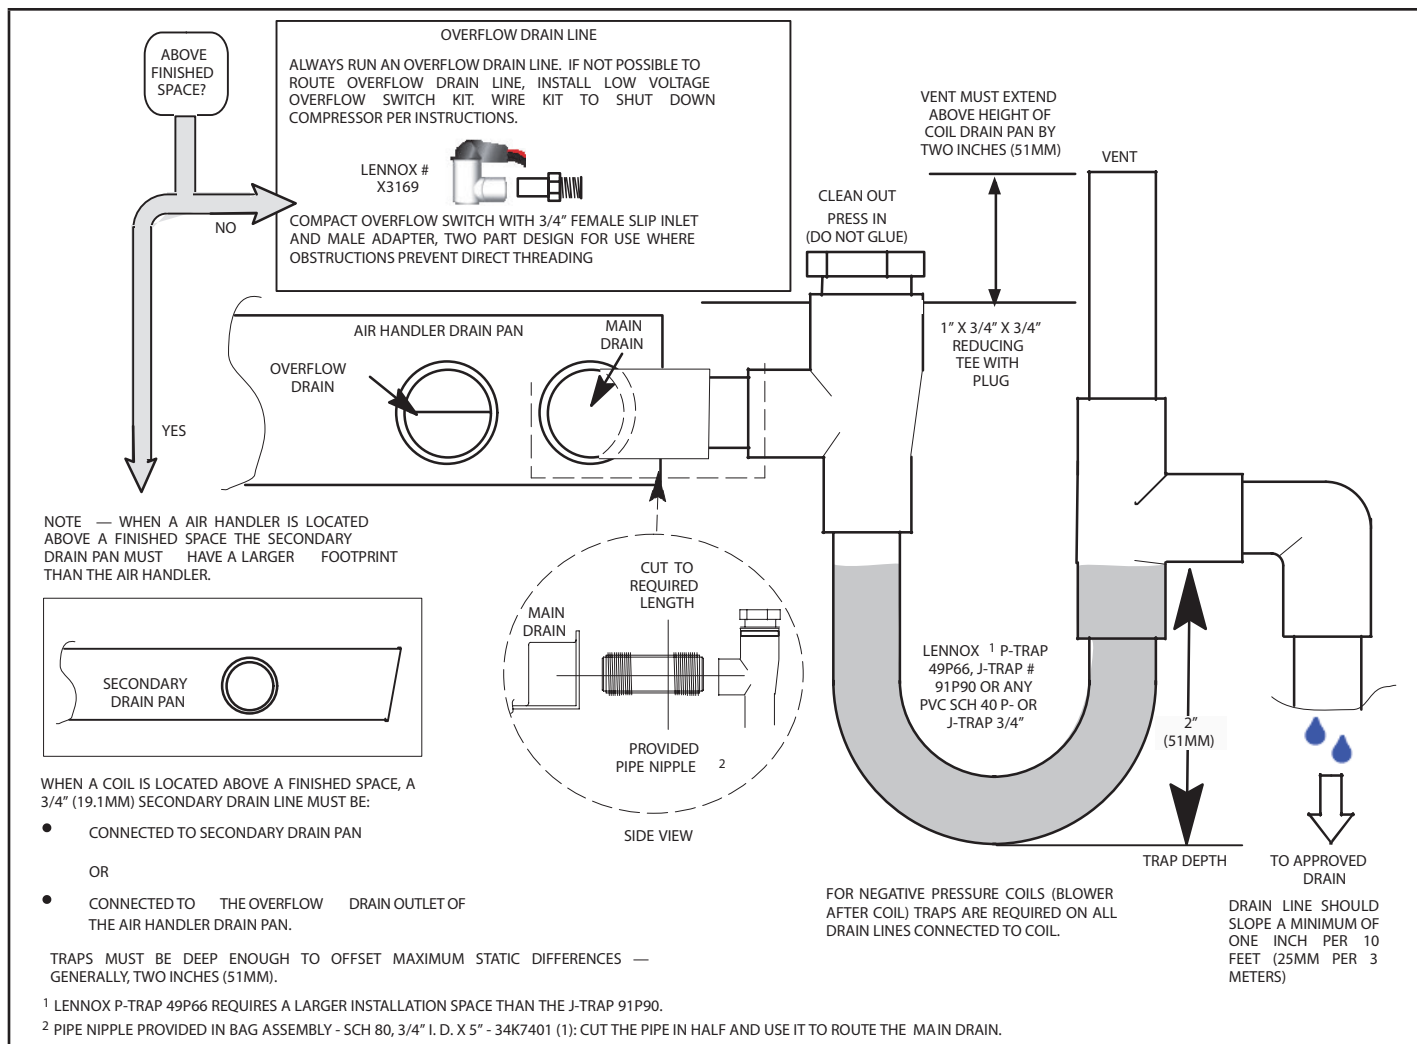


FIGURE 13. Typical Main and Overflow Drain Installations

Inspecting and Replacing Filters

⚠ IMPORTANT

Filter access door must be in place during unit operation. Excessive warm air entering the unit from unconditioned space may result in water blow-off problems.

Filters may be duct-mounted or installed in the cabinet. A filter is installed at the factory. Note that filter access door fits over access panel. Air will leak if the access panel is placed over the filter door.

Filters should be inspected monthly and must be cleaned or replaced when dirty to assure proper furnace operation.

To replace filter:

- 1 - Loosen the thumbscrews holding the filter panel in place.
- 2 - Slide the filter out of the guides on either side of cabinet.
- 3 - Insert new filter.
- 4 - Replace panel.

See table 4 for replacement filter sizes.

TABLE 4. Filter Dimensions

CBA38MV	Filter Size – In. (mm)
-018/024, -030, -036	20 x 20 x 1 (508 x 508 x 25)
-042, -048, -060	20 x 24 x 1 (508 x 610 x 25)

Sealing the Unit

⚠ WARNING

There must be an airtight seal between the bottom of the air handler and the return air plenum. Use fiberglass sealing strips, caulking, or equivalent sealing method between the plenum and the air handler cabinet to ensure a tight seal. Return air must not be drawn from a room where this air handler or any gas-fueled appliance (i.e., water heater), or carbon monoxide-producing device (i.e., wood fireplace) is installed.

Seal the unit so that warm air is not allowed into the cabinet. Warm air introduces moisture, which results in water blow-off problems. This is especially important when the unit is installed in an unconditioned area.

Make sure the liquid line and suction line entry points are sealed with either the provided flexible elastomeric thermal insulation, or field provided material (e.g. Armaflex, Permagem or equivalent). Any of the previously mentioned materials may be used to seal around the main and auxiliary drains, and around open areas of electrical inlets.

Field Control Wiring

WARNING

Electric Shock Hazard.

Can cause injury or death.

Foil-faced insulation has conductive characteristics similar to metal. Be sure there are no electrical connections within a 1/2" of the insulation. If the foil-faced insulation comes in contact with electrical voltage, the foil could provide a path for current to pass through to the outer metal cabinet. While the current produced may not be enough to trip existing electrical safety devices (e.g. fuses or circuit breakers), the current can be enough to cause an electric shock hazard that could cause personal injury or death.

Wiring must conform to the current National Electric Code ANSI/NFPA No. 70, or Canadian Electric Code Part I, CSA Standard C22.1, and local building codes. Refer to following wiring diagrams. See unit nameplate for minimum circuit ampacity and maximum over-current protection size.

WARNING

Run 24V Class II wiring only through specified low voltage opening. Run line voltage wiring only through specified high voltage opening. Do not combine voltage in one opening

Select the proper supply circuit conductors in accordance with tables 310-16 and 310-17 in the National Electric Code, ANSI/NFPA No. 70 or tables 1 through 4 in the Canadian Electric Code, Part I, CSA Standard C22.1.

Separate openings have been provided for 24V low voltage and line voltage. Refer to the dimension illustration of specific location.

CAUTION

USE COPPER CONDUCTORS ONLY.

WIRING CONNECTIONS

- 1 - Install line voltage power supply to unit from a properly installed circuit breaker.
- 2 - Ground unit at unit disconnect switch or to an earth ground.

NOTE – Connect conduit to the unit using a proper conduit fitting. Units are approved for use only with copper conductors. A complete unit wiring diagram is located on the back side of the unit's access panel.

- 3 - Install low voltage wiring from outdoor to indoor unit and from thermostat to indoor unit.

KEY	DESCRIPTION
A92	CONTROL INTEGRATED
B3	MOTOR-BLOWER
J48	JACK-MOTOR VARIABLE SPEED
J49	JACK-MOTOR VARIABLE SPEED
P8	PLUG-ELECTRIC HEAT
P48	PLUG-MOTOR VARIABLE SPEED
P49	PLUG-MOTOR VARIABLE SPEED
T1	TRANSFORMER-CONTROL

RECOMMENDED BLOWER SPEED TAP SELECTION					
SPEED TAP SELECTION					
MODEL	BLOWER COIL	COOL		HEAT	
		CONDENS- ING UNIT	HEAT PUMP	CONDENS- ING UNIT WITH ELECTRIC HEAT ONLY	HEAT PUMP WITH ELECTRIC HEAT
CBX40UHV/ CBX32MV	-018, -024 -030, -036	PIN #3	PIN #3	PIN #4	PIN #4
	-042	PIN #3	PIN #3	PIN #3	PIN #3
	-048	PIN #2	PIN #2	PIN #1	PIN #1
	-060	PIN #3	PIN #3	PIN #1	PIN #1
	-068	PIN #3	PIN #3	PIN #4	PIN #4
CBA38MV	-018/024 -030 -036	PIN #3	PIN #3	PIN #3	PIN #3
	-042	PIN #3	PIN #3	PIN #3	PIN #3
	-048	PIN #2	PIN #2	PIN #2	PIN #2
	-060	PIN #3	PIN #3	PIN #3	PIN #3

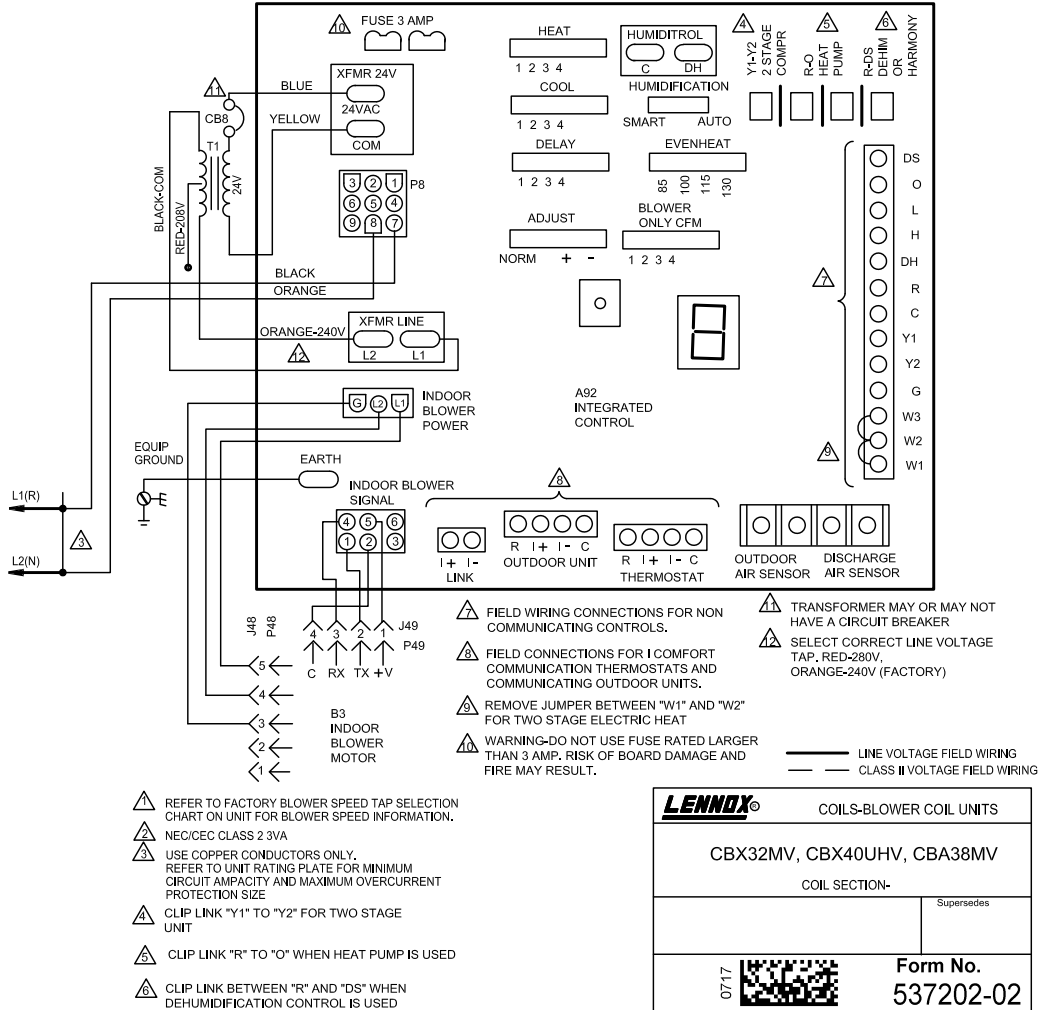


FIGURE 14. CBA38MV Air Handler Unit Typical Wiring Diagram

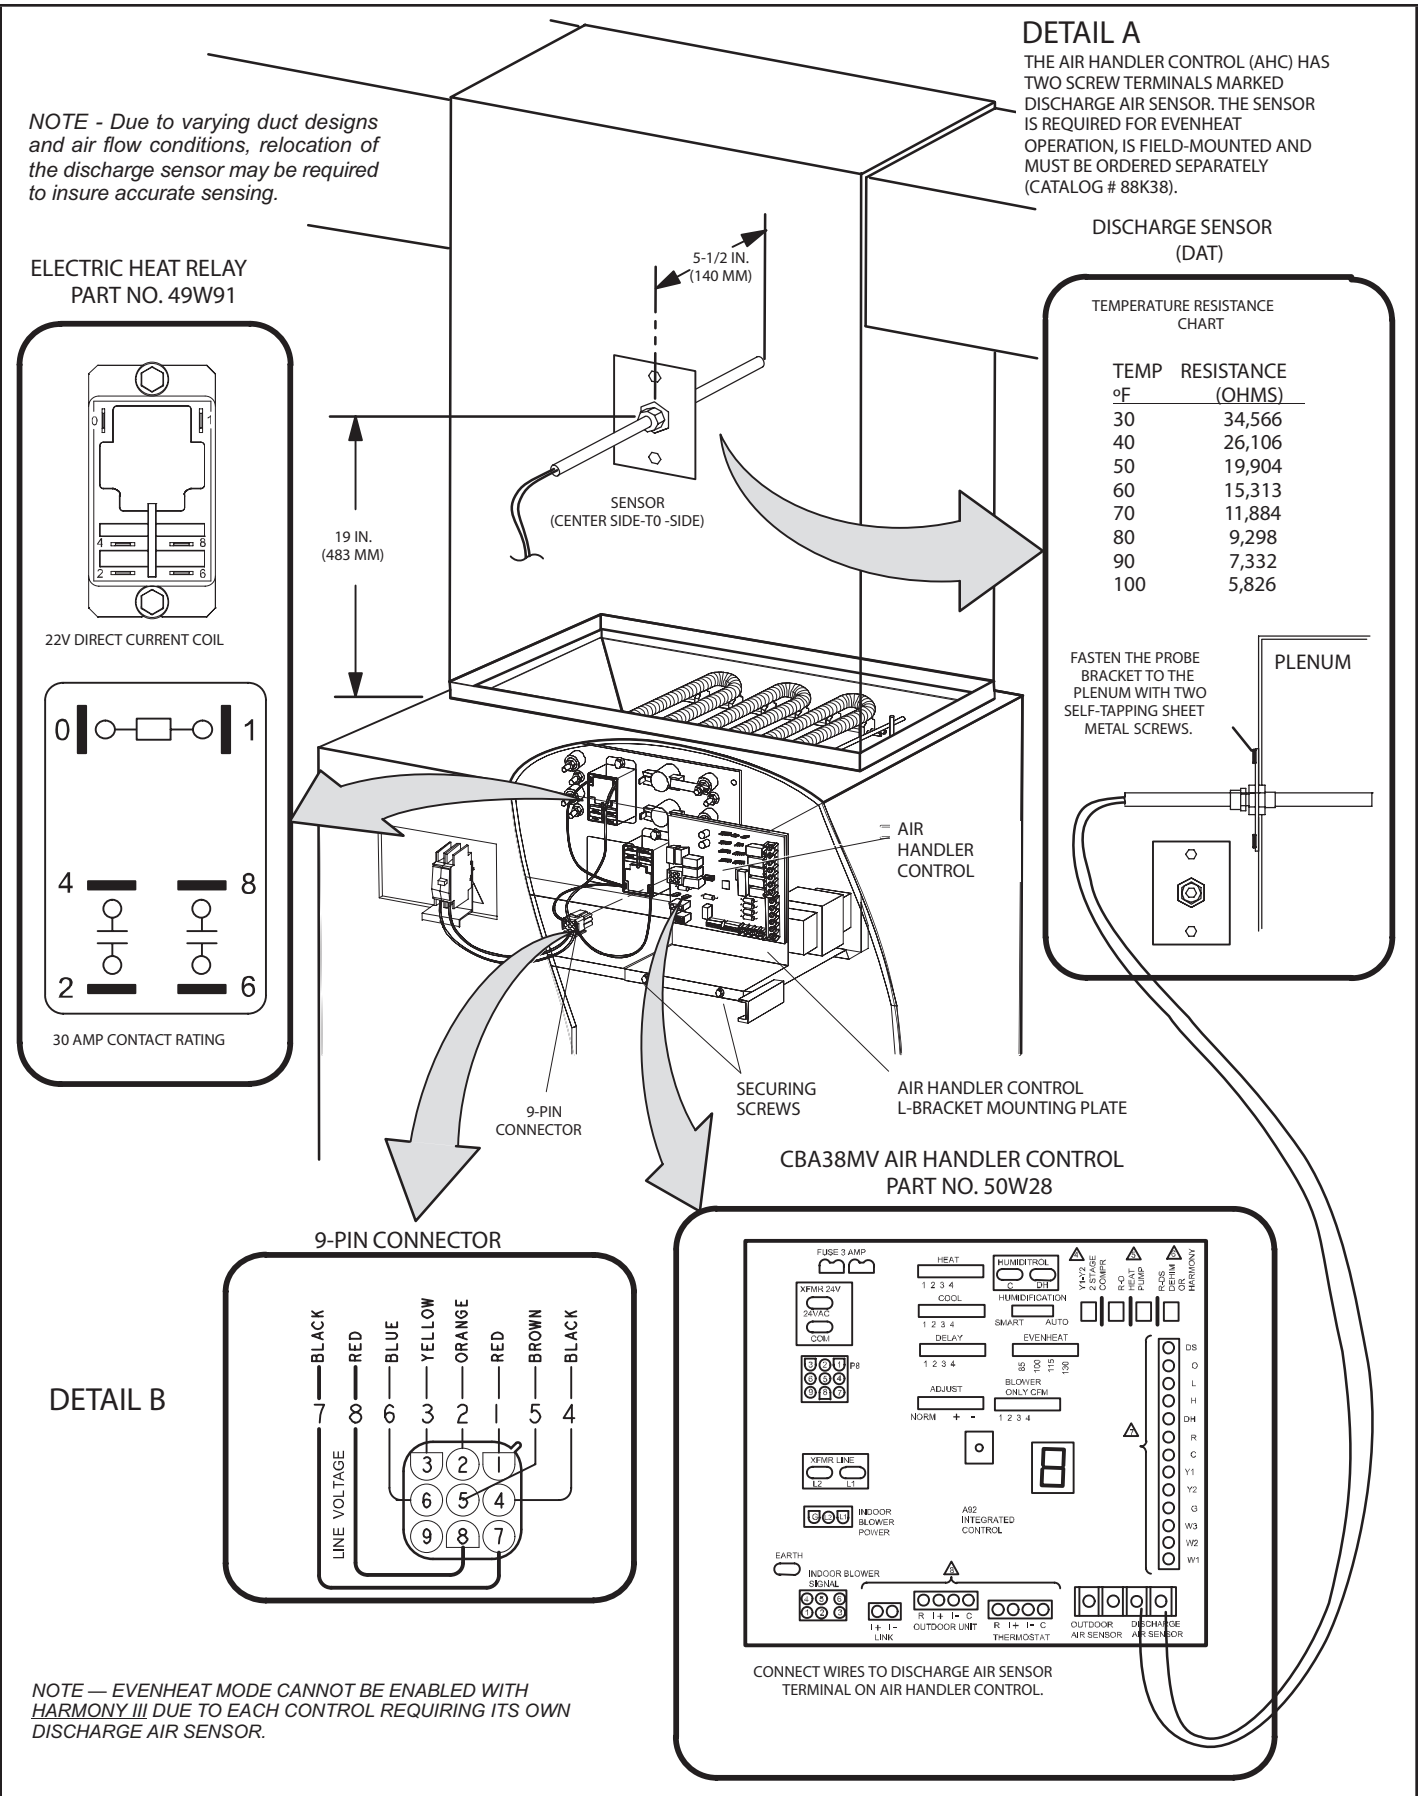


FIGURE 15. Component Connections

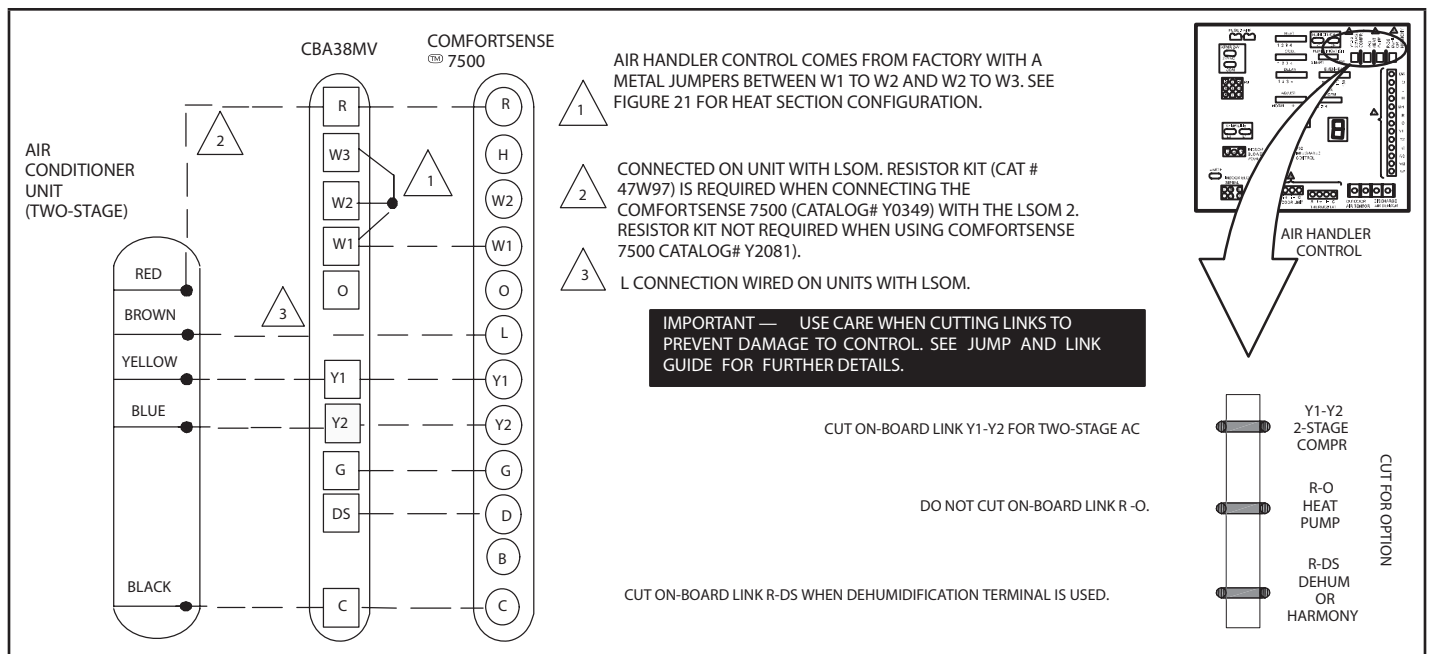


FIGURE 16. Control (Field Wiring) – Cooling Application (Non-Communicating)

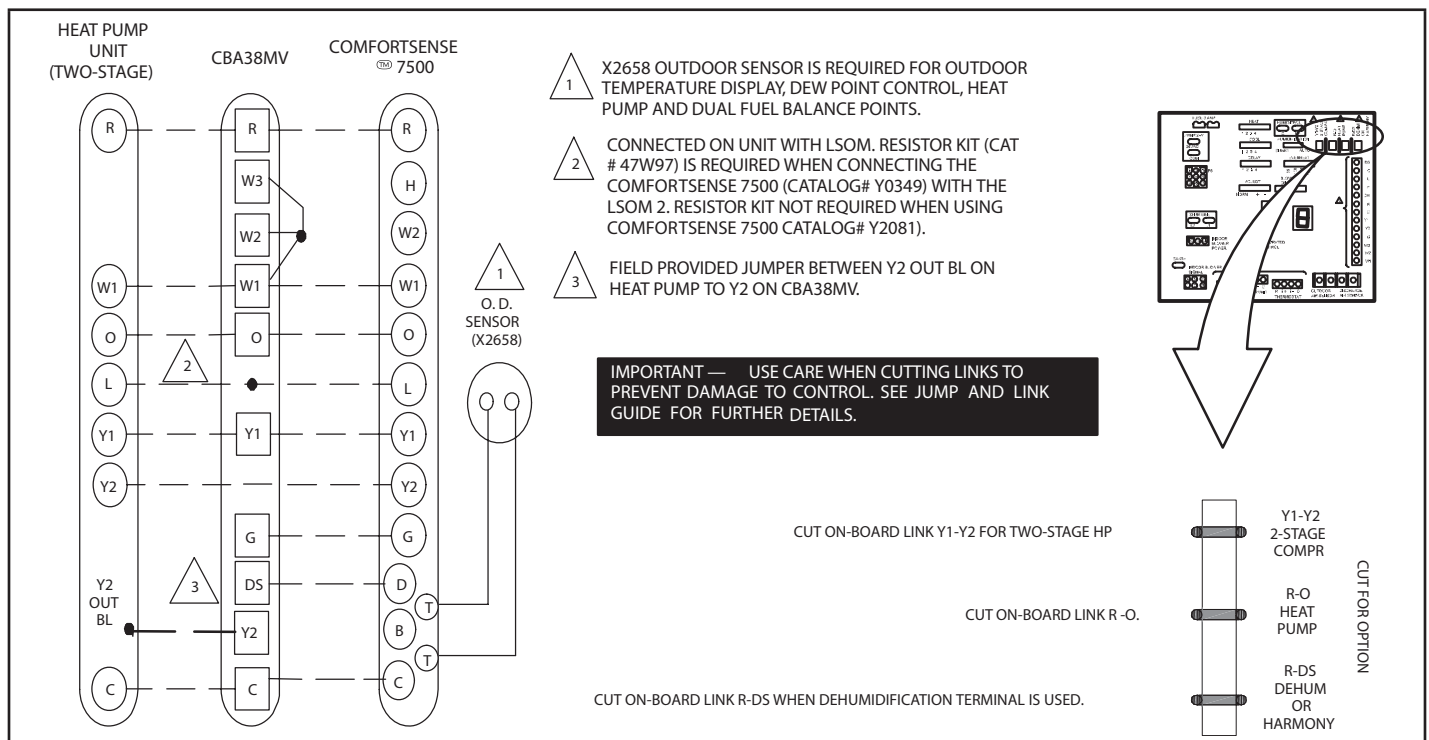


FIGURE 17. Control (Field Wiring) – Heat Pump (Non-Communicating)

CAUTION

ELECTROSTATIC DISCHARGE (ESD) Precautions and Procedures

Electrostatic discharge can affect electronic components. Take care during unit installation and service to protect the unit's electronic controls. Precautions will help to avoid control exposure to electrostatic discharge by putting the unit, the control and the technician at the same electrostatic potential. Touch hand and all tools on an unpainted unit surface before performing any service procedure to neutralize electrostatic charge.

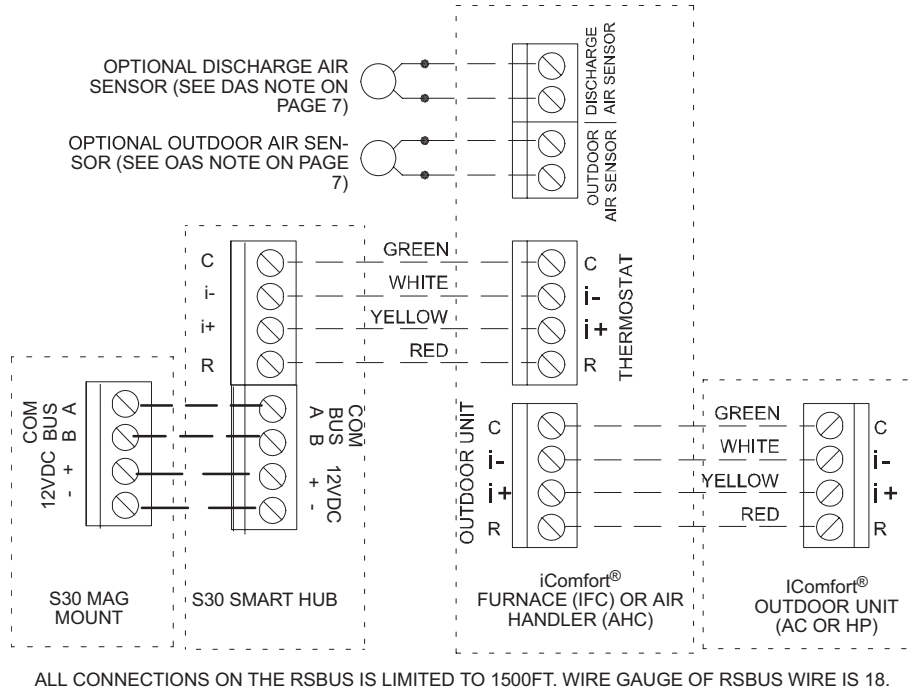


FIGURE 18. iComfort® Communicating System Wiring


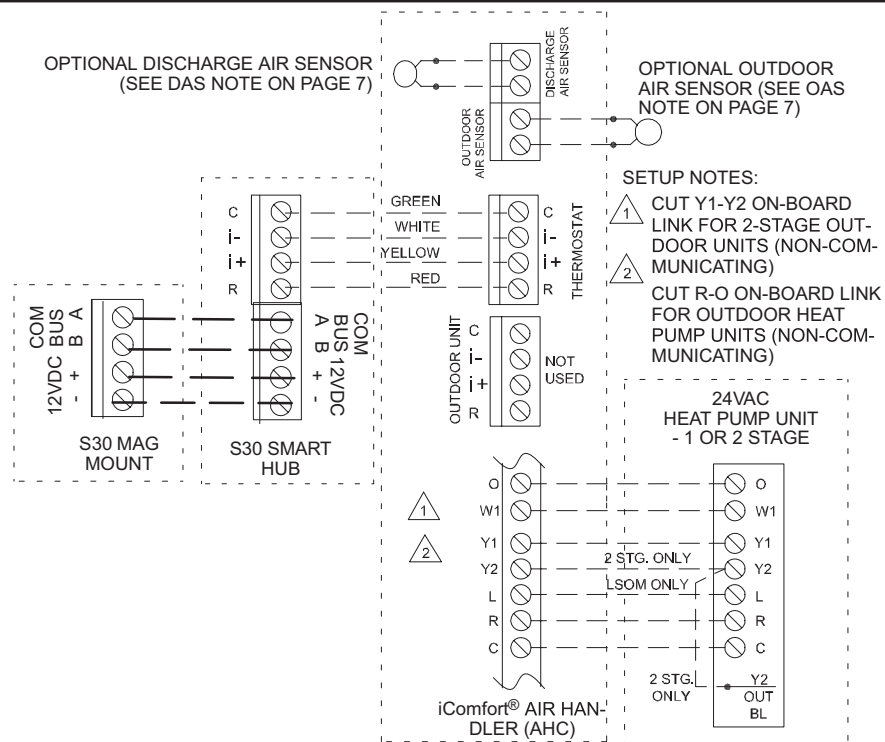


FIGURE 19. iComfort® Communicating Indoor / Non-Communicating Outdoor (HP) System Wiring


Components	
Unit	Type
Thermostat	ComfortSense® 7000 or 7500
Indoor	Conventional 24V
Outdoor	Conventional 24V

- ⚠ XP19-024 UNITS COME FACTORY WIRED FOR LOW OUTDOOR FAN SPEED ONLY. HIGH SPEED Y2 (BLUE WIRE) IS NOT CONNECTED. BE SURE TO CONNECT BLUE Y2 WIRE TO TERMINAL OF OUTDOOR RELAY.
- ⚠ Y1—Y2 JUMPER - ONLY REMOVE IF 2-STAGE COOLING
- ⚠ DS—Y1 JUMPER - MUST BE REMOVED FOR HUMIDITROL OPERATION
- ⚠ HEAT PUMP APPLICATIONS ONLY - REMOVE R—O JUMPER.






A108

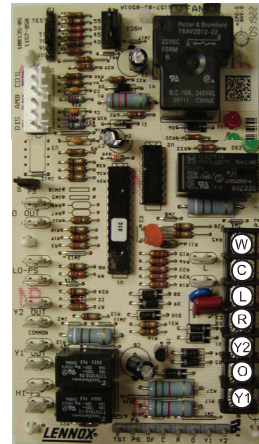

OUTDOOR UNIT DEFROST BOARD (HP)

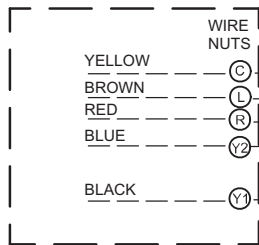

OUTDOOR UNIT CONTROL WIRES (AC)

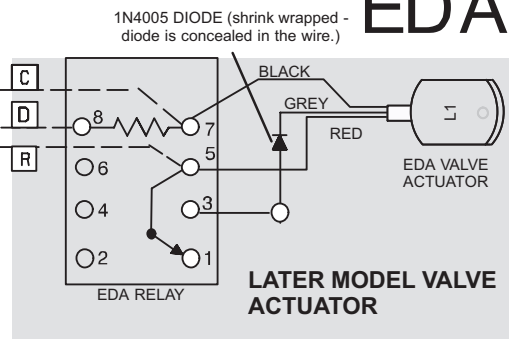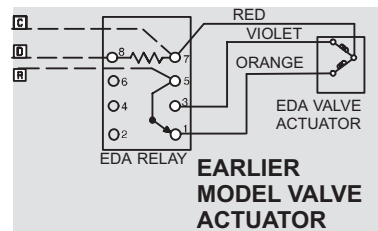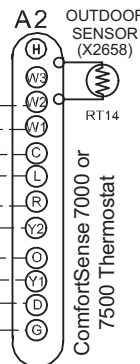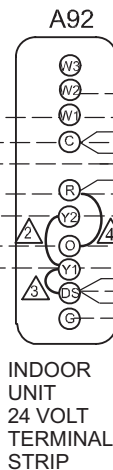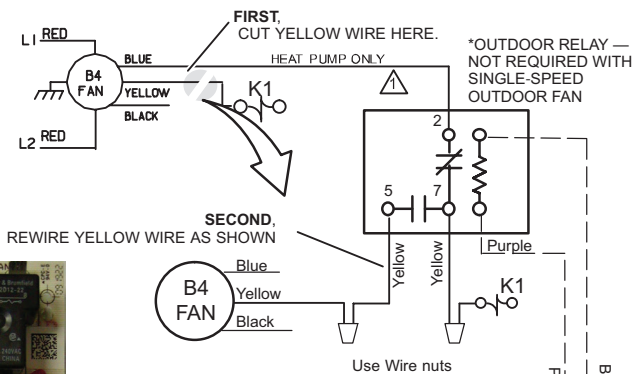

NUMBER OF WIRES REQUIRED—Indoor unit to:

System type	Humiditrol® EDA	Comfort Sense 7000 or 7500 Thermostats	Outdoor Unit	Thermostat to:
1 stage AC	3	7*	3	Outdoor Air Sensor
2 stage AC		8*	4	
1 stage HP		8*	5	
2 stage HP		9*	6	

*Includes conductor for 2-stage heat

FIGURE 20. Field Wiring (Non-Communicating Systems)

OUTDOOR UNITS (A175) - WIRE EITHER CONTROL IDENTICALLY
EARLY CONTROL
CURRENT CONTROL


A175






Operation sequence for dehumidification

1. REMOVE 24 VOLTS FROM DH AND/OR DS
2. THERMOSTAT CYCLES OUTDOOR UNITS TO Y2
3. INDOOR AND OUTDOOR FAN SPEEDS REDUCED

SEE W1 JUMPER DETAIL

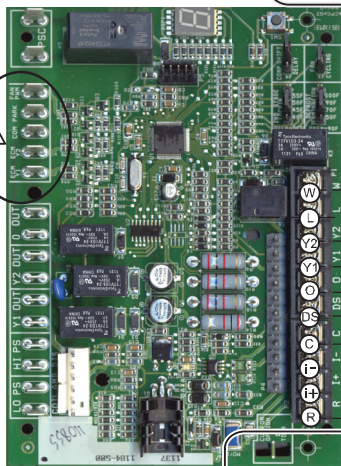

SEE TRACE CUT DETAIL

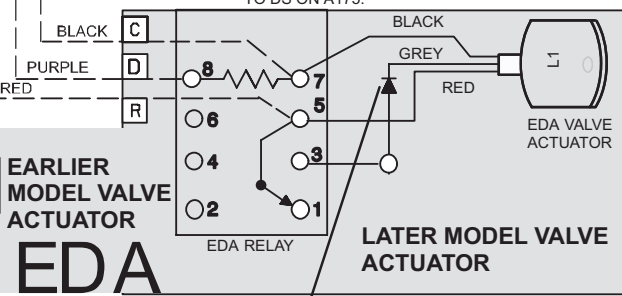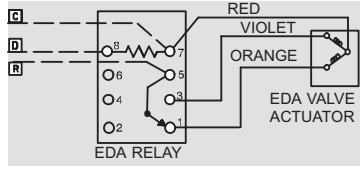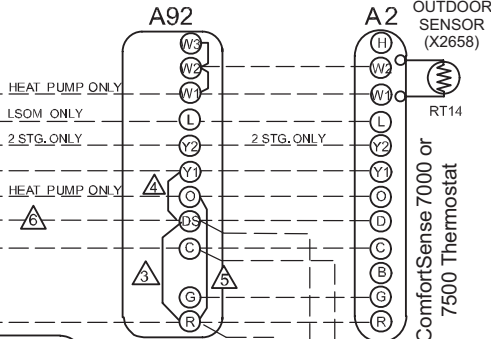


1N4005 DIODE (shrink wrapped - diode is concealed in the wire.)


Components

Unit	Type
Thermostat	ComfortSense® 7000 or 7500
Indoor	Conventional 24V
Outdoor	iComfort®-enabled

DS—R (W1) JUMPER - MUST BE CUT FOR HUMIDITROL OPERATION. SEE W1 JUMPER DETAIL.

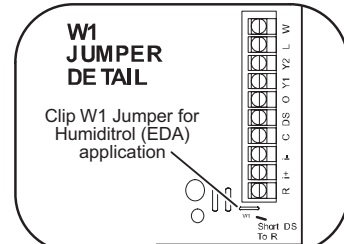

DS—R TRACE ON A175 - MUST BE CUT FOR HUMIDITROL OPERATION. SEE TRACE CUT DETAIL.

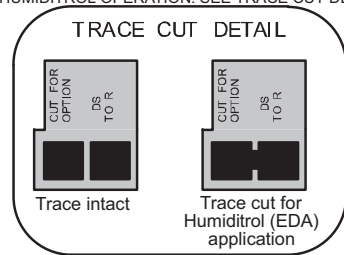

DS TO R ON A92 - ON-BOARD LINK MUST BE CUT FOR DEHUMIDIFICATION.

DS—Y1 JUMPER - MUST BE REMOVED FOR HUMIDITROL OPERATION

HEAT PUMP APPLICATIONS ONLY - REMOVE R—O JUMPER.

(2-STAGE ONLY) FOR HUMIDITROL OPERATION (EDA), CONNECT FIELD PROVIDED WIRE FROM DS ON A92 TO DS ON A175.

NUMBER OF WIRES REQUIRED—Indoor unit to:				Thermostat to:
System Type	Humiditrol® EDA	ComfortSense® 7000 or 7500 Thermostats	Outdoor Unit	Outdoor Air Sensor
1-stage AC	3	7	4	2
2-stage AC		8	5	
1-stage HP		9	6	
2-stage HP		10	7)	


FIGURE 21. 24V Field Wiring (Non-Communicating Systems)

OUTDOOR UNITS (A175) - WIRE EITHER CONTROL IDENTICALLY
EARLY CONTROL
CURRENT CONTROL

A175



SEE W1 JUMPER DETAIL.

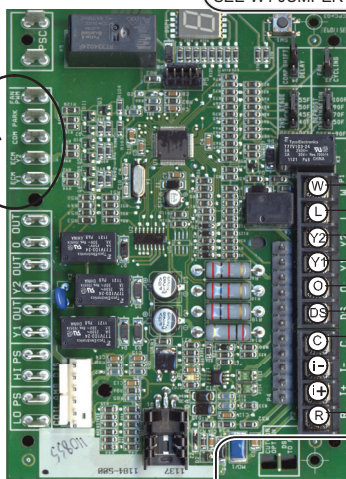


SEE TRACE CUT DETAIL.

Operation sequence for dehumidification


1. REMOVE 24 VOLTS FROM DH AND/OR DS
2. THERMOSTAT CYCLES OUTDOOR UNITS TO Y2
3. INDOOR AND OUTDOOR FAN SPEEDS REDUCED

A92

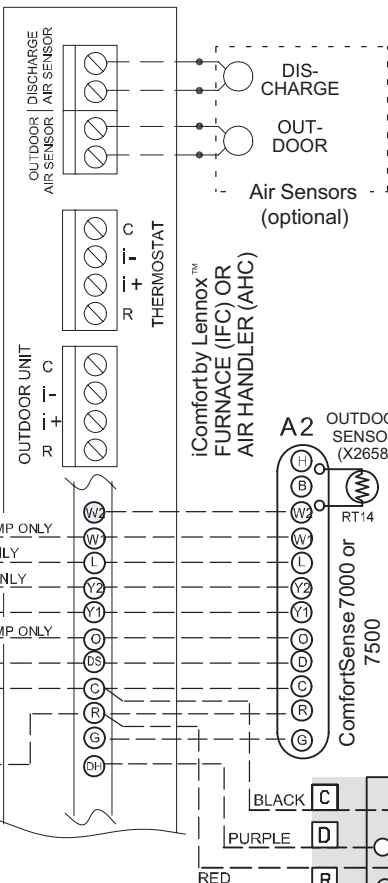


Components	
Unit	Type
Thermostat	ComfortSense® 7000 or 7500
Indoor	iComfort®-enabled
Outdoor	iComfort®-enabled



⚠ DS—R (W1) JUMPER - MUST BE CUT FOR HUMIDITROL OPERATION. SEE W1 JUMPER DETAIL.

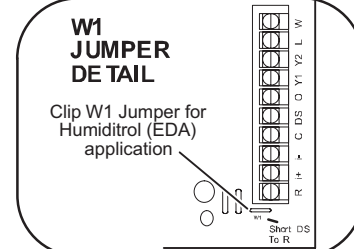

⚠ DS—R TRACE - MUST BE CUT FOR HUMIDITROL OPERATION. SEE TRACE CUT DETAIL.

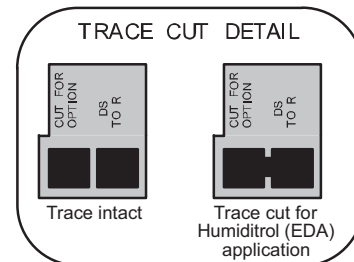

1N4005 DIODE (shrink wrapped - diode is concealed in the wire.)

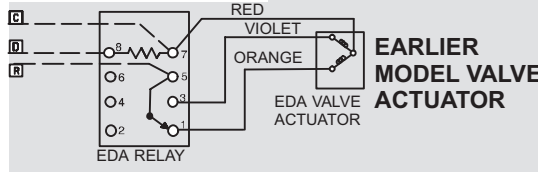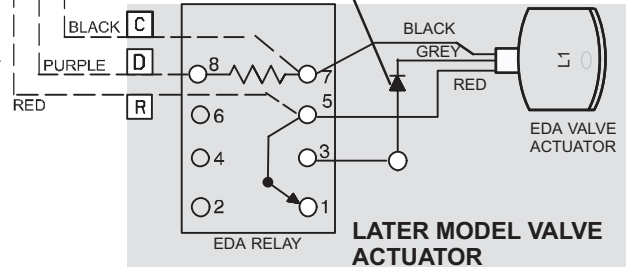

EDA

NUMBER OF WIRES REQUIRED—Indoor unit to:


Air Sensors (Optional)

System Type	Humiditrol® EDA	ComfortSense® 7000 or 7500 Thermostats	Outdoor unit	Outdoor	Discharge
1-stage AC	3	8	4	2	2
2-stage AC		10	5		
1-stage HP		8	6		
2-stage HP		10	7		

FIGURE 22. Field Wiring (Non-Communicating Systems)

OUTDOOR UNITS (A175) - WIRE EITHER CONTROL IDENTICALLY
EARLY CONTROL
CURRENT CONTROL

A175

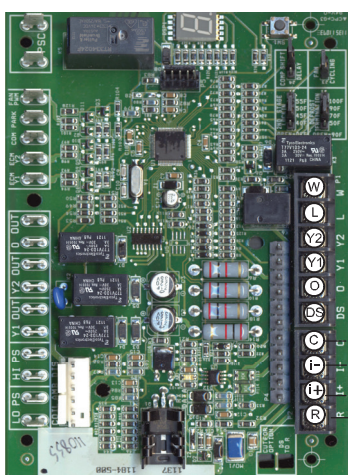

⚠ IN COMMUNICATING SYSTEM, THERMOSTAT DS INPUT IS NOT USED AND DEHUMIDIFICATION IS CONTROLLED VIA DEHUMIDIFICATION RELAY THAT CONTROLS 24VAC OUTPUT ON DH TERMINAL.


Components	
Unit	Type
Thermostat	iComfort®
Indoor	iComfort®-enabled
Outdoor	iComfort®-enabled

Operation sequence for dehumidification

1. REMOVE 24 VOLTS FROM DH AND/OR DS
2. THERMOSTAT CYCLES OUTDOOR UNITS TO Y2
3. INDOOR AND OUTDOOR FAN SPEEDS REDUCED

MAXIMUM TOTAL LENGTH OF ALL CONNECTIONS ON THE RS-BUS IS LIMITED TO 1500FT.
WIRE GAUGE OF RS-BUS WIRE IS 18.

iComfort by Lennox™
FURNACE (IFC) OR
AIR HANDLER (AHC)

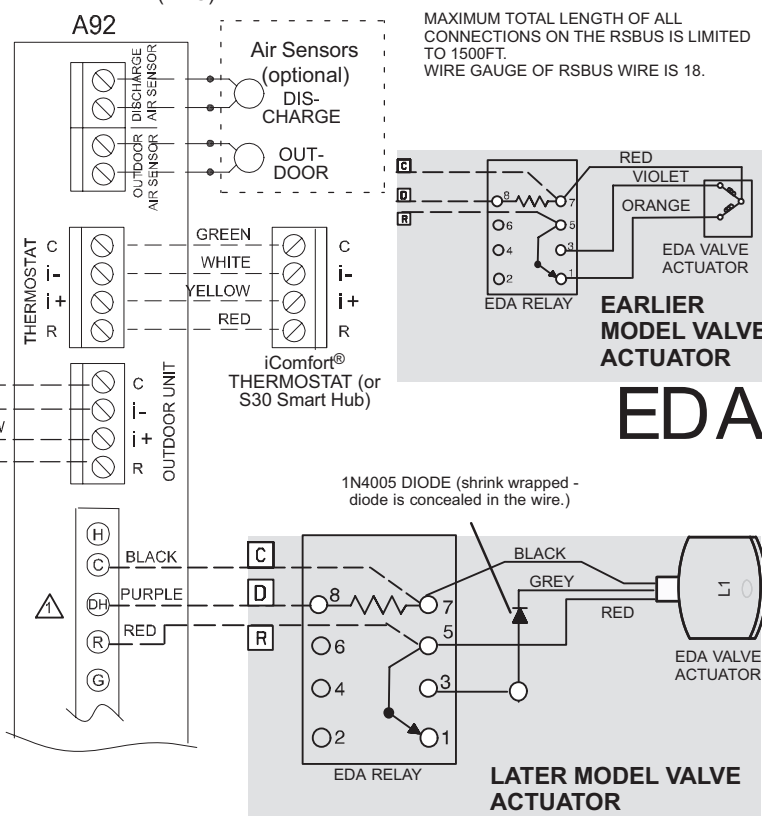

EDA

NUMBER OF WIRES REQUIRED—Indoor unit to:				Air Sensors (Optional)	
System Type	Humiditrol® EDA	iComfort® Thermostat	Outdoor unit	Discharge	Outdoor
1-stage AC	3	4	4	2	2
2-stage AC					
1-stage HP					
2-stage HP					

FIGURE 23. Field Wiring (Communicating Systems)

SENSOR CONNECTIONS AND WIRING REQUIREMENTS

The following are sensor connections and wiring requirements for the discharge air and outdoor air sensors.

Discharge Sensor (DAT)

The Air Handler Control has two screw terminals marked **Discharge Air Sensor**. The sensor is **REQUIRED** for EVENHEAT operation and is field mounted and ordered separately using Lennox Catalog # 88K38.

In the EVENHEAT mode, the discharge air sensor cycles the electric heating elements as needed to maintain the Air Handler control EVENHEAT jumper selected discharge setpoint.

The discharge air sensor should be mounted downstream of the electric heat elements as illustrated in figure 15, detail A. It must be placed in a location with unobstructed airflow, where other accessories (such as humidifiers, UV lights, etc.) will not interfere with its accuracy.

Wiring distance between the Control and the discharge air sensor should not exceed 10 feet (3 meters) when wired with 18-gauge thermostat wire.

Outdoor Air Sensor

This is a two screw terminal for connection to a Lennox X2658 outdoor temperature sensor. The Control takes no action on the sensor status other than to communicate the temperature to the RSBus network. Wiring distance between the AHC and outdoor temperature sensor should not exceed 200 feet when wired with 18-gauge thermostat wire.

- Minimum temperature: -40°F (-40°C)
- Maximum temperature: 70°F (158°C)

AIR HANDLER CONTROL 9-PIN CONNECTOR (P8)

- 1 - Air Handler (no electric heat) – Two wire factory harness (wired to pins 7 and 8) which provides 230 VAC power to Air Handler Control.
- 2 - Air Handler (with electric heat) – Eight wire factory harness (all pin position are wired as noted in table 5).

NOTE - See figure 15, detail B for wire colors.

TABLE 1. Electric Heat Connection (P8)

Position	Function / Description
1	Heat stage 1 relay coil
2	Heat stage 2 relay coil
3	Relay coil return
4	Heat stage 3 relay coil
5	Heat stage 4 relay coil
6	Heat stage 5 relay coil
7	L1 230VAC supply from heater kit
8	L2 230VAC supply from heater kit
9	Not used

CONTROL CONNECTIONS AND WIRING REQUIREMENTS

This section provides information on communicating and non-communicating control connections and wire run lengths.

TABLE 2. Air Handler Control Connections – Communicating

Label	Label	Function
Thermostat	R	24VAC
	i+	RSbus data high connection
	i-	RSbus data low connection
	C	24VAC command (ground)
Outdoor Unit	R	24VAC
	i+	RSbus data high connection
	i-	RSbus data low connection
	C	24VAC command (ground)
Link	i+	Not used
	i-	

TABLE 3. Run Length – Communicating

Wire Run Length	AWG #	Insulation / Core Types
Maximum length or wiring for all connections on the RSbus is limited to 1500 feet (457 meters)	18	Color-coded, temperature rating 95°F (35°C) minimum, solid core. (Class II Rated Wiring)

TABLE 4. Run Length – Non-Communicating

Wire Run Length	AWG #	Insulation / Core Types
Less than 100' (30m)	18	Color-coded, temperature rating 95°F (35°C) minimum, solid core. (Class II Rated Wiring)
More than 100' (30m)	16	

TABLE 5. Air Handler Control Connections

Indoor Control Terminal Label	Function		
	Non-Communicating Room Thermostat (Indoor and Outdoor -24 volts)	Indoor Communicating Outdoor Non-Communicating	Full Communication (Indoor & Outdoor)
W1 (Input)	Indicates a first-stage heating demand. This input is an anticipator for the thermostat.	N/A	N/A
W2 (Input)	Indicates a second-stage heating demand. W1 input must be active to recognize second-stage heat demand.	N/A	N/A
W3 (Input)	Indicates a third-stage heating demand. W1 and W2 inputs must be active to recognize third-stage heat demand.	N/A	N/A
Y1 & Y2 (Input/Output)	Room thermostat inputs 24 volts to the Y1 and Y2 terminals on the indoor control. The 24 volt signal is then passed through to the outdoor unit. During a second-stage demand, both Y1 and Y2 are active. The Y1 terminal is connected to Y2 by link (Solid jumper on control that would be cut for 2 stage applications)	The room thermostat communicated with the indoor control. The indoor control outputs 24 volts on its Y1 and Y2 terminals which are hard wired to the non-communicating outdoor unit.	In a full communicating system, no wiring is required on Y1 and Y2 terminals.
G (Input)	Indicates a 24 volt indoor blower demand.	In a communicating system, "G" input to indoor control is used by non-communicating IAQ devices (such as LVCS, HRV or ERV) to ensure indoor blower demand.	In communicating system "G" input to indoor control is used by non-communicating IAQ devices (such as LVCS, HRV or ERV) to ensure indoor blower demand.
C	The C terminal shall interconnect the signal ground of the room thermostat with secondary transformer ground (TR) and chassis ground (GND)		
R	The R terminal shall be capable of providing the power to the thermostat and all the associated loads.		
O (Input/Output)	Room thermostat inputs 24 volts to the O terminal on the indoor control. The O terminal is connected to R by link (Solid jumper on control that would be cut if unit was a heat pump)	The room thermostat communicated with the indoor control. The indoor control outputs 24 volts on its O terminals which are hard wired to the non-communicating outdoor unit. If there is 24 volts on O, the reversing valve will be energized and the outdoor unit will run in the cooling mode. If O does not have 24 volts, the outdoor unit will run in heating mode.	In a full communicating system, O terminal is not wired.
DS (Input)	Used for Harmony III zoning systems, or thermostat with dehumidification capability. The DS terminal is connected to R by link (Solid jumper on control that would be cut if for the above applications). Harmony III control - This will allow the control to vary the voltage signal to the indoor blower motor to control required CFM. Dehumidification - Allow a 24 volt signal on the DS to turn off and on the dehumidification mode.	N/A	N/A
DH (Output)	The DH terminal provides a 24VAC output for dehumidification needs in communicating systems.		
H (Output)	The H terminal provides a 24VAC output for humidification needs in both communicating and non-communicating mode.		
L (Input)	The L terminal is provided for connection to devices with Lennox System Operation Monitor (LSOM) capabilities. The control interprets the fault signals and transmits them as an alarm message on the communication line. There are ten (10) identified LSOM fault codes. Each is mapped to the communication Alarm codes.		

JUMPER & LINK GUIDE

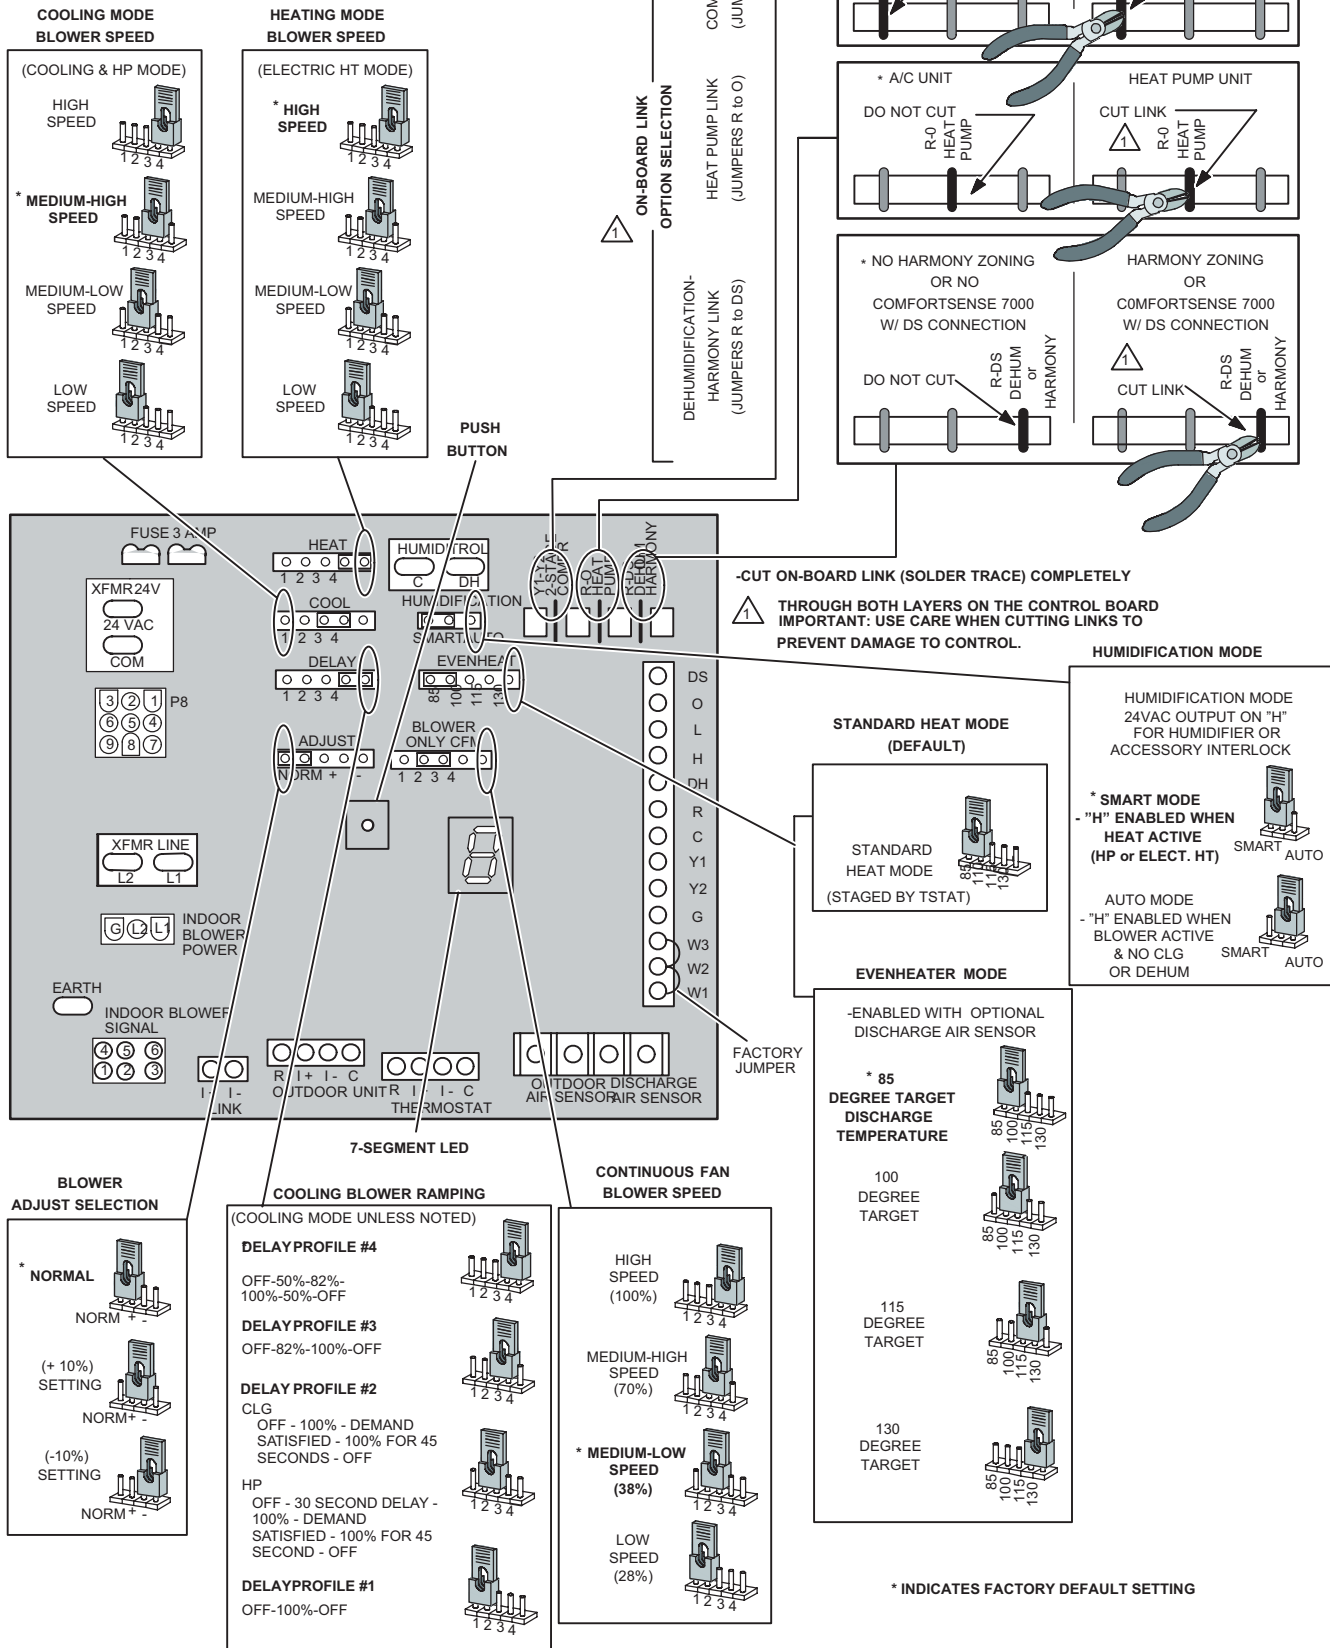


FIGURE 24. Air Handler Configuration

Air Handler Control Button, Display and Jumpers

Use figure 24 as a reference for jumper settings. If any of the referenced jumpers are missing, the Air Handler Control will display Error Code **130** as per table 10, and the Air Handler Control will automatically use the **factory default** setting shown in figure 24.

⚠ IMPORTANT

Before changing any clippable links or jumper settings, make sure the motor has completely stopped. Any changes will not take place while the motor is running.

PUSH BUTTON

An on-board push button is provided for the purpose of placing the Air Handler Control in different operation modes and can be used to recall stored error codes. When button is pushed and held, Air Handler Control will cycle through a menu of options depending on current operating mode. Every three seconds a new menu item will be displayed. If the button is released while that item is shown on the display, Air Handler Control will enter displayed operating mode, or execute defined operation sequence for that menu option. Once all items on menu have been displayed the menu resumes from the beginning (if button is still held).

- 1 - Press the diagnostic push button and hold it to cycle through a menu of options. Every five seconds a new menu item will be displayed. Release the button when the desired mode is displayed.
- 2 - When the solid "E" is displayed, the control enters the Error Code Recall mode. Error Code Recall mode menu options: No change (displaying error history) remains in Error Code Recall mode; solid "≡" exits Error Code Recall mode; and solid "c" clears the error history. Must press button while flashing "c" is displayed to clear error codes
- 3 - When the solid "-" is displayed, the control enters the applicable mode. Field configuration mode menu options: Solid "C" starts pressure switch calibration; blinking "-" exits current active mode.

JUMPERS

Jumpers are used for non-communicating mode only.

- 1 - **Humidification** – Controls the status of **H** terminal on the thermostat block. Configurations are as follows:
 - If jumper is installed in **SMART** Humidification position (Default), **H** terminal is active if heat demand is present and indoor blower is running.
 - If jumper is installed in **AUTO** Humidification position, **H** terminal is energized whenever indoor blower is running.
- 2 - **EvenHeat** – Target Discharge Air Temperature selection is used to set discharge air temperatures for EvenHeat operation.

NOTE - Optional Discharge Air Temperature Sensor, Lennox Catalog # 88K38 is **REQUIRED** for **EVENHEAT** operation and must be ordered separately.

- 3 - **Blower Only CFM** – Used to select Indoor blower CFM for continuous operation.
- 4 - **Heat** – Used to select Indoor blower CFM for electrical heat by placing the jumper in proper position. Actual CFM values for different air handler sizes are shown in Targeted CFM tables starting on page 30.
- 5 - **Cool** – Used to select cooling indoor blower CFM by placing the jumper in proper position. Actual CFM values for different air handler sizes are shown in Targeted CFM tables starting on page 30.
- 6 - **Adjust** - Used to select the indoor blower CFM adjustment value by placing the jumper in appropriate position.
 - If **NORM** is selected, indoor blower runs at normal speeds.
 - If + is selected, indoor blower runs at approximately 10% higher speed than **NORM** setting.
 - If - is selected, indoor blower runs at approximately 10% lower speed than **NORM** setting.


If the jumper is missing, the Air Handler Control will activate the *Configuration Jumper is Missing* alarm in and will automatically use the default factory setting in table 10. See figure 24 for jumper configurations. Actual CFM values for different air handler sizes are shown in Targeted CFM tables starting on page 26.

- 7 - **Delay** – Indoor blower cooling profile, delay for cooling and heat pump operations.
 - For heat pump **heating** operation only delay profiles 1 and 2 are applicable. If profiles 3 or 4 have been selected, heat pump operation will use profile 1 only.
 - For heat pump **cooling** operation all 4 profiles are operational.


If the jumper is missing, the Air Handler Control will activate the *Configuration Jumper is Missing* alarm and will automatically use the default factory setting in table 10. See figure 24 for jumper configurations.

Delay Profile 1

- A - When cool or heat demand is initiated, motor ramps up to 100% and runs at 100% until demand is satisfied.
- B - Once demand is met, motor ramps down to stop.

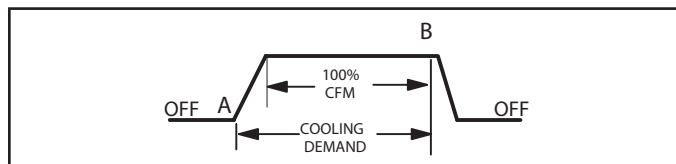


Delay Profile 2 Cooling – Air Conditioner and Heat Pump

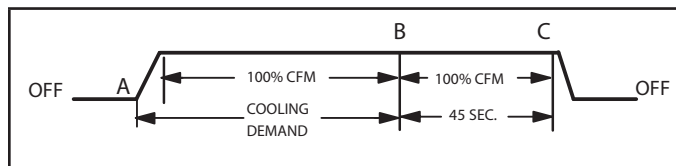


- A - When cool demand is initiated, motor ramps up to 100% and runs at 100% until demand is satisfied.
- B - Once demand is met, motor runs at 100% for 45 seconds.
- C - Motor ramps down to stop.

Heating – Heat Pump Only

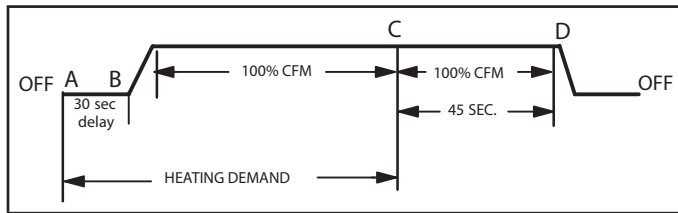

- A - When heat demand is initiated, 30 seconds **motor on** delay starts.
- B - After the **motor on** delay expires, motor ramps up to 100% and runs at 100% until demand is satisfied.
- C - Once demand is met, motor runs at 100% for 45 seconds.
- D - Motor ramps down to stop.


Delay Profile 3

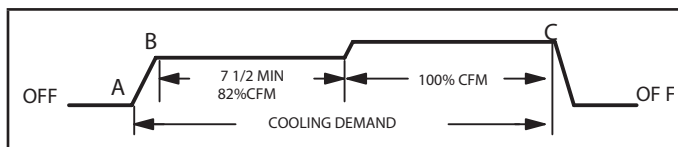

- A - When cooling demand is initiated, motor ramps up to 82%.

- B - Motor runs at 82% for approximately 7.5 minutes and then ramps up to 100% (unless the demand has been satisfied) and motor runs at 100% until demand is satisfied.
- C - Once demand is met, motor ramps down to stop.

Delay Profile 4

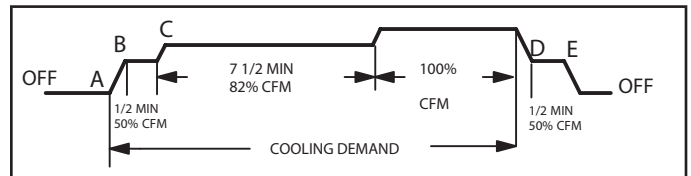

- A - When cooling demand is initiated, motor ramps up to 50%.
- B - Motor runs at 50% for 30 seconds and ramps up to 82%.
- C - Motor runs at 82% for approximately 7.5 minutes and then ramps up to 100% (unless the demand has been satisfied) and motor runs at 100% until demand is satisfied.
- D - Once demand is met, motor runs at 50% for 30 seconds.
- E - Motor ramps down to stop.

DISPLAY

An on-board single character LED display (see figure 20 for LED display location) indicates general system status information such as mode of operation, indoor blower CFM and error codes. Multi-character strings are displayed with character ON for one second, OFF for 0.5 seconds and one second pause between the character groups.

TABLE 6. AHC System Status Codes

AHC Single Character Display	Action
Letter or Number	Unit Size Code displayed represents air handler model size and capacity . See <i>Configuring Unit Size Codes</i> in figure 22.
≡	If three horizontal bars are displayed, AHC does not recognize air handler model size and capacity. See <i>Configuring Unit Size Codes</i> in Figure 22.
.	Idle mode (decimal point / no unit operation)
<i>A</i>	Cubic feet per minute (cfm) setting for indoor blower (1 second ON, 0.5 second OFF) / cfm setting for current mode displayed . Example: <i>A 1200</i>
<i>C</i>	Cooling stage (1 second ON, 0.5 second OFF) / 1 or 2 displayed / Pause / cfm setting displayed / Pause / Repeat codes). Example <i>C 1</i> or <i>C 2</i>
<i>d</i>	Dehumidification mode (1 second ON) / 1 second OFF) / cfm setting displayed / Pause / Repeat Codes)
<i>d F</i>	Defrost mode. (Y, W and O call)
<i>H</i>	Heat Stage (1 second ON, 0.5 second OFF) / 1 or 2 displayed / Pause / cfm setting displayed / Pause / Repeat codes. Example: <i>H 1</i> or <i>H 2</i> or <i>H 3</i>
<i>h</i>	Variable Capacity Heat (1 second ON, 0.5 second OFF) / % of input rate displayed / Pause/ cfm setting / Pause/ Repeat codes. Example: <i>h 1</i> or <i>h 2</i>
<i>U</i>	Discharge air sensor temperature (indoor blower must be operating) <i>U 105</i>

TABLE 7. AHC Configuration, Test and Error Recall (Fault and Lockout) Function

NOTE — AHC MUST BE IN IDLE MODE)		
Single Character LED Display		Action
Solid	-	Push and hold button until solid appears, release button. Display will blink.
Blinking	-	Push and hold button until required symbol displays H , A or P
CONFIGURING ELECTRIC HEAT SECTIONS		
Solid	H	Release push button - control will cycle the indoor blower motor on to the selected heat speed and stage the electric heat relays on and off to automatically detect number of electric heat sections. Control will store the number of electric heat sections. Control will automatically exit current active mode .
INDOOR BLOWER TEST		
Solid	A	Release push button - control cycles indoor blower on for ten seconds at 70% of maximum air for selected capacity size unit. Control will automatically exit current active mode .
CONFIGURING UNIT SIZE CODES		
Single Character LED Display		Action
Solid	P	RELEASE push button - This mode allows the field to select a unit size code (number or letter) that matches the air handler model size and capacity. IMPORT ANT — All field replacement controls may be manually configured to confirm air handler model size and capacity.
Blinking	P	<ol style="list-style-type: none"> 1. When the correct Unit Sized Code is displayed, RELEASE push button. Selected code will flash for 10 second period. 2. During ten second period, HOLD push button until code stops blinking (three seconds minimum). 3. Air Handler Control will store code in memory and exit current active mode. LED display will go blank and then the Unit Size Code will display for 2 to 5 seconds. <p>NOTE - If ten second period expires, or push button is held less than 3 seconds, control will automatically exit current active mode and go into IDLE Mode without storing unit size code. If this occurs, then Unit Size Code configuring procedure must be repeated.</p>
ERROR CODE RECALL MODE (NOTE — CONTROL MUST BE IN IDLE MODE)		
Solid	E	To enter Error Code Recall Mode — PUSH and HOLD button until solid E appears, then RELEASE button. Control will display up to ten error codes stored in memory. If E000 is displayed, there are no stored error codes.
Solid	≡	To exit Error Code Recall Mode — PUSH and HOLD button until solid three horizontal bars appear, then RELEASE button. <i>NOTE - Error codes are not cleared</i>
Solid	C	To clear error codes stored in memory, continue to HOLD push button while the three horizontal bars are displayed. Release push button when solid c is displayed.
Blinking	C	Push and hold for one (1) second, release button. Seven-segment will display 0000 and exit error recall mode.

TABLE 8. AHC Single Character Display Alert Codes (Communicating and Non-Communicating)

Alert Code	Priority	Alert	How to Clear
E 105	Critical	The air-handler has lost communication with the rest of the system.	Equipment is unable to communicate. This may indicate the existence of other alarms / codes. In most cases errors are related to electrical noise. Make sure high voltage power is separated from RSBus. Check for mis-wired and/or loose connections between the thermostat, indoor unit and outdoor unit. Check for a high voltage source of noise close to the system. Generally, this is a self-recoverable error.
E 114	Critical	There is a frequency/distortion problem with the power to the air-handler.	This alarm/code may indicate transformer overloading. Check the voltage and line power frequency. Check the generator operating frequency, if the system is running on back-up power. Correct voltage and frequency problems. System resumes normal operation 5 seconds after fault recovered.
E 115	Critical	The 24VAC to the air-handler control is lower than the required range of 18 to 30VAC.	24-volt power low (range is 18 to 30 volts). Check and correct voltage. Check for additional power-robbing equipment connected to system. This alarm / code may require the installation of an additional or larger VA transformer.
E 120	Moderate	There is a delay in the air-handler responding to the system.	Typically, this alarm/code does not cause any issues and will clear on its own. The alarm/code is usually caused by a delay in the outdoor unit responding to the thermostat. Check all wiring connections. Cleared after unresponsive device responds to any inquiry.
E 124	Critical	The iComfort™ thermostat has lost communication with the air-handler for more than 3 minutes.	Equipment lost communication with the iComfort™ thermostat. Check the wiring connections, ohm wires and cycle power. The alarm stops all associated HVAC operations and waits for a heartbeat message from the unit that's not communicating. The alarm/fault clears after communication is re-established.
E 125	Critical	There is a hardware problem with the air-handler control.	There is a control hardware problem. Replace the control if the problem prevents operation and is persistent. The alarm / fault is cleared 300 seconds after the fault recovers.
E 130	Moderate	An air-handler configuration jumper is missing.	Configuration jumper(s) missing on control (applicable in non-communicating applications only). Replace the jumper or put wire between terminals on control. Cleared after jumper is connected.
E 131	Critical	The air-handler control parameters are corrupted.	Reconfigure the system. Replace the control if heating or cooling is not available.
E 132	Critical	The air-handler control software is corrupted.	Recycle power. If failure re-occurs, replace the control. System reset is required to recover.
E 180	Critical	The iComfort™ thermostat has found a problem with the air-handler outdoor sensor.	In normal operation after control recognizes sensors, the alarm will be sent if valid temperature reading is lost. Compare outdoor sensor resistance to temperature/resistance charts in unit installation instructions. Replace sensor pack if necessary. At the beginning of (any) configuration, the air-handler control will detect the presence of the sensor(s). If detected (reading in range), appropriate feature will be set as installed and shown in the 'About' screen. The alarm / fault will clear upon configuration, or sensing normal values.
E201	Critical	The system has lost communication with the air-handler indoor blower motor.	Lost communication with indoor blower motor. Possible causes include power outage, brown-out, motor not powered, loose wiring, condensation on air handler control without cover on breaker. Problem may be on control or motor side. Cleared after communication is restored.
E202	Critical	The unit size code for the air-handler and the size of blower motor do not match.	Incorrect appliance unit size code selected. Check for proper configuring under unit size codes for air handler on configuration guide or in installation instructions. The alarm / fault clears after the correct match is detected following a reset. Remove the thermostat from the system while applying power and reprogramming.
E203	Critical	The unit size code for the air-handler has not been selected.	No appliance unit size code selected. Check for proper configuring under: Unit size codes for air handler on configuration guide or in installation instructions. Critical Alert. The alarm / fault clears after the correct match is detected following a reset. Remove the thermostat from the system while applying power and reprogramming.
E292	Critical	The air-handler's blower motor will not start.	The system will go into watchdog mode. Indoor blower motor unable to start. This could be due to seized bearing, stuck wheel, obstruction etc. Replace motor or wheel if assembly does not operate or meet performance standards. The alarm / fault clears after the indoor blower motor starts successfully.
E295	Minor	The indoor blower motor is over heating.	Indoor blower motor over temperature (motor tripped on internal protector). Check motor bearings and amps. Replace if necessary. The alarm / fault clears after blower demand is satisfied.
E310	Critical	There is a problem with air-handler discharge air sensor.	Compare outdoor sensor resistance to temperature/resistance charts in installation instructions. Replace sensor if necessary. The alarm/fault is cleared 30 seconds after fault is detected as recovered.
E312	Minor	The blower cannot provide the requested CFM due to high static.	Warning Only. Restricted airflow - Indoor blower is running at a reduced CFM (cutback mode). The variable-speed motor has pre-set speed and torque limiters to protect the motor from damage caused by operating outside of design parameters (0 to 0.8" e.g., total external static pressure). Check filter and duct system. To clear, replace filter if needed or repair/add duct. The alarm/fault is cleared after the current service demand is satisfied.
E313	Minor	The indoor and outdoor unit capacities do not match.	Check for proper configuring in installation instructions. Alarm is just a warning. The system will operate, but might not meet efficiency and capacity parameters. The alarm will clear after commissioning is complete.

TABLE 9. AHC Single Character Display Alert Codes (Communicating and Non-Communicating) (cont'd)

Alert Code	Priority	Alert	How to Clear
E345	Critical	The O relay on the air-handler has failed. Either the pilot relay contacts did not close or the relay coil did not energize.	O relay failed. Pilot relay contacts did not close or the relay coil did not energize. Replace control. The alarm clears after a reset
E346	Critical	The R to O jumper was not removed on the air-handler control.	Configuration link(s) not removed on control. Cut / remove R to O jumper. Applicable with non communicating outdoor unit with communicating indoor unit. The fault clears after the R to O jumper is cut/removed.
E347	Critical	The Y1 relay on the air-handler has failed. Either the pilot relay contacts did not close or the relay coil did not energize.	Operation stopped. Y1 relay failed. Pilot relay contacts did not close or the relay coil did not energize. The indoor unit cannot verify that the relay is closed. The alarm clears after a reset and Y1 input sensed.
E348	Critical	The Y2 relay on the air-handler has failed. Either the pilot relay contacts did not close or the relay coil did not energize.	Operation stopped. Y2 relay failed. Pilot relay contacts did not close or the relay coil did not energize. The indoor unit cannot verify that the relay is closed. The alarm clears after a reset and Y2 input sensed.
E350	Critical	The air-handler's electric heat is not configured.	Heat call with no configured or mis-configured electric heat. Configure electric heat in the air-handler. The fault clears electrical heat is successfully detected.
E351	Critical	There is a problem with the air-handler's first stage electric heat. Either the pilot relay contacts did not close, or the relay coil in the electric heat section did not energize.	Heat section / stage 1 failed. Pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The alarm clears after stage 1 relay is detected.
E352	Moderate ¹	There is a problem with the air-handler's second stage electric heat. Either the pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on first stage electric heat until the issue is resolved.	Heat section / stage 2 failed (same as code 351). Pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on stage 1 heat only. The alarm clears after stage 2 relay is detected.
E353	Moderate ¹	There is a problem with the air-handler's third stage electric heat. Either the pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on first stage electric heat until the issue is resolved.	Heat section / stage 3 failed (same as code 351). Pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on stage 1 heat only. The alarm clears after stage 2 relay is detected.
E354	Moderate ¹	There is a problem with the air-handler's fourth stage electric heat. Either the pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on first stage electric heat until the issue is resolved.	Heat section / stage 4 failed (same as code 351). Pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on stage 1 heat only. The alarm clears after stage 2 relay is detected.
E355	Moderate ¹	There is a problem with the air-handler's fifth stage electric heat. Either the pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on first stage electric heat until the issue is resolved.	Heat section / stage 5 failed (same as code 351). Pilot relay contacts did not close, or the relay coil in the electric heat section did not energize. The air-handler will operate on stage 1 heat only. The alarm clears after stage 2 relay is detected.
E409	Moderate	The secondary voltage for the air-handler has fallen below 18VAC. If this continues for 10 minutes, the icomfort™ thermostat will turn off the air-handler.	Secondary voltage is below 18V AC. After 10 minutes, operation is discontinued. Check the indoor line voltage, transformer output voltage. The alarm clears after the voltage is higher than 20VAC for 2 seconds or after a power reset.

Target CFM Tables

CBA38MV-018/024 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	465	690	900	1050	465	690	900	1050
	425	620	825	950	425	620	825	950
	385	560	735	850	385	560	735	850

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 250 cfm.

CBA38MV-030 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	660	880	1100	1320	660	880	1100	1320
	600	800	1000	1200	600	800	1000	1200
	540	720	900	1080	540	720	900	1080

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 250 cfm.

CBA38MV-036 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	900	1225	1380	1545	900	1225	1380	1545
	810	1125	1275	1400	810	1125	1275	1400
	730	1000	1135	1265	730	1000	1135	1265

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 250 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 250 cfm.

Target CFM Tables (cont'd)

CBA38MV-042 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	1100	1320	1540	1760	1100	1320	1540	1760
	1000	1200	1400	1600	1000	1200	1400	1600
	900	1080	1260	1440	900	1080	1260	1440

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 450 cfm.

CBA38MV-048 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	1625	1820	2055	2145	1625	1820	2055	2145
	1425	1625	1805	2005	1425	1625	1805	2005
	1205	1375	1555	1725	1205	1375	1555	1725

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 450 cfm.

CBA38MV-060 BLOWER PERFORMANCE

0 through 0.80 in. w.g. External Static Pressure Range

"ADJUST" Jumper Setting	Jumper Speed Positions							
	"HEAT" Speed				"COOL" Speed			
	1 cfm	2 cfm	3 cfm	4 cfm	1 cfm	2 cfm	3 cfm	4 cfm
+ NORM -	1640	1840	2075	2150	1640	1840	2075	2150
	1465	1625	1800	2000	1465	1625	1800	2000
	1250	1390	1560	1720	1250	1390	1560	1720

NOTES:

- The effect of static pressure, filter and electric heater resistance is included in the air volumes listed.
- First stage cooling air volume is 70% of COOL speed settings. Continuous fan speed is approximately 28%, 38%, 70% and 100% (Jumper selectable) of the same second-stage COOL speed selected, minimum 450 cfm.
- Lennox Harmony III™ Zone Control applications - minimum blower speed if 450 cfm.

Unit Operating Sequences

This section details unit operating sequence for non-communicating systems.

NOTE - For communicating systems, see the iComfort thermostat installation instruction.

TABLE 10. CBA38MV with ComfortSense™ 7500 Thermostat and Single-Stage Outdoor Unit Operating Sequence

Operating Sequence		System Demand								System Response		
System Condition	Step	Thermostat Demand						Relative Humidity		Comp	Air Handler CFM (COOL)	Comments
		Y1	Y2	O	G	W1	W2	Status	D			
NO CALL FOR DEHUMIDIFICATION												
Normal Operation	1	On		On	On			Acceptable	24 VAC	High	100%	Compressor and indoor air handler follow thermostat demand
BASIC MODE (Only active on a Y1 thermostat demand)												
Normal Operation	1	On		On	On			Acceptable	24 VAC	High	100%	ComfortSense™ 7500 thermostat energizes Y1 and de-energizes D on a call for dehumidification. <i>NOTE - No over cooling.</i>
Dehumidification Call	2	On		On	On			Demand	0 VAC	High	70%	
PRECISION MODE (Operates independent of a Y1 thermostat demand)												
Normal Operation	1	On		On	On			Acceptable	24 VAC	High	100%	Dehumidification mode begins when humidity is greater than set point
Dehumidification call	2	On		On	On			Demand	0 VAC	High	70%	
Dehumidification call ONLY	1	On		On	On			Demand	0 VAC	High	70%	ComfortSense™ 7500 will keep outdoor unit energized after cooling temperature setpoint has been reach in order to maintain room humidity setpoint. <i>NOTE - Allow to over cool 2°F from cooling set point.</i>

**TABLE 11. CBA38MV with ComfortSense™ 7500 Thermostat and Two-Stage Outdoor Unit
Operating Sequence**

Operating Sequence		System Demand								System Response			
System Condition	Step	Thermostat Demand						Relative Humidity		Compressor	Air Handler CFM (COOL)	Comments	
		Y1	Y2	O	G	W1	W2	Status	D				
No Call for Dehumidification													
Normal Operation - Y1	1	On		On	On			Acceptable	24 VAC	Low	70%	Compressor and indoor air handler follow thermostat demand	
Normal Operation - Y2	2	On	On	On	On			Acceptable	24 VAC	High	100%		
Room Thermostat Calls for First-Stage Cooling													
BASIC MODE (Only active on a Y1 thermostat demand)													
Normal Operation	1	On		On	On			Acceptable	24 VAC	Low	70%	ComfortSense™ 7500 thermostat energizes Y2 and de-energizes D on a call for dehumidification <i>NOTE - No over cooling.</i>	
Dehumidification Call	2	On	On	On	On			Demand	0 VAC	High	70%		
PRECISION MODE (Operates independent of a Y1 thermostat demand)													
Normal Operation	1	On		On	On			Acceptable	24 VAC	Low	70%	Dehumidification mode begins when humidity is greater than set point	
Dehumidification call	2	On	On	On	On			Demand	0 VAC	High	70%		
Dehumidification call ONLY	1	On	On	On	On			Demand	0 VAC	High	70%	ComfortSense™ 7500 thermostat will keep outdoor unit energized after cooling temperature setpoint has been reached in order to maintain room humidity setpoint. <i>NOTE — Allow to over cool 2°F from cooling set point.</i>	
Room Thermostat Calls for First- and Second-Stage Cooling													
BASIC MODE (Only active on a Y1 thermostat demand)													
Normal Operation	1	On	On	On	On			Acceptable	24 VAC	High	100%	ComfortSense™ 7500 thermostat energizes Y2 and de-energizes D on a call for dehumidification <i>NOTE — No over cooling.</i>	
Dehumidification Call	2	On	On	On	On			Demand	0 VAC	High	70%		
PRECISION MODE (Operates independent of a Y1 thermostat demand)													
Normal Operation	1	On	On	On	On			Acceptable	24 VAC	High	100%	Dehumidification mode begins when humidity is greater than set point	
Dehumidification call	2	On	On	On	On			Demand	0 VAC	High	70%		
Dehumidification call ONLY	1	On	On	On	On			Demand	0 VAC	High	70%	ComfortSense™ 7500 thermostat will keep outdoor unit energized after cooling temperature setpoint has been reached in order to maintain room humidity setpoint. <i>NOTE — Allow to over cool 2°F from cooling set point.</i>	

Unit Operating Sequences

This section identifies the requirements for configuring the air handler unit for unit size, heat mode selection and EvenHeat.

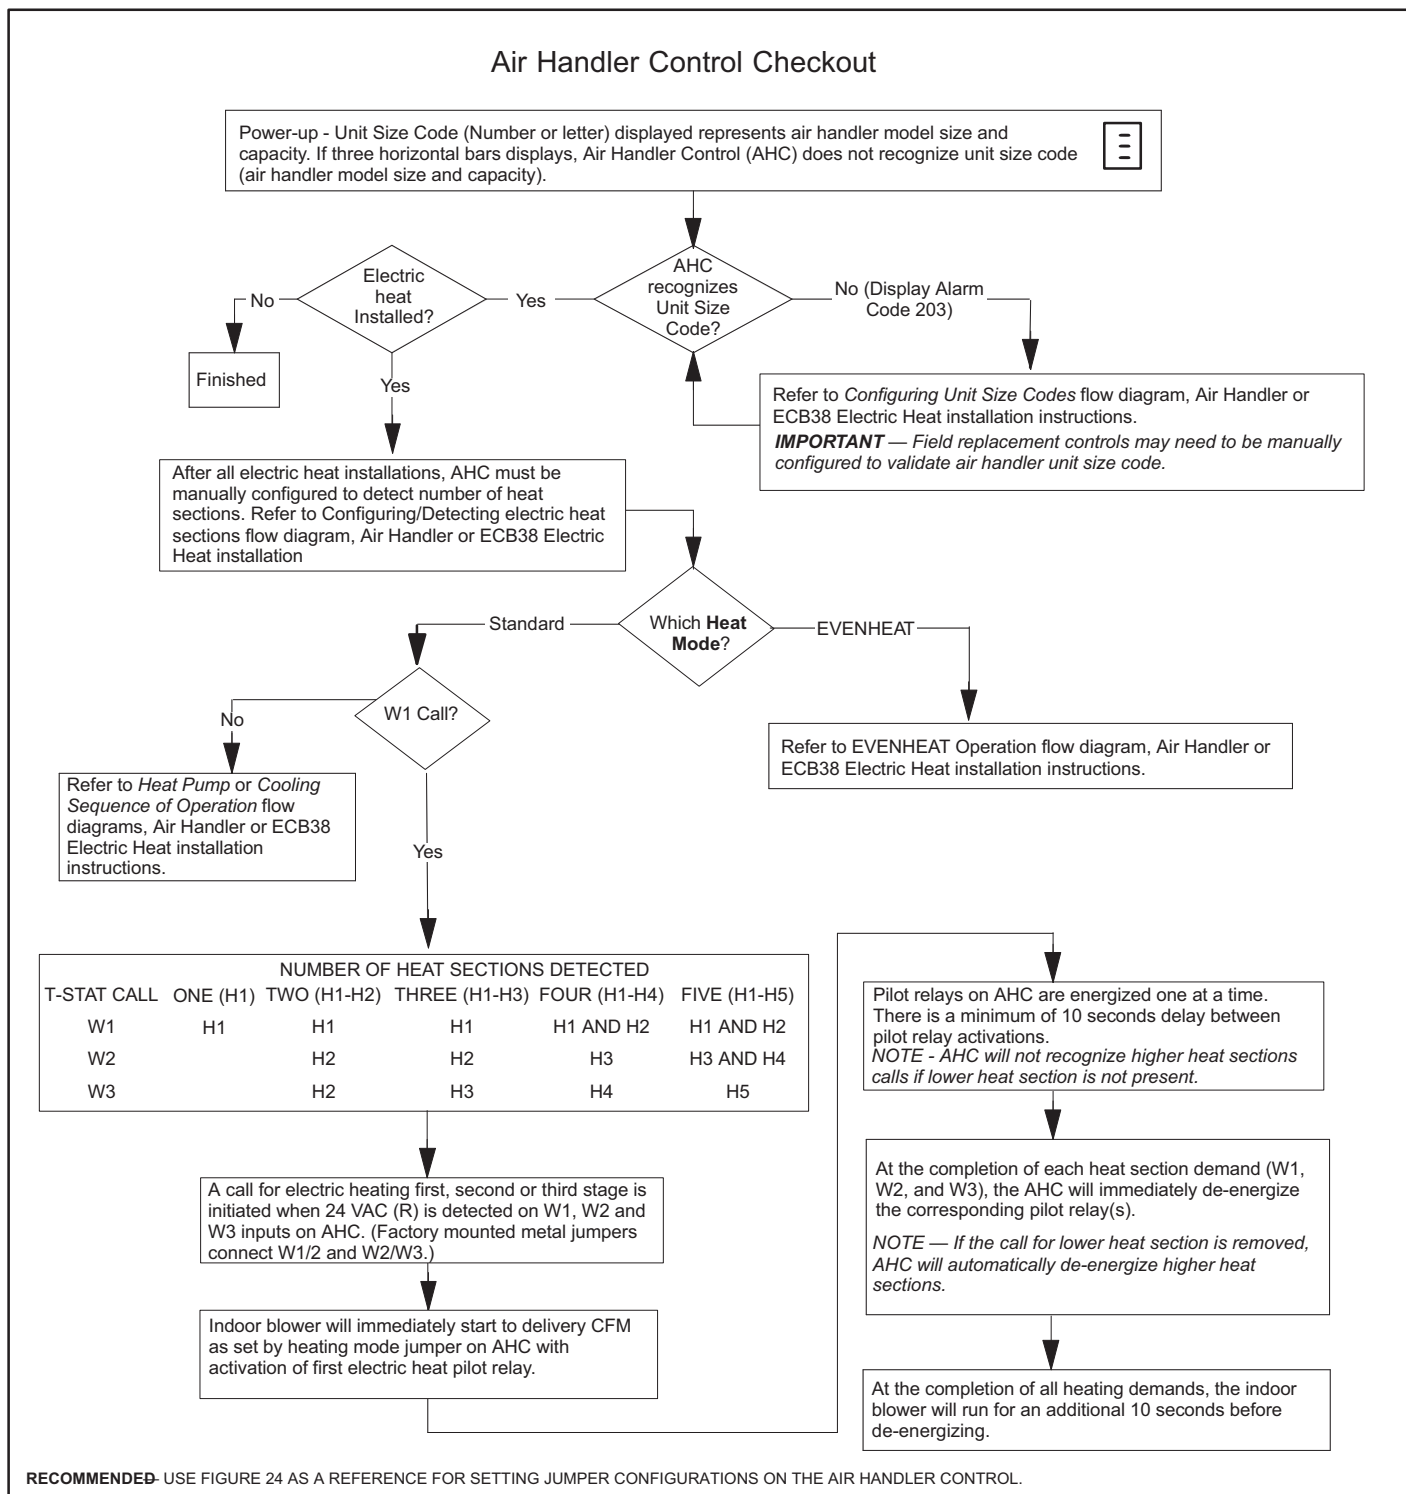


FIGURE 25. Air Handler Control Checkout

Configuring Unit Size Codes (Model Number)

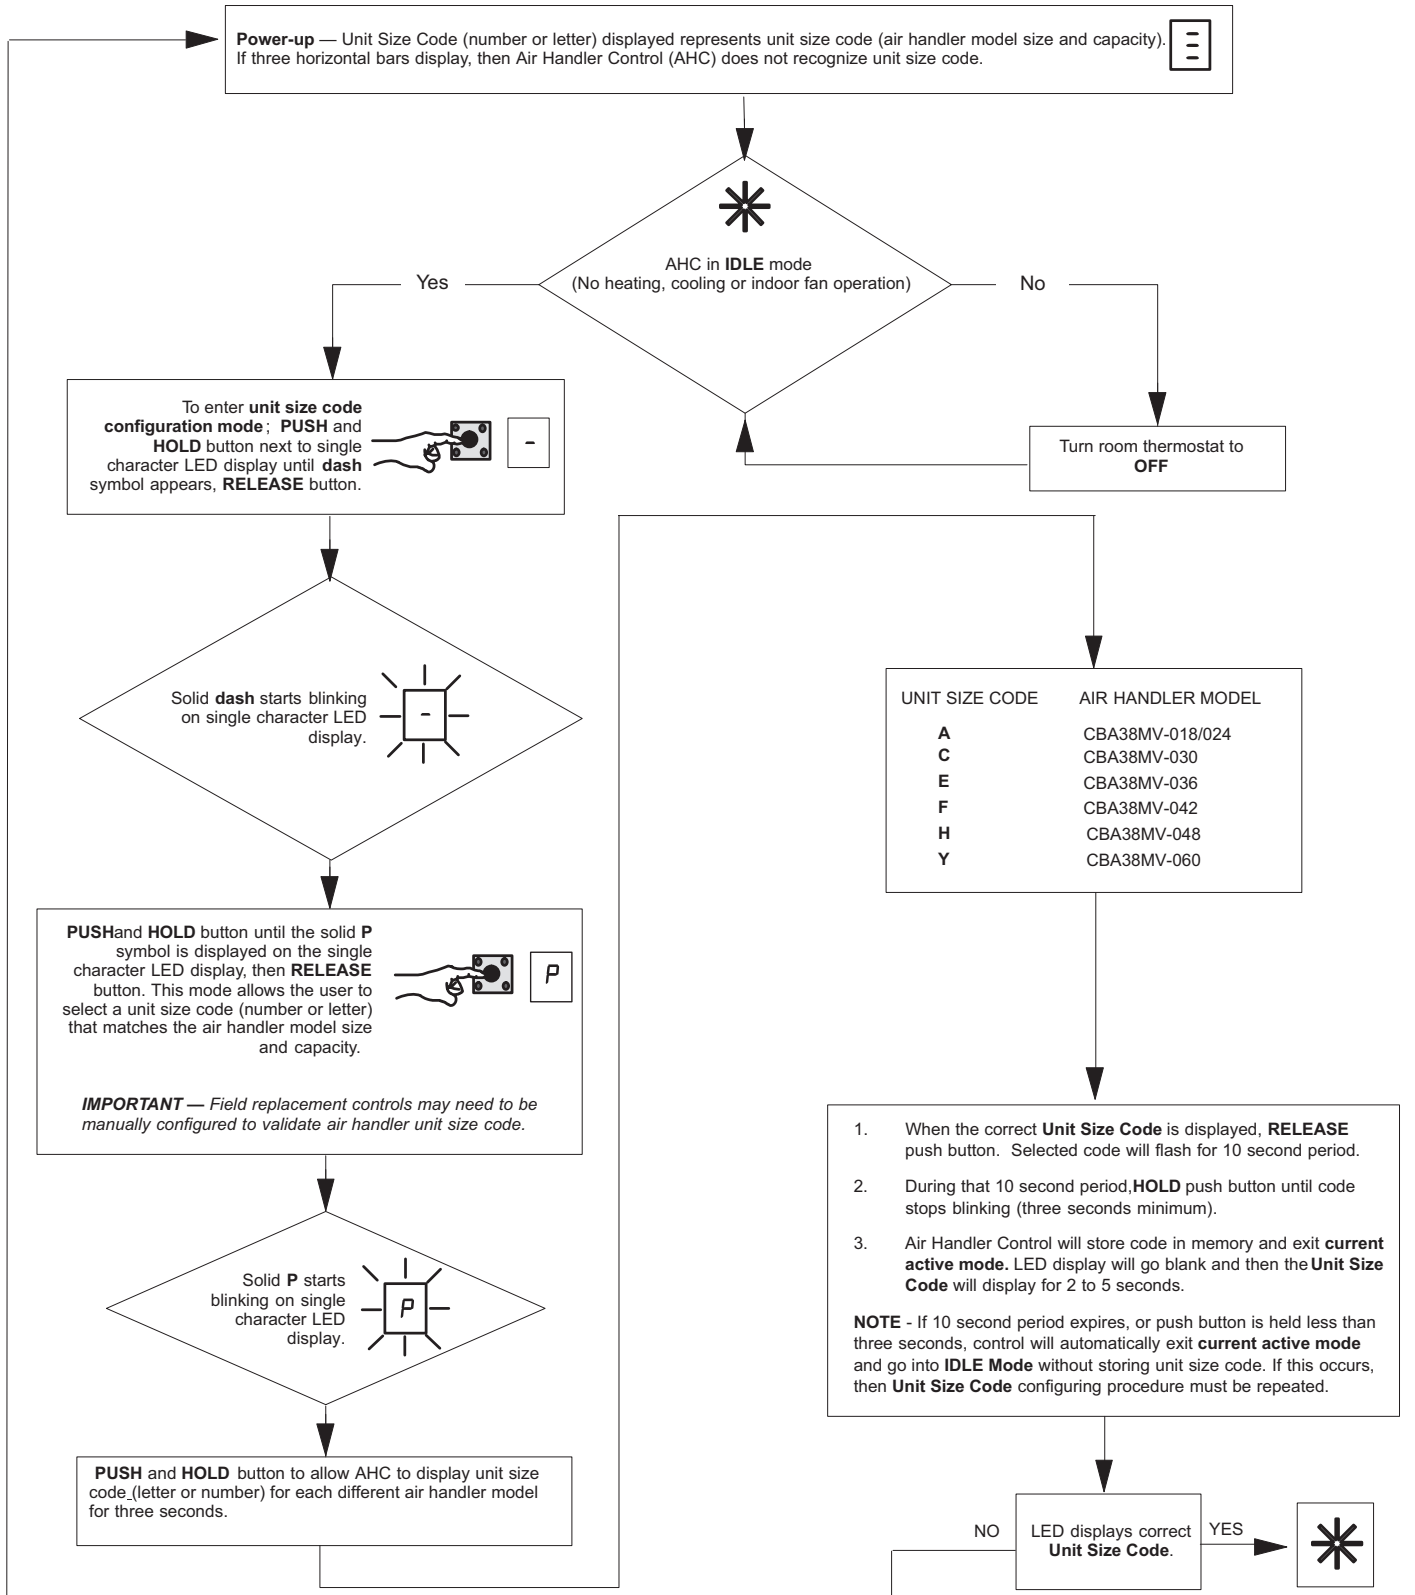


FIGURE 26. Configure Unit Size Codes

Configuring/Detecting Electric Heat Sections

IMPORTANT — All electric heat installations require the Air Handler Control (AHC) to be manually configured to detect number of heat sections.

NOTE — All field replacement AHC will require configuring/detecting electric heat sections.

RECOMMENDED — USE FIGURE 24 AS A REFERENCE FOR SETTING JUMPER CONFIGURATIONS ON THE AIR HANDLER CONTROL.

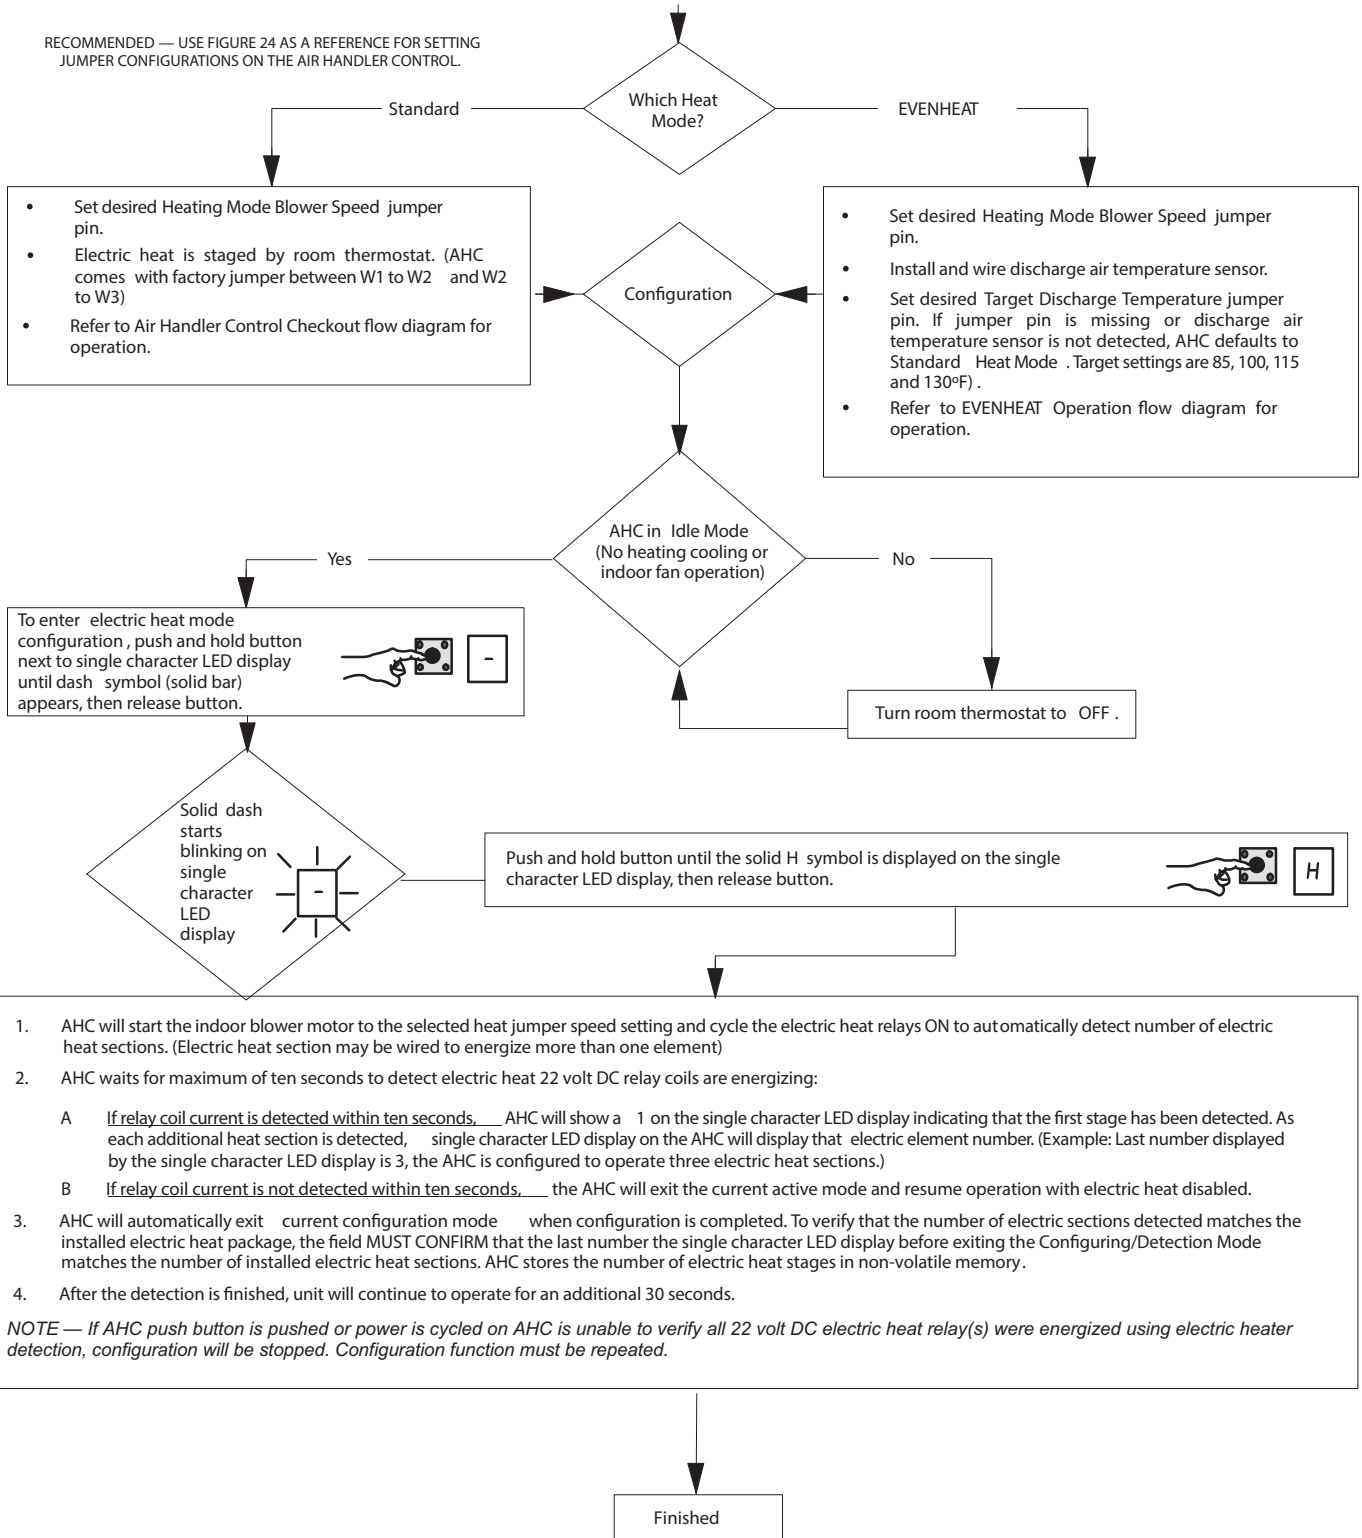


FIGURE 27. Heat Mode Selection

EVENHEAT OPERATION

INPUTS		OUTPUTS	
Room Thermostat Demand	Target Discharge Air Temperature Set at 85°F	Target Discharge Air Temperature Set at 100°F	Target Discharge Air Temperature Set at 115°F/130°F
Y1	Heat Pump First Stage	Heat Pump First Stage	Heat Pump First + First Electric Heat Section (H1)
Y1 + Y2	Heat Pump First and Second Stage	Heat Pump First and Second Stage + First Electric Heat Section (H1)	Heat Pump First and Second Stage + First Electric Heat Section (H1) + Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.
Y1 + W1 and/or W2	Heat Pump First Stage + First Electric Heat Section (H1)	Heat Pump First Stage + First Electric Heat Section + Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.	Heat Pump First Stage + First Electric Heat Section (H1) Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.
Y1 and Y2 + W1 and/or W2	Heat Pump First and Second Stage + First Electric Heat Section (H1)	Heat Pump First and Second Stage + First Electric Heat Section + Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.	Heat Pump First and Second Stage + First Electric Heat Section (H1) Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.
W1 and/or W2	First Electric Heat Section (H1)	First Electric Heat Section (H1) + Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.	First Electric Heat Section (H1) + Second Electric Heat Section (H2) if number of electric heater sections detected is more than two.

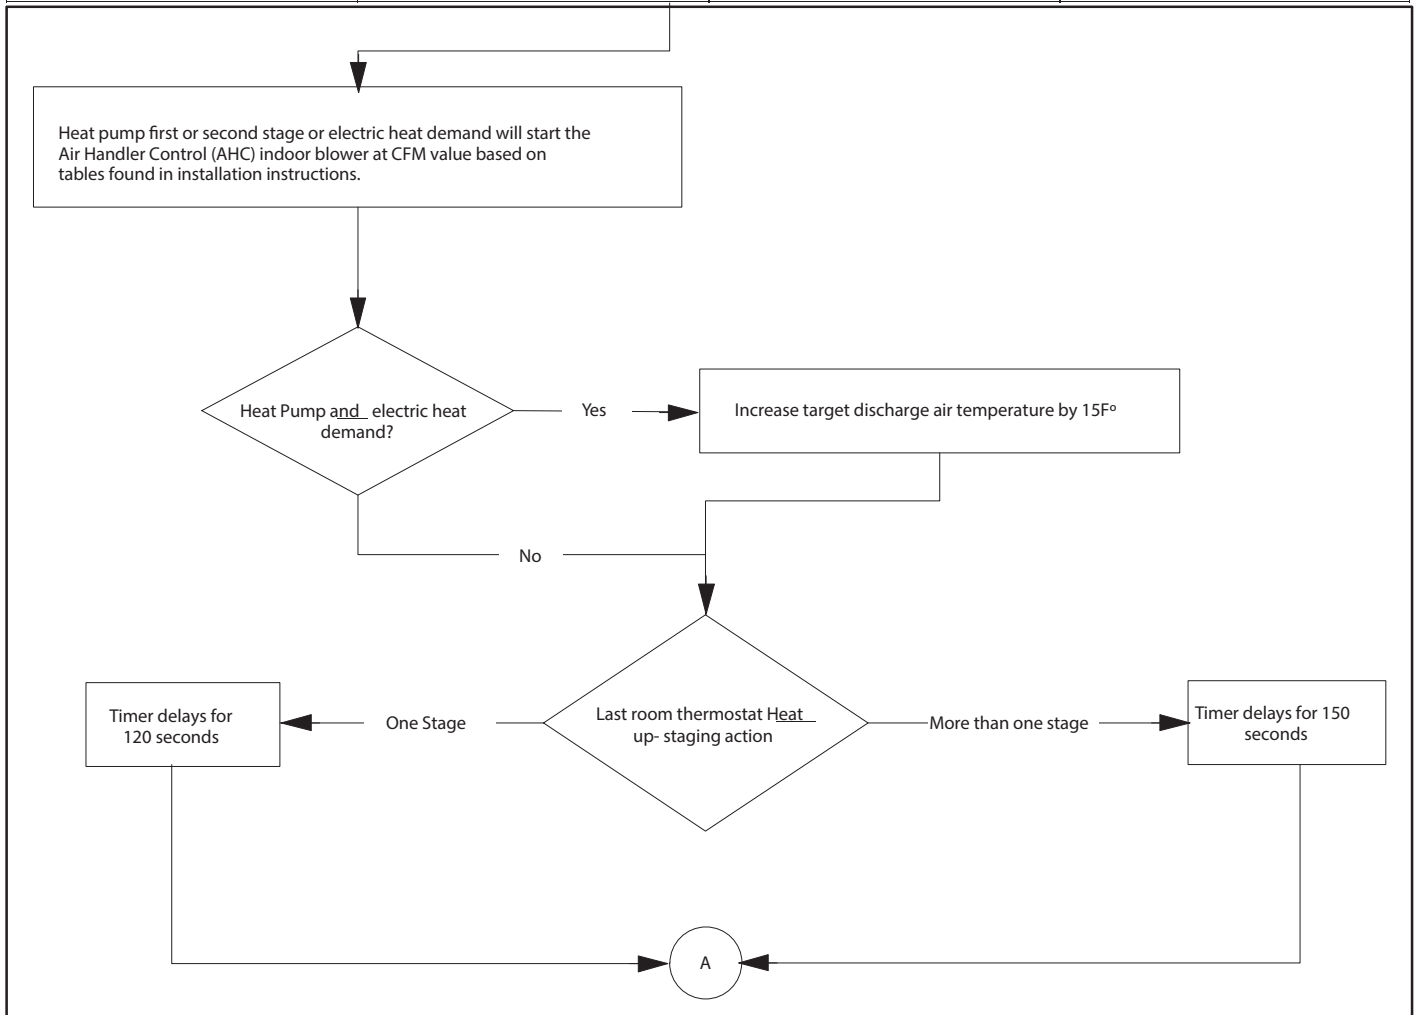


FIGURE 28. EVENHEAT Operation (1 of 2)

EVENHEAT Operation

- [illegible]

FIGURE 29. EVENHEAT Operation ((2 of 2)

Heat Pump Operation (Heating and Cooling)

Air Handler Control (AHC) Indoor Blower Mode Speed and Profiles settings


- Set Cooling Mode Blower Speed jumper pin. (Low and high indoor blower CFM settings are identical for cooling and heat pump)
- Set Blower Adjust Selection jumper pin.
- Set Cooling Mode Blower Ramping jumper pin (Cooling calls - All ramping profiles are active) (Heating calls - Only ramping profiles 1 and 2 are active. If profiles 3 or 4 are selected, AHC will default to profile 1)
 - Profile 1 does not provide any ramping profiles.
 - Profile 2 provides a 30 second indoor blower ON delay at the start of a heat pump heating demand. (45 second indoor blower OFF delay)
- Simultaneous Heat Pump and electric heat call: Indoor Blower will operate at the highest CFM requested by the heat pump or the electric heat blower speed selection.

Single or Two-Stage Unit

- AHC on-AHC link must be cut between Y1 and Y2 to allow two stage cooling operation.
- AHC on-AHC link must be cut between R and O to allow heat pump operation.

CUT ON-BOARD LINK
Y1-Y2 FOR
TWO-STAGE A/C


CUT ON-BOARD
LINK R-O.

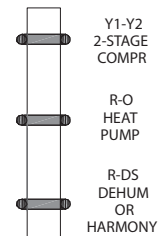

CUT FOR OPTION

IMPORTANT — USE CARE WHEN CUTTING LINKS TO PREVENT DAMAGE TO CONTROL. SEE FIGURE 24, CBA38MV JUMP AND LINK GUIDE FOR FURTHER DETAILS.

RECOMMENDED — USE FIGURE 20 AS A REFERENCE FOR SETTING JUMPER CONFIGURATIONS ON THE AIR HANDLER CONTROL.

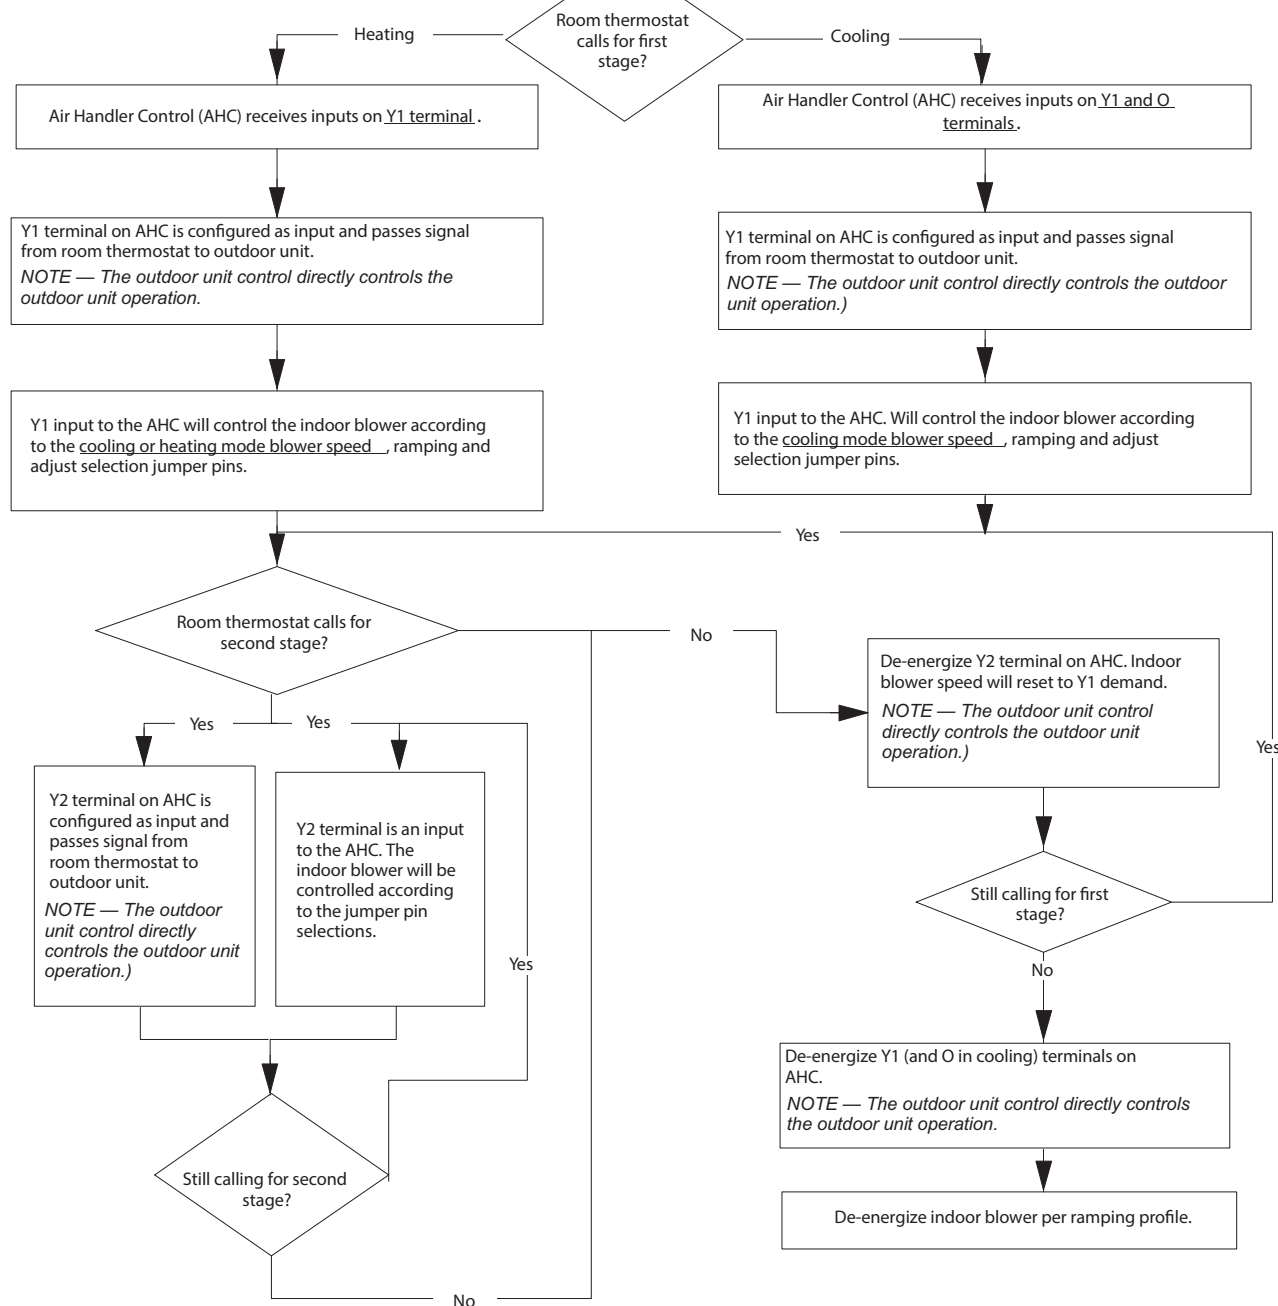

Cooling Operation


Air Handler Control (AHC) Indoor Blower Mode Speed and Profiles settings

1. Set Cooling Mode Blower Speed jumper pin.
2. Set Cooling Mode Blower Ramping jumper pin.
3. Set Blower Adjust Selection jumper pin.

Single or Two-Stage Unit


AHC on-board link must be cut between Y1 and Y2 to allow 2 stage cooling operation.

CUT ON-BOARD LINK Y1-Y2 FOR TWO-STAGE A/C

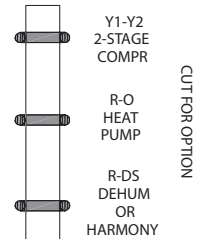


RECOMMEND — USE FIGURE 20 AS A REFERENCE FOR SETTING JUMPER CONFIGURATIONS ON THE AIR HANDLER CONTROL.


IMPORTANT - Use care when cutting links to prevent damage to control. See figure 20, CBA38MV jump and link guide for further details.

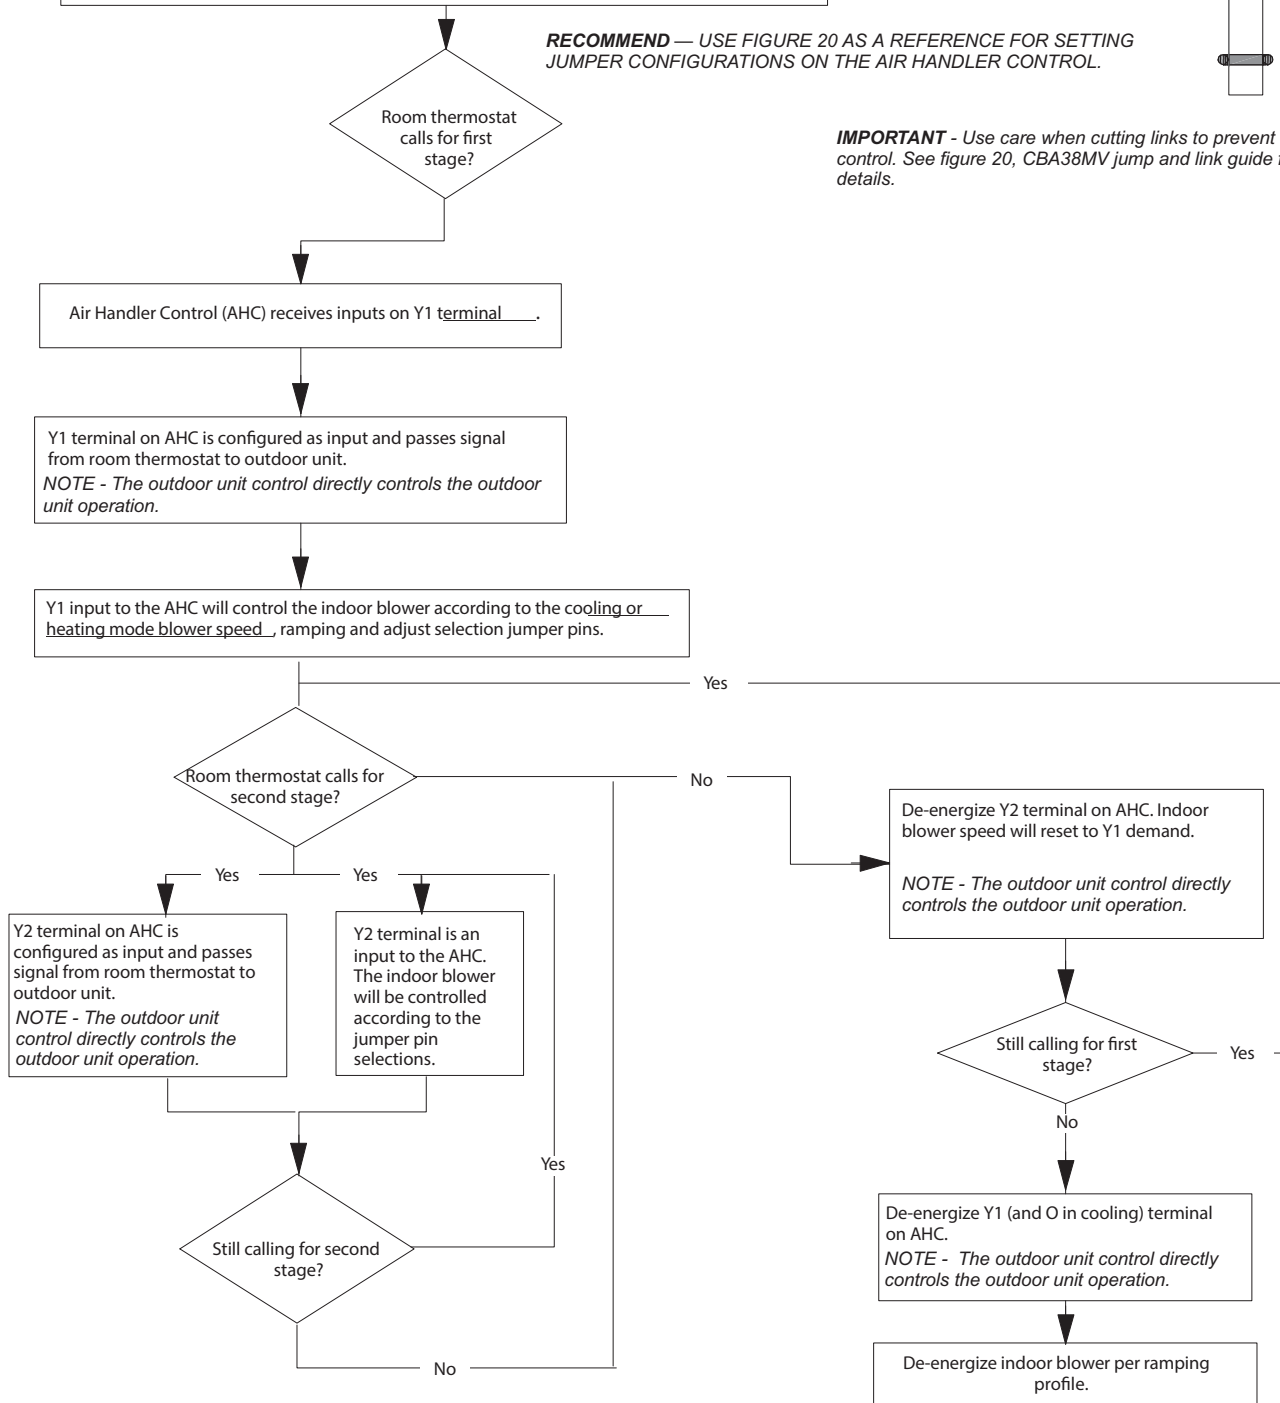

Error Code / Recall Mode

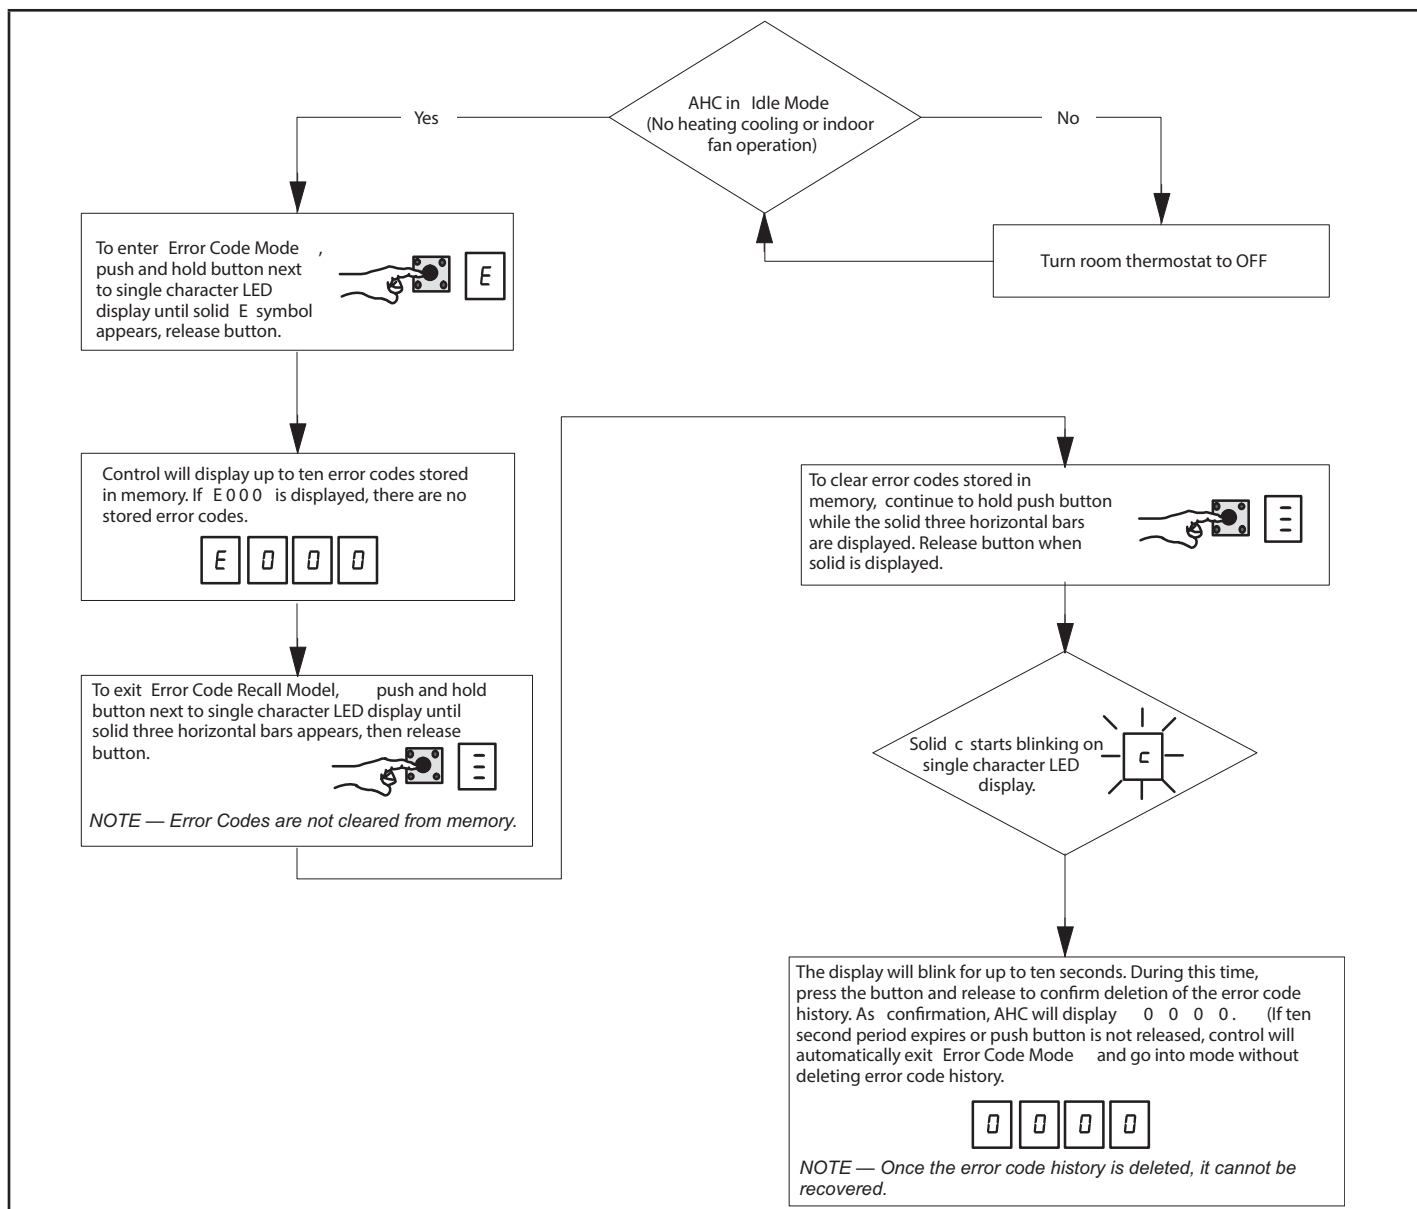

Indoor Blower Test

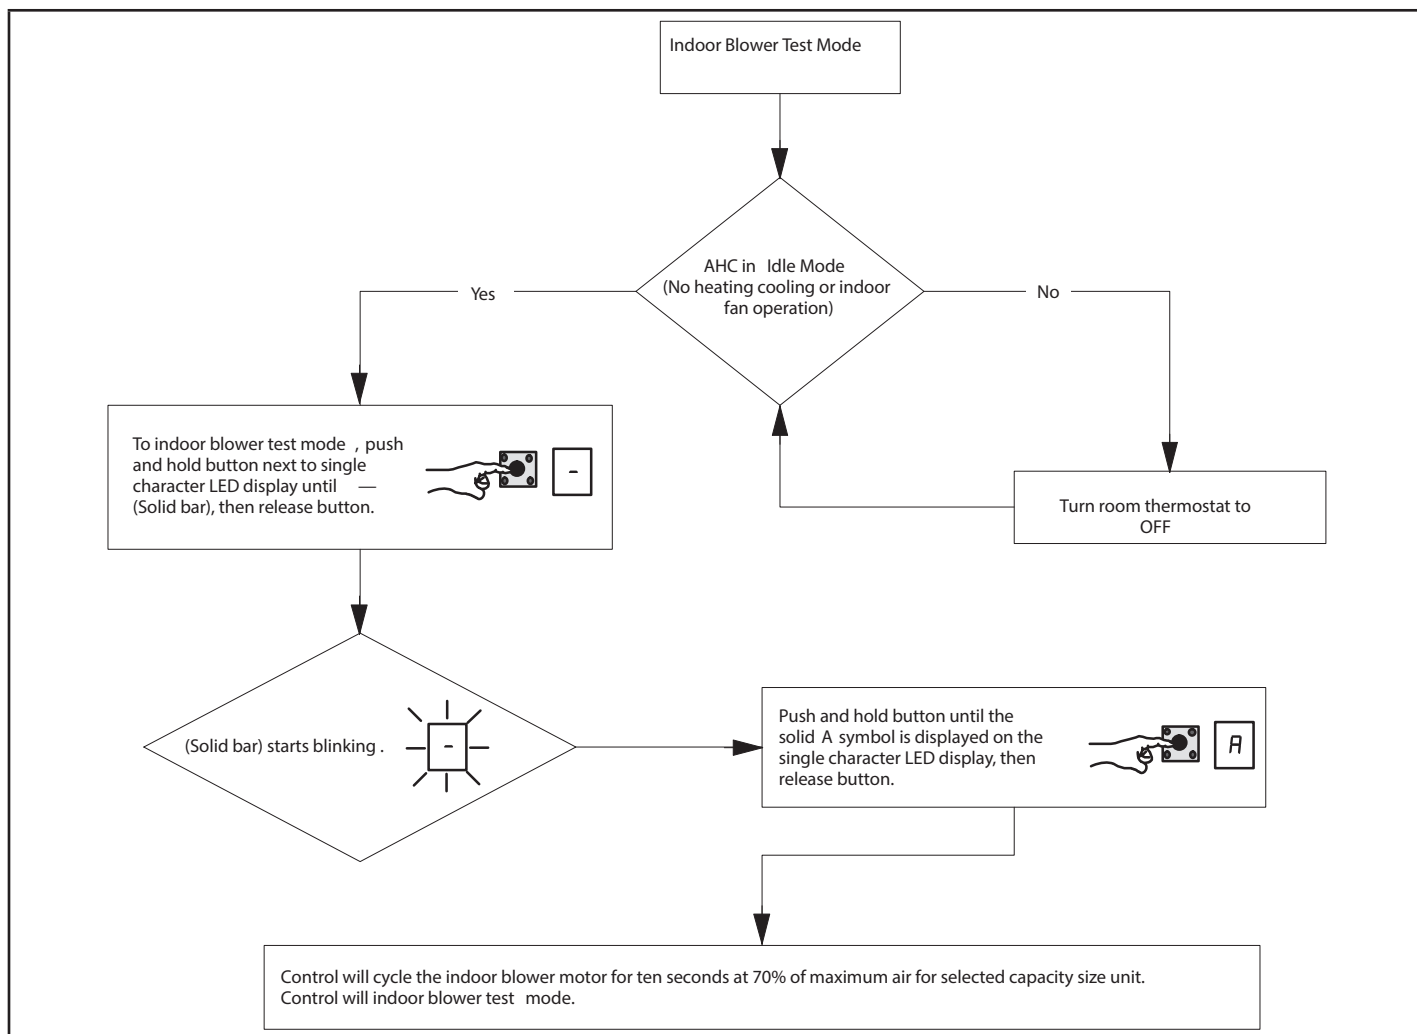

Operation

COOLING (COOLING ONLY OR HEAT PUMP)

When the thermostat calls for cooling, 24 volts is applied to the blower time-delay relay coil. After a delay, the indoor blower relay energizes. The normally open contacts close, causing the indoor blower motor to operate. The circuit between R and Y is completed, closing the circuit to the contactor in the outdoor unit, starting the compressor and outdoor fan motor.

On heat pumps, circuit R and O energizes the reversing valve, switching the valve to the cooling position. (The reversing valve remains energized as long as the thermostat selector switch is in the COOL position.)

At the completion of the cooling demand and after the relay's time-delay, the compressor and outdoor fan will cycle off.

HEATING (ELECTRIC HEAT ONLY)

When the thermostat calls for heat, the circuit between R and W is completed, and the heat sequencer is energized. A time delay follows before the heating elements and the indoor blower motor come on. Units with a second heat sequencer can be connected with the first sequencer to W on the thermostat subbase, or they may also be connected to a second stage on the subbase.

HEATING (HEAT PUMP)

When the thermostat calls for heating, 24 volts is applied to the blower time-delay relay coil. After a delay, the normally open contacts close, causing the indoor blower motor to operate. The circuit between R and Y is completed, closing the circuit to the contactor in the outdoor unit, starting the compressor and outdoor fan motor. Circuit R and G energizes the blower relay, starting the indoor blower motor.

If the room temperature continues to decrease, the circuit between R and W1 is completed by the second-stage heat room thermostat. Circuit R-W1 energizes a heat sequencer. The completed circuit will energize supplemental electric heat (if applicable). Units with a second heat sequencer can be connected with the first sequencer to W1 on the thermostat. They may also be connected to a second heating stage W2 on the thermostat subbase.

EMERGENCY HEAT (HEATING HEAT PUMP)

If the selector switch on the thermostat is set to the emergency heat position, the heat pump will be locked out of the heating circuit, and all heating will be electric heat (if applicable). A jumper should be placed between W2 and E on the thermostat subbase so that the electric heat control will transfer to the first-stage heat on the thermostat.

This will allow the indoor blower to cycle on and off with the electric heat when the fan switch is in the AUTO position.

Repairing or Replacing Cabinet Insulation

IMPORTANT

DAMAGED INSULATION MUST BE REPAIRED OR REPLACED before the unit is put back into operation. Insulation loses its insulating value when wet, damaged, separated or torn.

Matte- or foil-faced insulation is installed in indoor equipment to provide a barrier between outside air conditions (surrounding ambient temperature and humidity) and the varying conditions inside the unit. If the insulation barrier is damaged (wet, ripped, torn or separated from the cabinet walls), the surrounding ambient air will affect the inside surface temperature of the cabinet. The temperature/humidity difference between the inside and outside of the cabinet can cause condensation on the inside or outside of the cabinet which leads to sheet metal corrosion and subsequently, component failure.

REPAIRING DAMAGED INSULATION

Areas of condensation on the cabinet surface are an indication that the insulation is in need of repair.

If the insulation in need of repair is otherwise in good condition, the insulation should be cut in an X pattern, peeled open, glued with an appropriate all-purpose glue and placed back against the cabinet surface, being careful to not overly compress the insulation so the insulation can retain its original thickness. If such repair is not possible, replace the insulation. If using foil-faced insulation, any cut, tear, or separations in the insulation surface must be taped with a similar foil-faced tape.

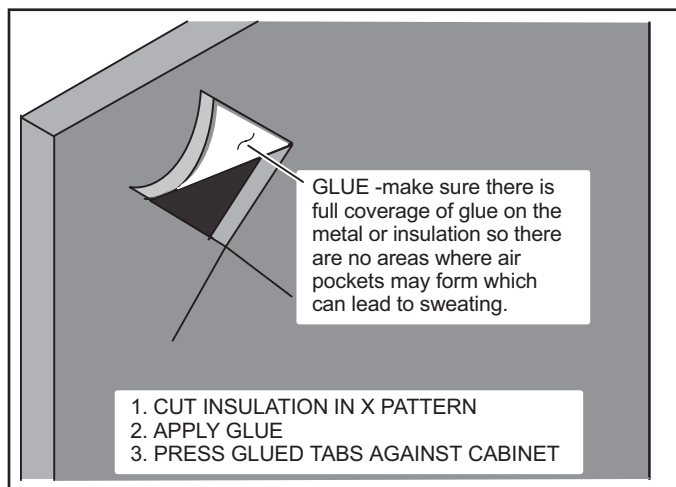


FIGURE 30. Repairing Insulation

WARNING

Electric Shock Hazard.

Can cause injury or death.



Foil-faced insulation has conductive characteristics similar to metal. Be sure there are no electrical connections within 1/2" of the insulation. If the foil-faced insulation comes in contact with electrical voltage, the foil could provide a path for current to pass through to the outer metal cabinet. While the current produced may not be enough to trip existing electrical safety devices (e.g., fuses or circuit breakers), the current can be enough to cause an electrical shock hazard that could cause personal injury or death.

Homeowner Maintenance

IMPORTANT

Do not operate system without a filter. A filter is required to protect the coil, blower, and internal parts from excessive dirt and dust. The filter is placed in the return duct by the installer.

- Inspect air filters at least once a month and replace or clean as required. Dirty filters are the most common cause of inadequate heating or cooling performance.
- Replace disposable filters. Cleanable filters can be cleaned by soaking in mild detergent and rinsing with cold water.
- Install new/clean filters with the arrows on the side pointing in the direction of airflow. Do not replace a cleanable (high velocity) filter with a disposable (low velocity) filter unless return air system is properly sized for it.
- If water should start coming from the secondary drain line, a problem exists which should be investigated and corrected. Contact a qualified service technician.

Professional Maintenance

NOTICE !

Failure to follow instructions will cause damage to the unit.

This unit is equipped with an aluminum coil. Aluminum coils may be damaged by exposure to solutions with a pH below 5 or above 9. The aluminum coil should be cleaned using potable water at a moderate pressure (less than 50psi). If the coil cannot be cleaned using water alone, Lennox recommends use of a coil cleaner with a pH in the range of 5 to 9. The coil must be rinsed thoroughly after cleaning.

In coastal areas, the coil should be cleaned with potable water several times per year to avoid corrosive buildup (salt).

Check-out Procedures

IMPORTANT

During installation, service or maintenance, make sure that copper tubing does not rub against metal edges or other copper tubing. Care should also be taken to ensure that tubing does not become kinked. Use wire ties to secure tubing to prevent movement.

Do not secure electrical wires to tubing that carries hot refrigerant gas. Heat from the tubing may melt the wiring insulation, causing a short circuit.

NOTE – Refer to outdoor unit installation instructions for system start-up instructions and refrigerant charging instructions.

PRE-START-UP CHECKS

- Is the air handler properly and securely installed?
- If horizontally configured, is the unit sloped up to 1/4 inch toward drain lines?
- Will the unit be accessible for servicing?
- Has an auxiliary pan been provided under the unit with separate drain for units installed above a finished ceiling or in any installation where condensate overflow could cause damage?
- Have ALL unused drain pan ports been properly plugged?
- Has the condensate line been properly sized, run, trapped, pitched, and tested?
- Is the duct system correctly sized, run, sealed, and insulated?
- Have all cabinet openings and wiring been sealed?
- Is the indoor coil factory-installed TXV properly sized for the outdoor unit being used?
- Have all unused parts and packaging been disposed of?
- Is the filter clean, in place, and of adequate size?
- Is the wiring neat, correct, and in accordance with the wiring diagram?
- Is the unit properly grounded and protected (fused)?
- Is the thermostat correctly wired and in a good location?
- Are all access panels in place and secure?

CHECK BLOWER OPERATION

- Set thermostat to FAN ON.
- The indoor blower should come on.

CHECK COOLING OPERATION

- Set thermostat to force a call for cooling (approximately 5°F lower than the indoor ambient temperature).
- The outdoor unit should come on immediately and the indoor blower should start between 30 - 60 seconds later.
- Check the air flow from a register to confirm that the system is moving cooled air.
- Set the thermostat 5°F higher than the indoor temperature. The indoor blower and outdoor unit should cycle off.

CHECK ELECTRIC HEAT (IF USED)

- Set thermostat to call for auxiliary heat (approximately 5°F above ambient temperature). The indoor blower and auxiliary heat should come on together. Allow a minimum of 3 minutes for all sequencers to cycle on.
- Set the thermostat so that it does not call for heat. Allow up to 5 minutes for all sequencers to cycle off.


Use of Air Handler During Construction

Lennox does not recommend the use of its air handler unit during any phase of construction. Very low return air temperatures, harmful vapors and operation of the unit with clogged or misplaced filters will damage the unit.

Air handler units may be used for heating (heat pumps) or cooling of buildings under construction, if the following conditions are met:

- A room thermostat must control the air handler. The use of fixed jumpers is not allowed.
- Air filter must be installed in the system and must be maintained during construction.
- Air filter must be replaced upon construction completion.
- The air handler evaporator coil, supply fan assembly and duct system must be thoroughly cleaned following final construction clean-up.
- All air handler operating conditions must be verified according to these installation instructions.

Installing Contractor's Name _____ Installing Date _____
 Installing Contractor's Phone _____ Air Handler Model # _____
 Job Address _____

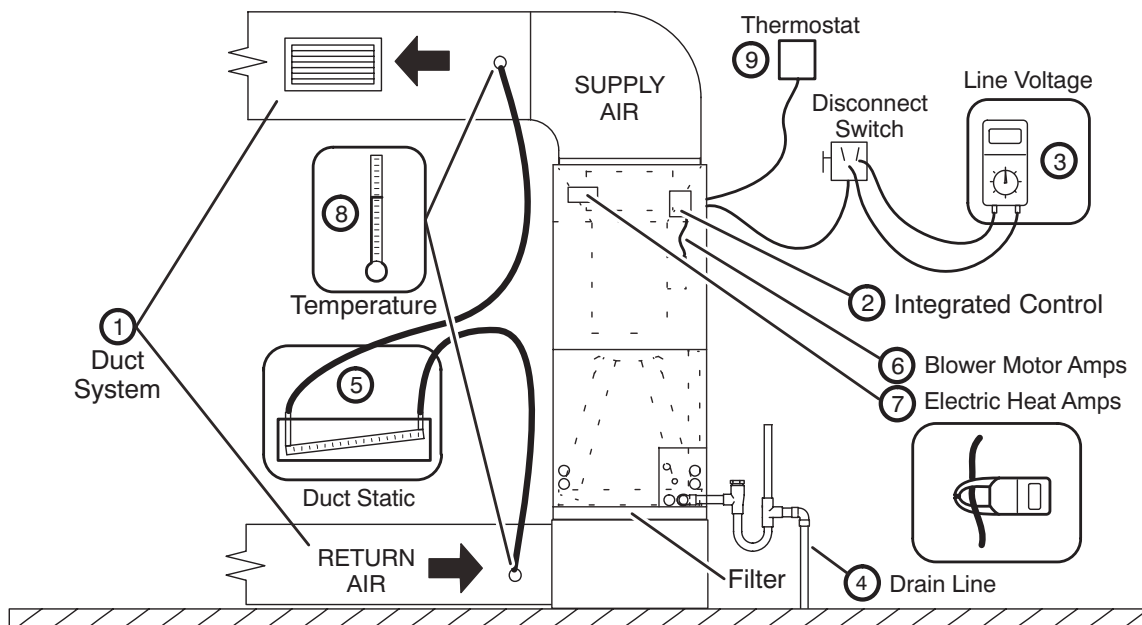


- | | |
|--|---|
| <p>① DUCT SYSTEM</p> <p>SUPPLY AIR DUCT</p> <p><input type="checkbox"/> Sealed</p> <p><input type="checkbox"/> Insulated (if necessary)</p> <p><input type="checkbox"/> Registers Open and Unobstructed</p> <p>RETURN AIR DUCT</p> <p><input type="checkbox"/> Sealed</p> <p><input type="checkbox"/> Filter Installed and Clean</p> <p><input type="checkbox"/> Registers Open and Unobstructed</p> <p>② INTEGRATED CONTROL</p> <p><input type="checkbox"/> Jumpers Configured Correctly (if applicable)</p> <p><input type="checkbox"/> Appropriate Links in Place (if applicable)</p> <p>③ VOLTAGE CHECK</p> <p><input type="checkbox"/> Supply Voltage _____</p> <p><input type="checkbox"/> Low Voltage _____</p> <p><input type="checkbox"/> Electrical Connections Tight</p> <p>④ DRAIN LINE</p> <p><input type="checkbox"/> Leak Free</p> <p><input type="checkbox"/> Explained Operation of System to Homeowner</p> | <p>⑤ TOTAL EXTERNAL STATIC (dry coil)</p> <p style="text-align: right;">dry coil wet coil</p> <p>Supply External Static _____</p> <p>Return External Static _____</p> <p>Total External Static = _____</p> <p>⑥ ELECTRIC HEAT AMPS _____</p> <p>⑦ INDOOR BLOWER AMPS _____</p> <p>INDOOR BLOWER CFM _____</p> <p>⑧ TEMPERATURE DROP (Cooling Mode)</p> <p>Return Duct Temperature _____</p> <p>Supply Duct Temperature - _____</p> <p>Temperature Drop = _____</p> <p>⑧ TEMPERATURE RISE (Heating Mode)</p> <p>Return Duct Temperature _____</p> <p>Supply Duct Temperature - _____</p> <p>Temperature Rise = _____</p> <p>⑨ THERMOSTAT</p> <p><input type="checkbox"/> Adjusted and Programmed</p> <p><input type="checkbox"/> Operation Explained to Owner</p> |
|--|---|

Technician's Name: _____ Date Start-Up & Performance Check Completed _____

FIGURE 31. Start-up and Performance Checklist (Upflow Configuration)

Installing Contractor's Name _____ Installing Date _____
 Installing Contractor's Phone _____ Air Handler Model # _____
 Job Address _____

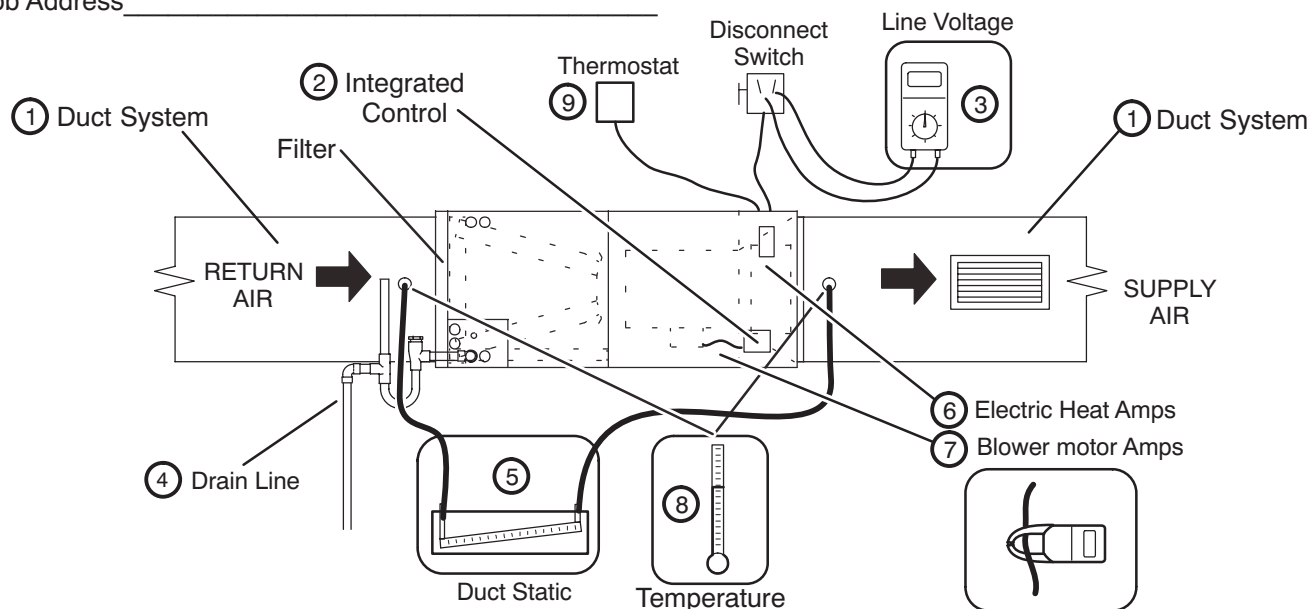

- | | |
|---|---|
| <p>① DUCT SYSTEM</p> <p>SUPPLY AIR DUCT</p> <p><input type="checkbox"/> Sealed</p> <p><input type="checkbox"/> Insulated (if necessary)</p> <p><input type="checkbox"/> Registers Open and Unobstructed</p> <p>RETURN AIR DUCT</p> <p><input type="checkbox"/> Sealed</p> <p><input type="checkbox"/> Filter Installed and Clean</p> <p><input type="checkbox"/> Registers Open and Unobstructed</p> <p>② INTEGRATED CONTROL</p> <p><input type="checkbox"/> Jumpers Configured Correctly (if applicable)</p> <p><input type="checkbox"/> Appropriate Links in Place (if applicable)</p> <p>③ VOLTAGE CHECK</p> <p><input type="checkbox"/> Supply Voltage _____</p> <p><input type="checkbox"/> Low Voltage _____</p> <p><input type="checkbox"/> Electrical Connections Tight</p> <p>④ DRAIN LINE</p> <p><input type="checkbox"/> Leak Free</p> | <p>⑤ TOTAL EXTERNAL STATIC (dry coil)</p> <p style="text-align: right;">dry coil wet coil</p> <p>Supply External Static _____</p> <p>Return External Static _____</p> <p>Total External Static = _____</p> <p>⑥ ELECTRIC HEAT AMPS _____</p> <p>⑦ INDOOR BLOWER AMPS _____</p> <p>INDOOR BLOWER CFM _____</p> <p>⑧ TEMPERATURE DROP (Cooling Mode)</p> <p>Return Duct Temperature _____</p> <p>Supply Duct Temperature - _____</p> <p>Temperature Drop = _____</p> <p>⑧ TEMPERATURE RISE (Heating Mode)</p> <p>Return Duct Temperature _____</p> <p>Supply Duct Temperature - _____</p> <p>Temperature Rise = _____</p> <p>⑨ THERMOSTAT</p> <p><input type="checkbox"/> Adjusted and Programmed</p> <p><input type="checkbox"/> Operation Explained to Owner</p> |
|---|---|

☐ Explained Operation of System to Homeowner

Technician's Name: _____ Date Start-Up & Performance Check Completed _____

FIGURE 32. Start-Up and Performance Checklist (Horizontal Configuration)