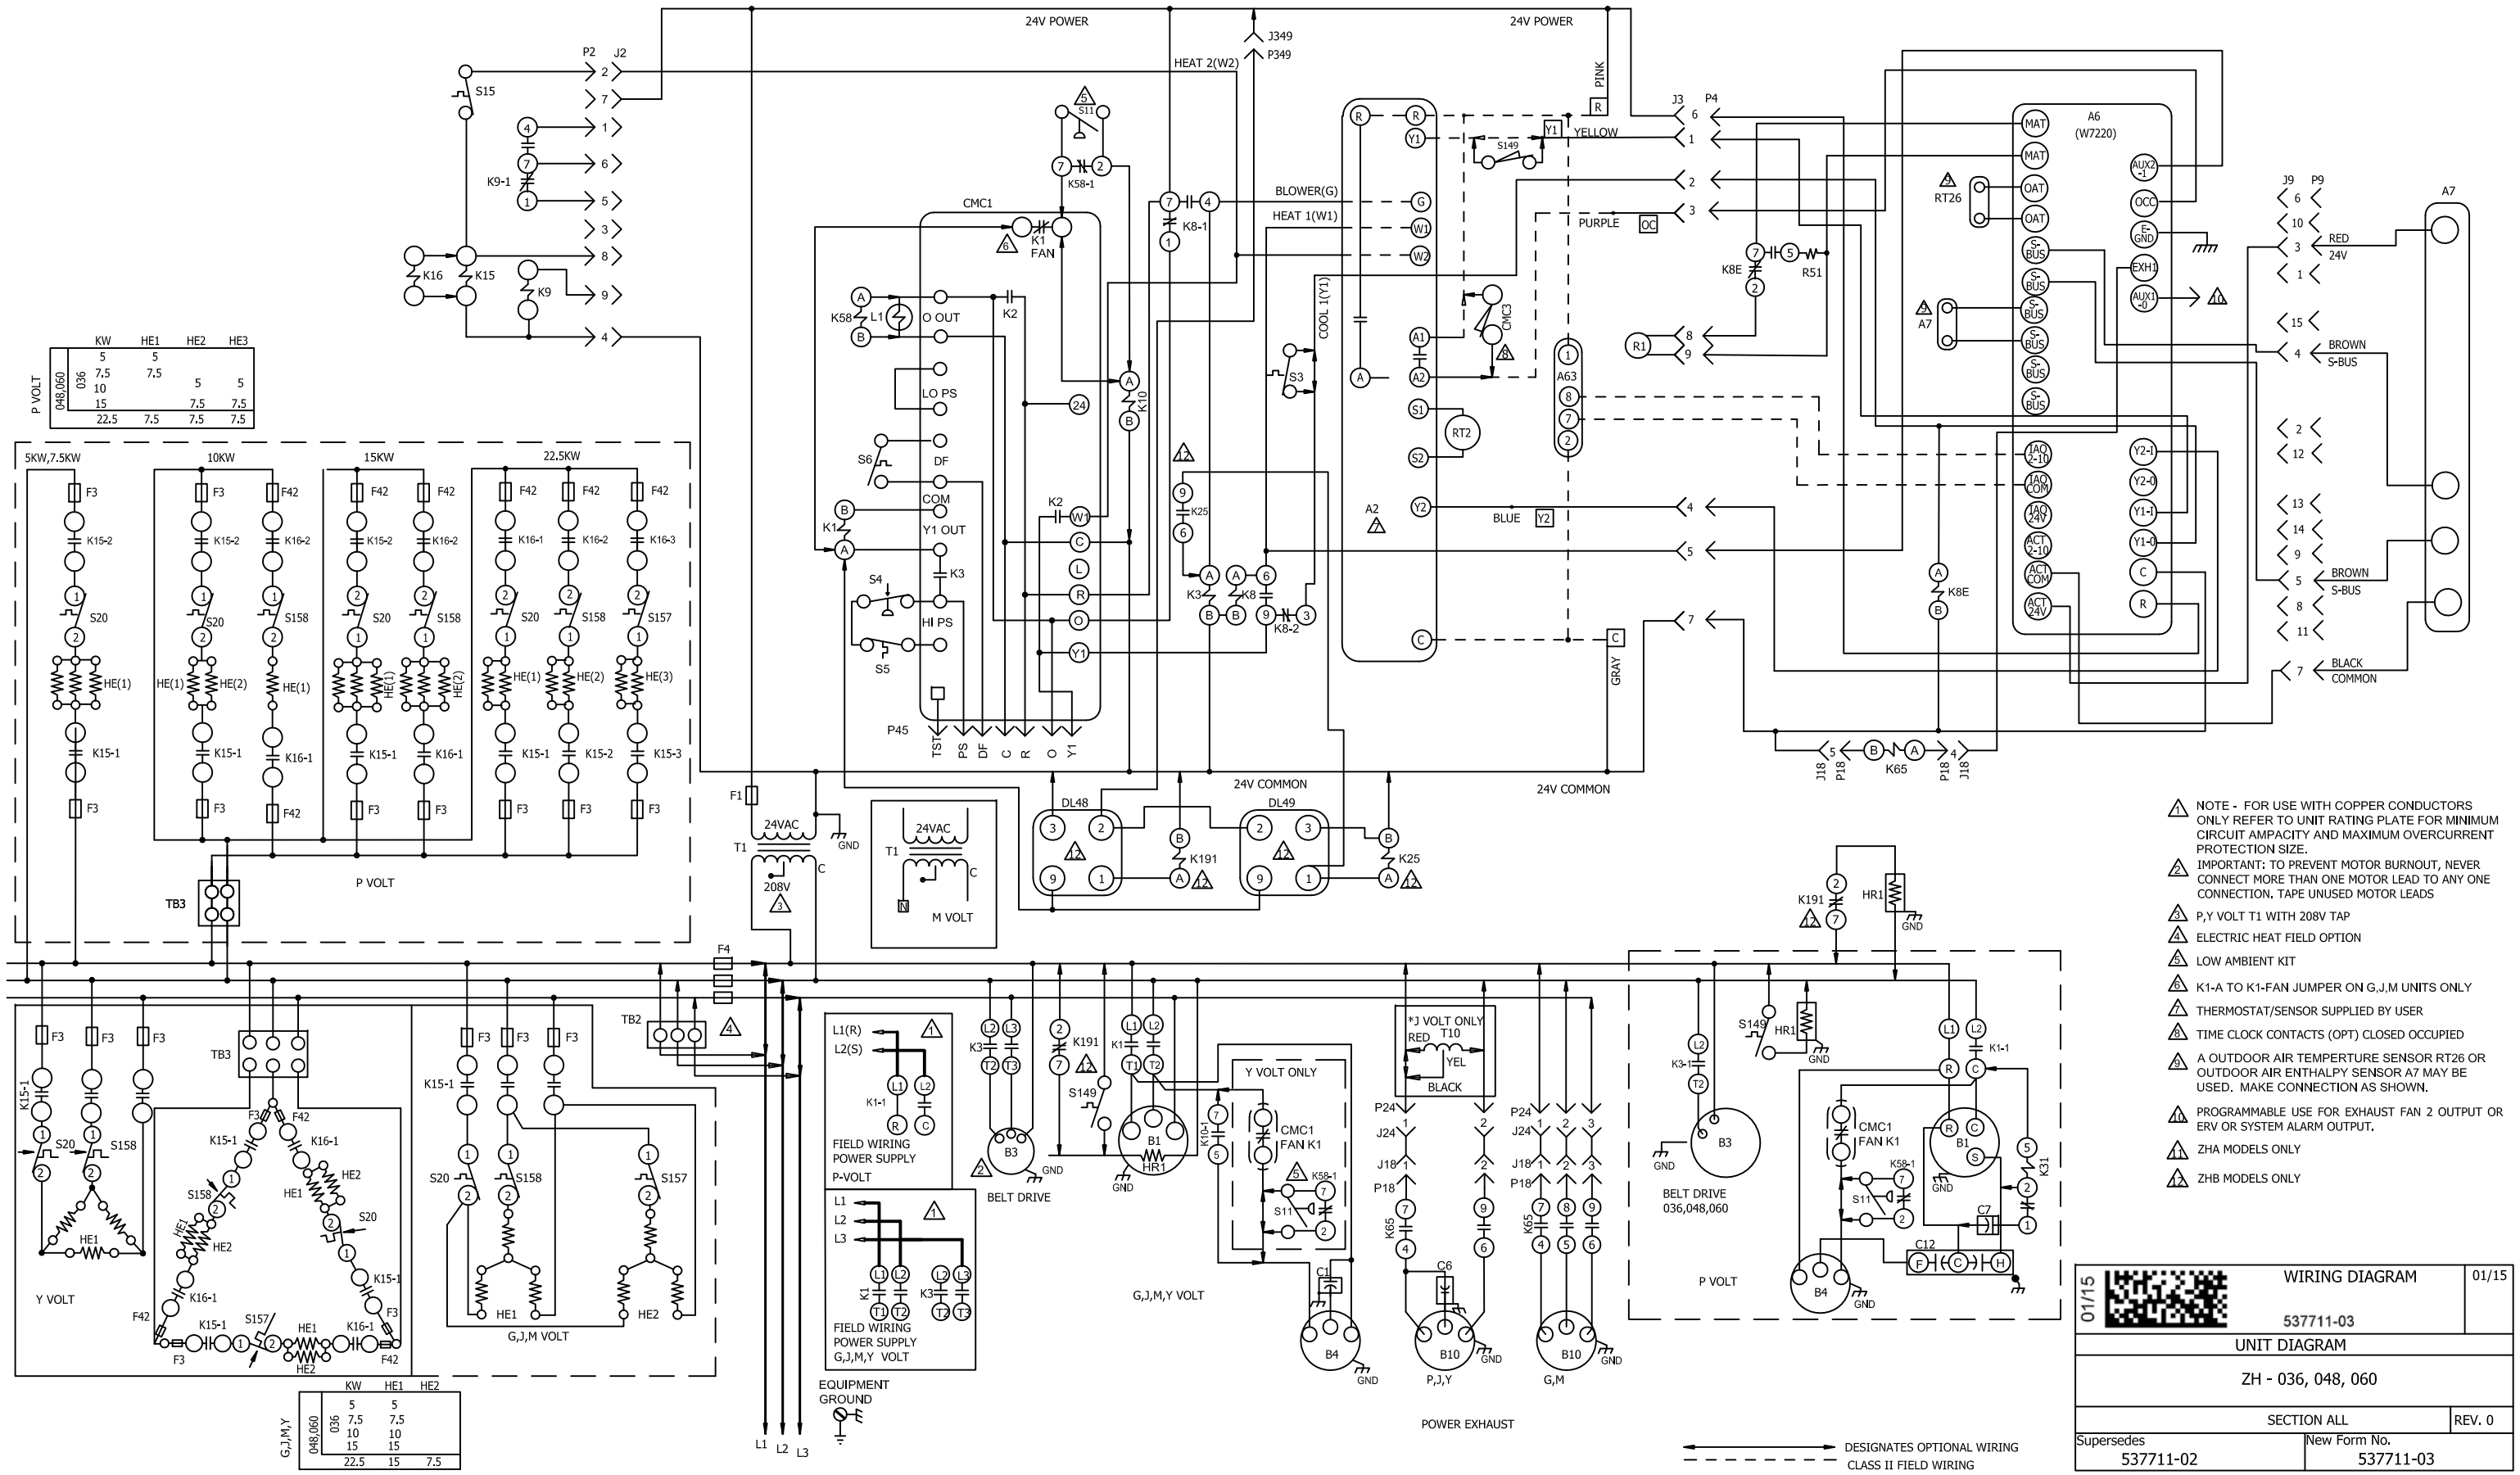

1. NOTE - FOR USE WITH COPPER CONDUCTORS ONLY REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE.
2. IMPORTANT: TO PREVENT MOTOR BURNOUT, NEVER CONNECT MORE THAN ONE MOTOR LEAD TO ANY ONE CONNECTION. TAPE UNUSED MOTOR LEADS
3. P,Y VOLT T1 WITH 208V TAP
4. ELECTRIC HEAT FIELD OPTION
5. LOW AMBIENT KIT
6. K1-A TO K1-FAN JUMPER ON G,J,M UNITS ONLY
7. THERMOSTAT/SENSOR SUPPLIED BY USER
8. TIME CLOCK CONTACTS (OPT) CLOSED OCCUPIED
9. A OUTDOOR AIR TEMPERTURE SENSOR RT26 OR OUTDOOR AIR ENTHALPY SENSOR A7 MAY BE USED. MAKE CONNECTION AS SHOWN.
10. PROGRAMMABLE USE FOR EXHAUST FAN 2 OUTPUT OR ERV OR SYSTEM ALARM OUTPUT.
11. ZHA MODELS ONLY
12. ZHB MODELS ONLY

01/15	WIRING DIAGRAM 537711-03	01/15
	UNIT DIAGRAM	
	ZH - 036, 048, 060	
	SECTION ALL	REV. 0
Supersedes 537711-02	New Form No. 537711-03	