



INSTALL INSTRUCTIONS FOR CONSOLIDATED COIL/HAIL GUARD TO SUIT LENNOX CAT # 15D29

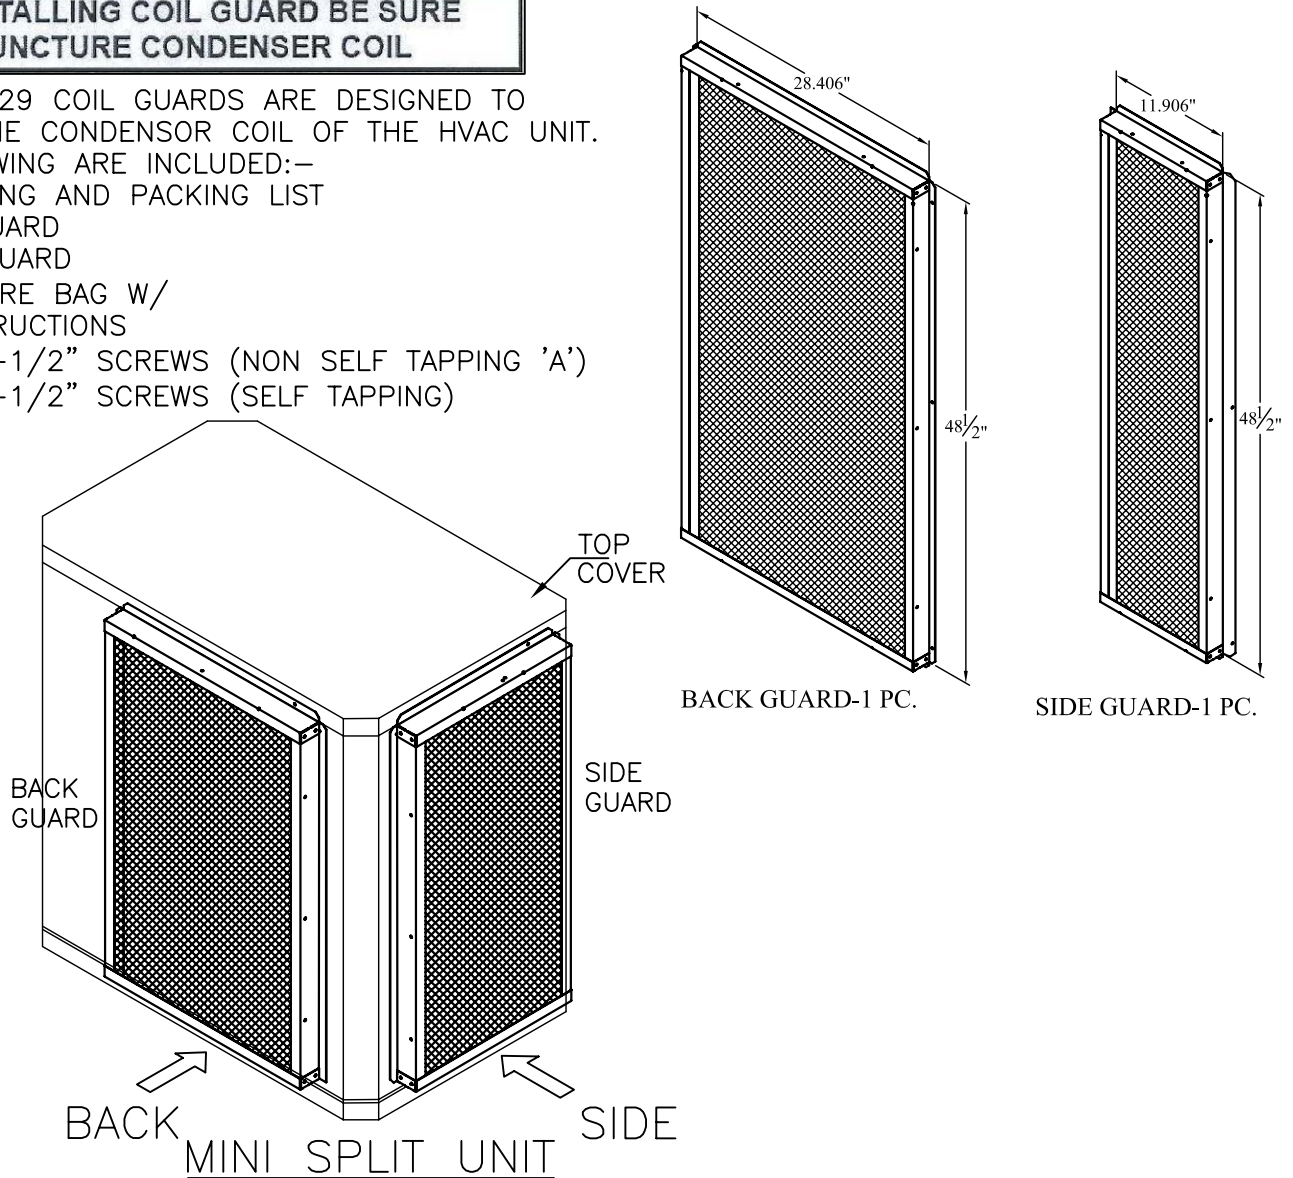
⚠ CAUTION

WHEN INSTALLING COIL GUARD BE SURE
NOT TO PUNCTURE CONDENSER COIL

1. THE 15D29 COIL GUARDS ARE DESIGNED TO
PROTECT THE CONDENSOR COIL OF THE HVAC UNIT.
THE FOLLOWING ARE INCLUDED:-

SHIPPING AND PACKING LIST

- 1- SIDE GUARD
- 1- BACK GUARD
- 1- HARDWARE BAG W/
1-INSTRUCTIONS
- 3-#10-1/2" SCREWS (NON SELF TAPPING 'A')
- 9-#10-1/2" SCREWS (SELF TAPPING)



**NOTE:- BE CAREFUL NOT TO DAMAGE THE COIL WHILE
INSTALLING THE GUARDS.
THE SELF DRILLING SCREWS PROVIDED CAN BE USED
ON THE SIDES WITHOUT MATCHING HOLES IN THE UNIT.
DO NOT REMOVE WIRE FAN GUARD. LEAVE IT ON THE
UNIT.**

5000362 LCCGH061

MAR.,13,2017



INSTALL INSTRUCTIONS FOR CONSOLIDATED COIL/HAIL GUARD TO SUIT LENNOX CAT # 15D29

INSTALLATION PROCEDURE


1. DISCONNECT ALL POWER SOURCES TO THE UNIT.
2. REMOVE WIRE GRID ON BACK OF UNIT AND DISCARD.
3. BACK GUARD INSTALLATION:-

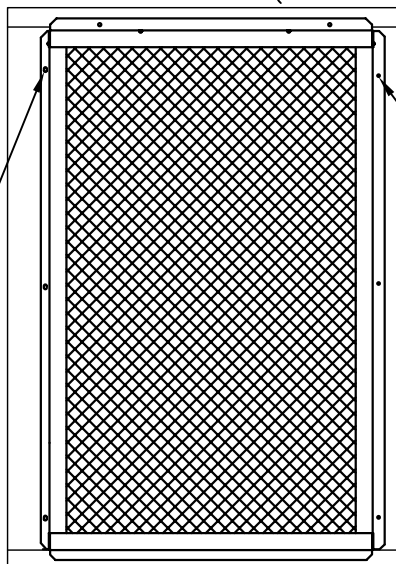
–LOCATE AND UNSCREW EXISTING SCREWS ON THE UNIT. USE SAME SCREW HOLES TO LINE UP GUARD LEFT FLANGE ON TO THE UNIT. TO HOLD THE GUARD, USE #10X1/2" NON SELF TAPPING SCREWS (PROVIDED WITH PACKAGE). DO NOT USE EXISTING UNIT SCREWS JUST REMOVED. USE ONLY HAND SCREW DRIVER, TO AVOID ANY COIL DAMAGE. DO NOT USE POWER DRILL. (FIG.#2)

–SCREW RIGHT SIDE FLANGE ON TO THE UNIT USING #10X1/2" SELF TAPPING SCREWS.

4. SIDE GUARD INSTALLATION:-


– SECURE LEFT AND RIGHT SIDE FLANGES ON TO THE UNIT SCREWING THEM WITH #10X1/2" SELF TAPPING SCREWS (PROVIDED WITH PACKAGE).

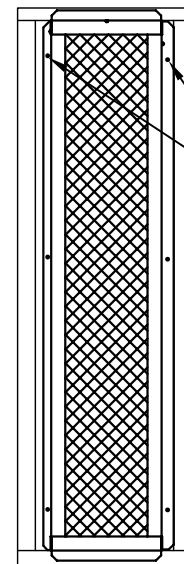
TYPE A

USE #10-1/2" (TYPE A) SCREWS—ONLY USE HAND SCREWDRIVER—DO NOT USE POWER DRILL !!



BACK VIEW


FIG. 2

SELF TAPPING

USE #10-1/2" SCREWS (SELF TAPPING) !!



SIDE VIEW

FIG. 3

SELF TAPPING

USE #10-1/2" SCREWS (SELF TAPPING)