

NTC1 & BC1 ENCLOSURE

INSTALLATION INSTRUCTIONS FOR NEMA 1 ENCLOSURE (34M23) USED WITH L Connection® NETWORK COMPONENTS

Shipping and Packing List

Package 1 of 1 contains:

- 1- Enclosure
- 3- 6-inch Velcro adhesive strip
- 4- #6-32 X 1/2 Screws

Application

The NEMA 1 enclosure is used indoors to install L Connection network components such as the NTC1 and BC1 controllers, modem, and phone line auto-router.

Installation

- 1- Use four screws to secure BC1 or NTC1 base to enclosure mounting plate. See figure 1.

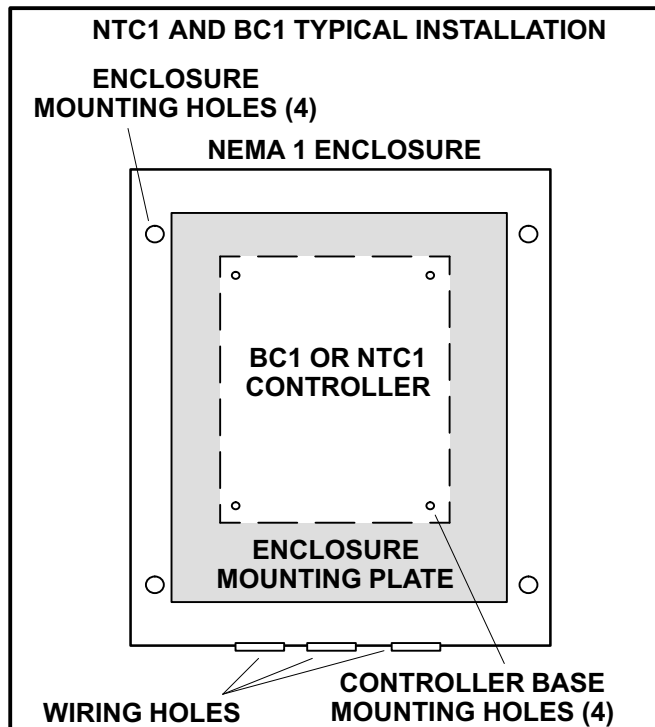


FIGURE 1

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer.

- 2- Use Velcro strips to secure the modem and phone line auto-router to the enclosure mounting plate. See figure 2.
- 3- Route wiring through holes in bottom of enclosure. Refer to local codes and literature provided with each component to make wiring connections.

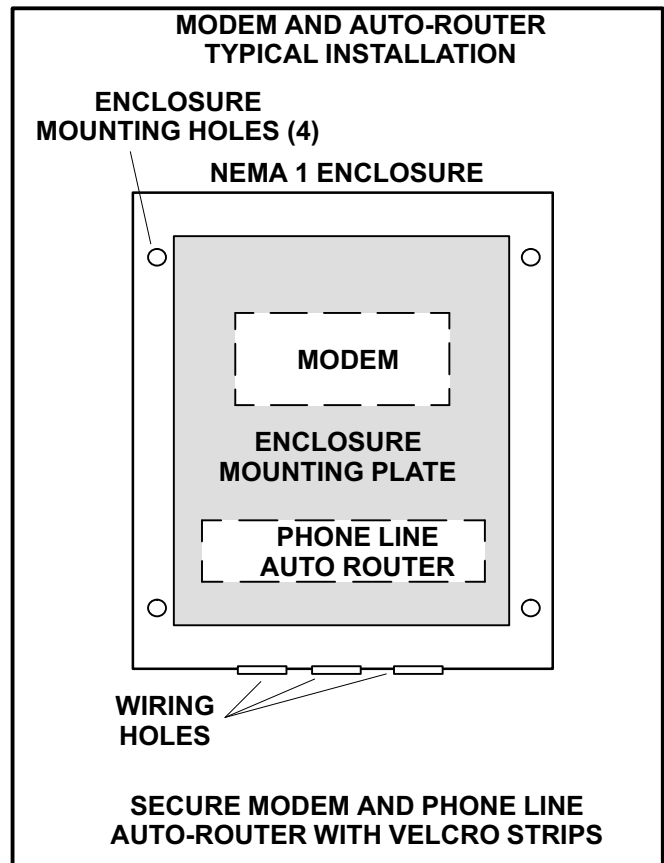


FIGURE 2

