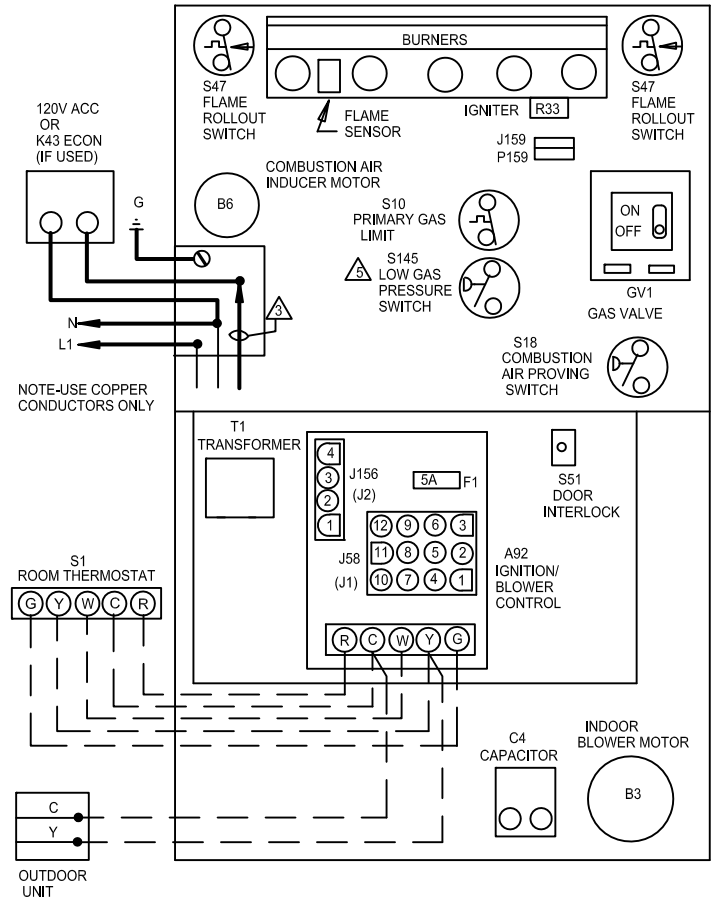

BLOWER SPEED CHART				
UNIT	FACTORY CONNECTED SPEED TAPS COOL	HEAT	PARK	MOTOR SPEEDS AVAIL.
045XP24B	BROWN	YELLOW	BLACK, RED	4
045XP36B		RED	BLACK,YELLOW	4
070XP36B		YELLOW	BLACK, RED	4
4 090XP36C		BROWN	BLACK,YELLOW,RED	4
090XP48C		YELLOW	BLACK, RED	4
4 110XP48C	BLACK	BLACK	BROWN,YELLOW,RED	4
110XP60C	BLACK	BROWN	YELLOW, RED	4
4 135XP60D	BLACK	BROWN	YELLOW, RED	4

BLOWER SPEED SELECTION

HI ◄ ► LO

SPEED TAPS	BLACK	BROWN	YELLOW	RED	4

THERMOSTAT HEAT ANTICIPATION SETTINGS

.65 AMP	HONEYWELL VALVE

JACKPLUG CHART	
J,P58	JACK/PLUG-BURNER CONTROL
J,P156	JACK/PLUG-INDUCER/IGNITER
J,P159	JACK/PLUG-IGNITER

WARNING-
ELECTRIC SHOCK HAZARD, CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES

NOTE-
IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS AND TERMINATION

1. IMPORTANT- TO PREVENT MOTOR BURNOUT, NEVER CONNECT MORE THAN ONE LEAD TO ANY ONE CONNECTION
2. PARK TERMINALS ARE UNPOWERED TERMINALS. ALL UNUSED MOTOR LEADS MUST BE WIRED TO A PARK TERMINAL
3. FIELD SUPPLIED ACC. WIRE
4. DO NOT USE RED (LOW SPEED) MOTOR LEAD FOR HEATING. LEAVE ON PARK TERMINAL FOR 090XP36C, 110XP48C AND 135XP60D UNITS
5. S145 IS USED WITH HONEYWELL GAS VALVE WHEN APPLIED IN LP GAS UNITS
6. HEAT/COOL JUMPER PRESENT ON SOME MODELS

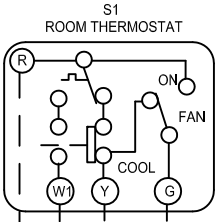

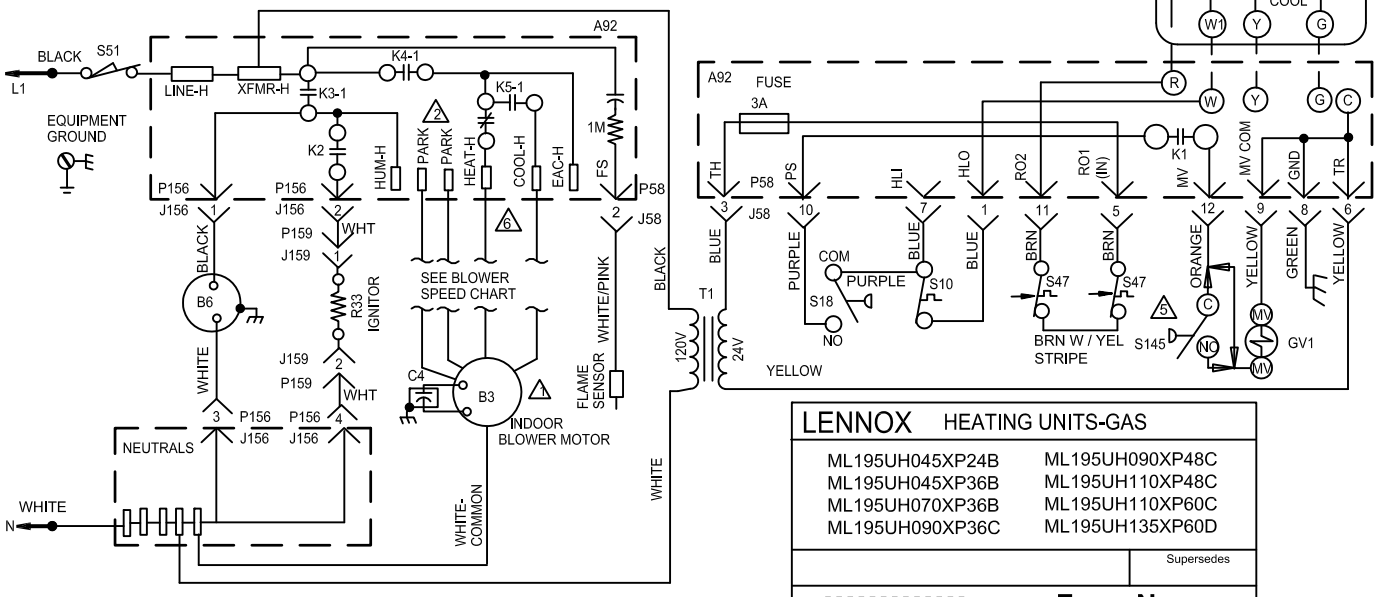

DENOTES OPTIONAL COMPONENTS
LINE VOLTAGE FIELD INSTALLED
CLASS II VOLTAGE FIELD WIRING

LENNOX HEATING UNITS-GAS

ML195UH045XP24B	ML195UH090XP48C
ML195UH045XP36B	ML195UH110XP48C
ML195UH070XP36B	ML195UH110XP60C
ML195UH090XP36C	ML195UH135XP60D

Supersedes

1214

Form No. 537554-01

© 2011

Litho U.S.A.