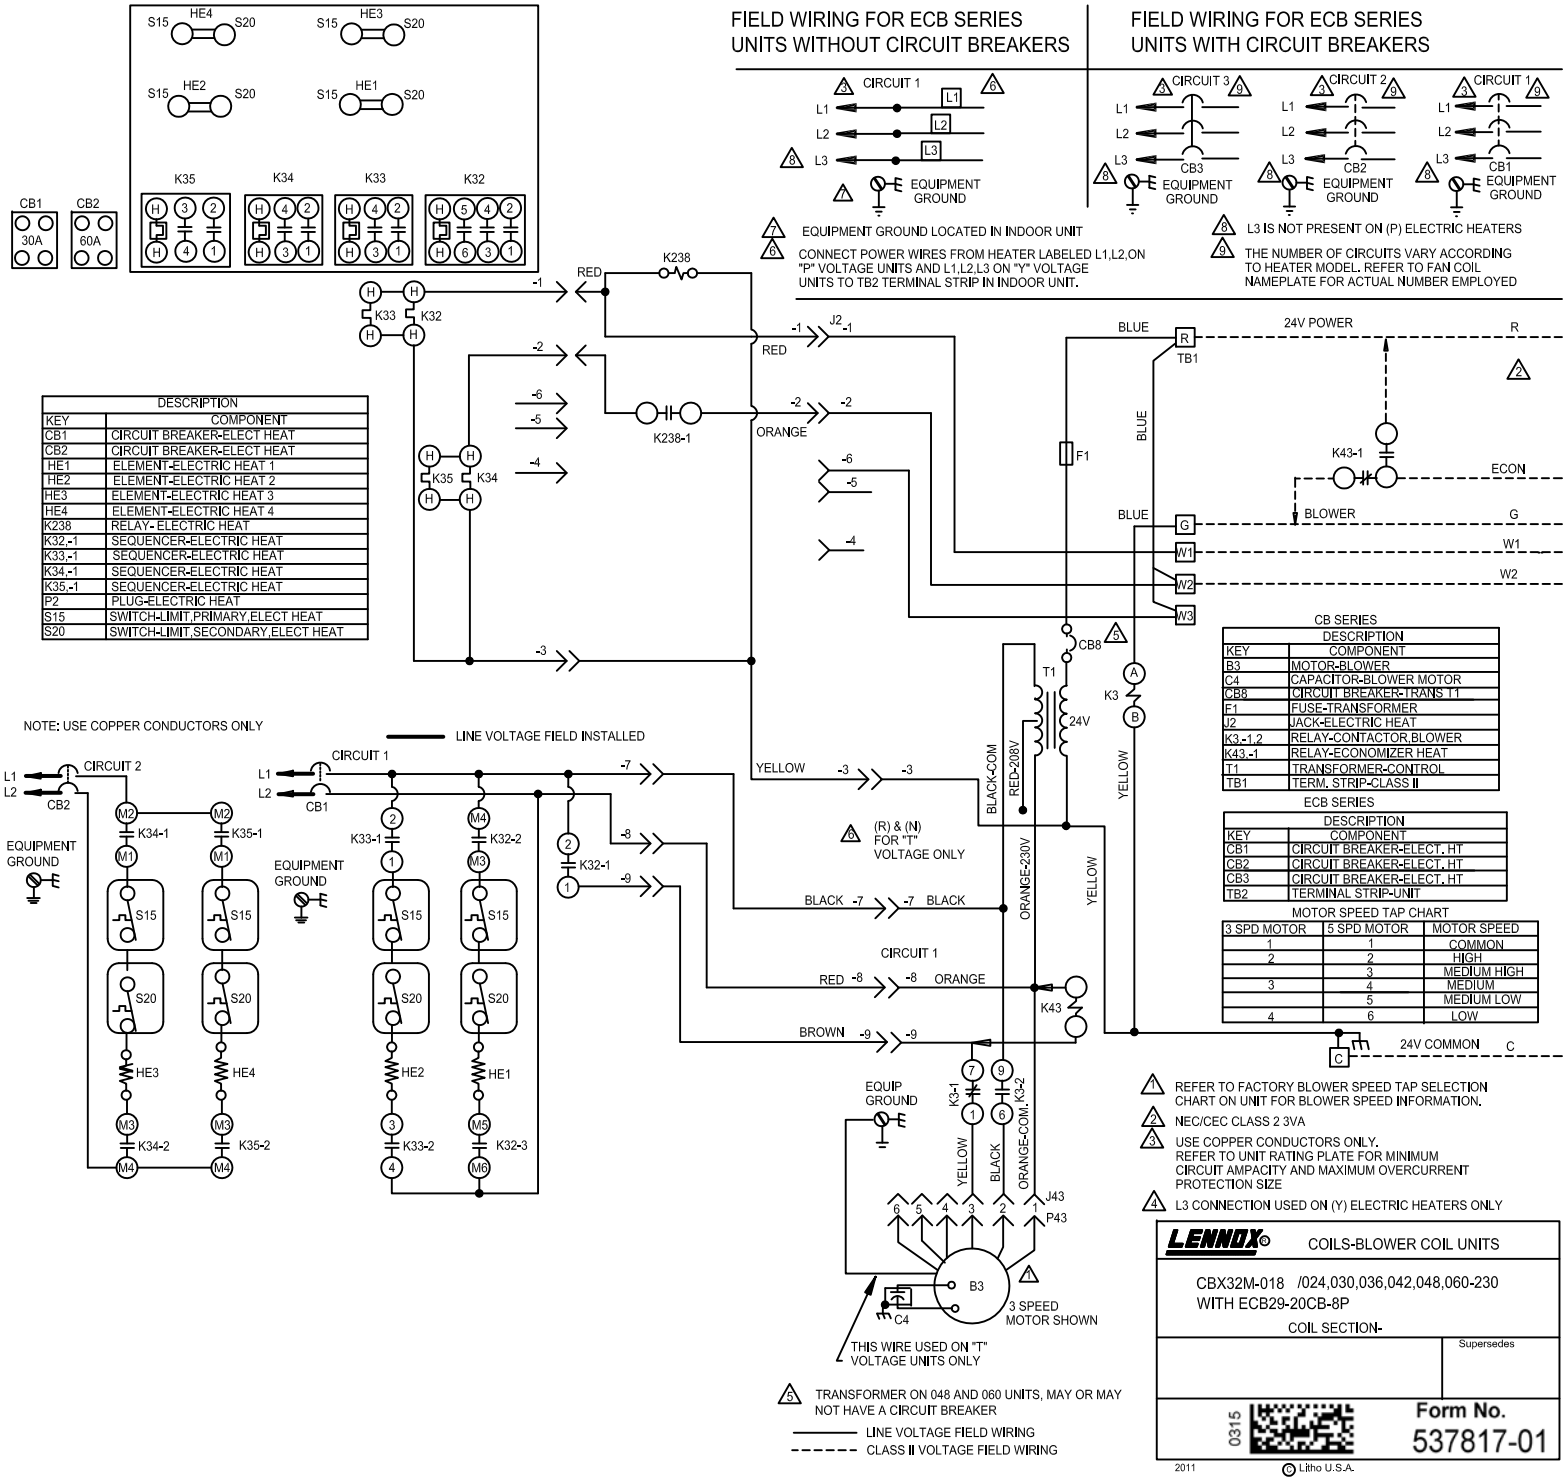

DESCRIPTION	
KEY	COMPONENT
CB1	CIRCUIT BREAKER-ELECT HEAT
CB2	CIRCUIT BREAKER-ELECT HEAT
HE1	ELEMENT-ELECTRIC HEAT 1
HE2	ELEMENT-ELECTRIC HEAT 2
HE3	ELEMENT-ELECTRIC HEAT 3
HE4	ELEMENT-ELECTRIC HEAT 4
K238	RELAY- ELECTRIC HEAT
K32,-1	SEQUENCER-ELECTRIC HEAT
K33,-1	SEQUENCER-ELECTRIC HEAT
K34,-1	SEQUENCER-ELECTRIC HEAT
K35,-1	SEQUENCER-ELECTRIC HEAT
P2	PLUG-ELECTRIC HEAT
S15	SWITCH-LIMIT,PRIMARY,ELECT HEAT
S20	SWITCH-LIMIT,SECONDARY,ELECT HEAT

CB SERIES

DESCRIPTION	
KEY	COMPONENT
B3	MOTOR-BLOWER
C4	CAPACITOR-BLOWER MOTOR
CB8	CIRCUIT BREAKER-TRANS T1
F1	FUSE-TRANSFORMER
J2	JACK-ELECTRIC HEAT
K3,-1,2	RELAY-CONTACTOR,BLOWER
K43,-1	RELAY-ECONOMIZER HEAT
T1	TRANSFORMER-CONTROL
TB1	TERM. STRIP-CLASS II

ECB SERIES

DESCRIPTION	
KEY	COMPONENT
CB1	CIRCUIT BREAKER-ELECT. HT
CB2	CIRCUIT BREAKER-ELECT. HT
CB3	CIRCUIT BREAKER-ELECT. HT
TB2	TERMINAL STRIP-UNIT

MOTOR SPEED TAP CHART

3 SPD MOTOR	5 SPD MOTOR	MOTOR SPEED
1	1	COMMON
2	2	HIGH
	3	MEDIUM HIGH
3	4	MEDIUM
	5	MEDIUM LOW
4	6	LOW

1. REFER TO FACTORY BLOWER SPEED TAP SELECTION CHART ON UNIT FOR BLOWER SPEED INFORMATION.
2. NEC/CEC CLASS 2 3VA
3. USE COPPER CONDUCTORS ONLY. REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE
4. L3 CONNECTION USED ON (Y) ELECTRIC HEATERS ONLY

LENNOX® COILS-BLOWER COIL UNITS

CBX32M-018 /024,030,036,042,048,060-230
WITH ECB29-20CB-8P
COIL SECTION-

Supersedes

0315

Form No. 537817-01

2011 © Litho U.S.A.

Cut size: 8-1/4" wide X 8-1/2" tall