



# INSTALL INSTRUCTIONS FOR CONSOLIDATED COIL/HAIL GUARD TO SUIT LENNOX CAT # 15D22

## ⚠ CAUTION

WHEN INSTALLING COIL GUARD BE SURE  
NOT TO PUNCTURE CONDENSER COIL

1. THE 15D22 COIL GUARDS ARE DESIGNED TO PROTECT THE CONDENSOR COIL OF THE HVAC UNIT. THE FOLLOWING ARE INCLUDED:—

SHIPPING AND PACKING LIST

- 1- SIDE GUARD
- 1- BACK GUARD
- 1- HARDWARE BAG W/
  - 1-INSTRUCTIONS
  - 2-#10X1/2" SCREWS (NON SELF TAPPING 'A')
  - 9-#10X1/2" SCREWS (SELF TAPPING)

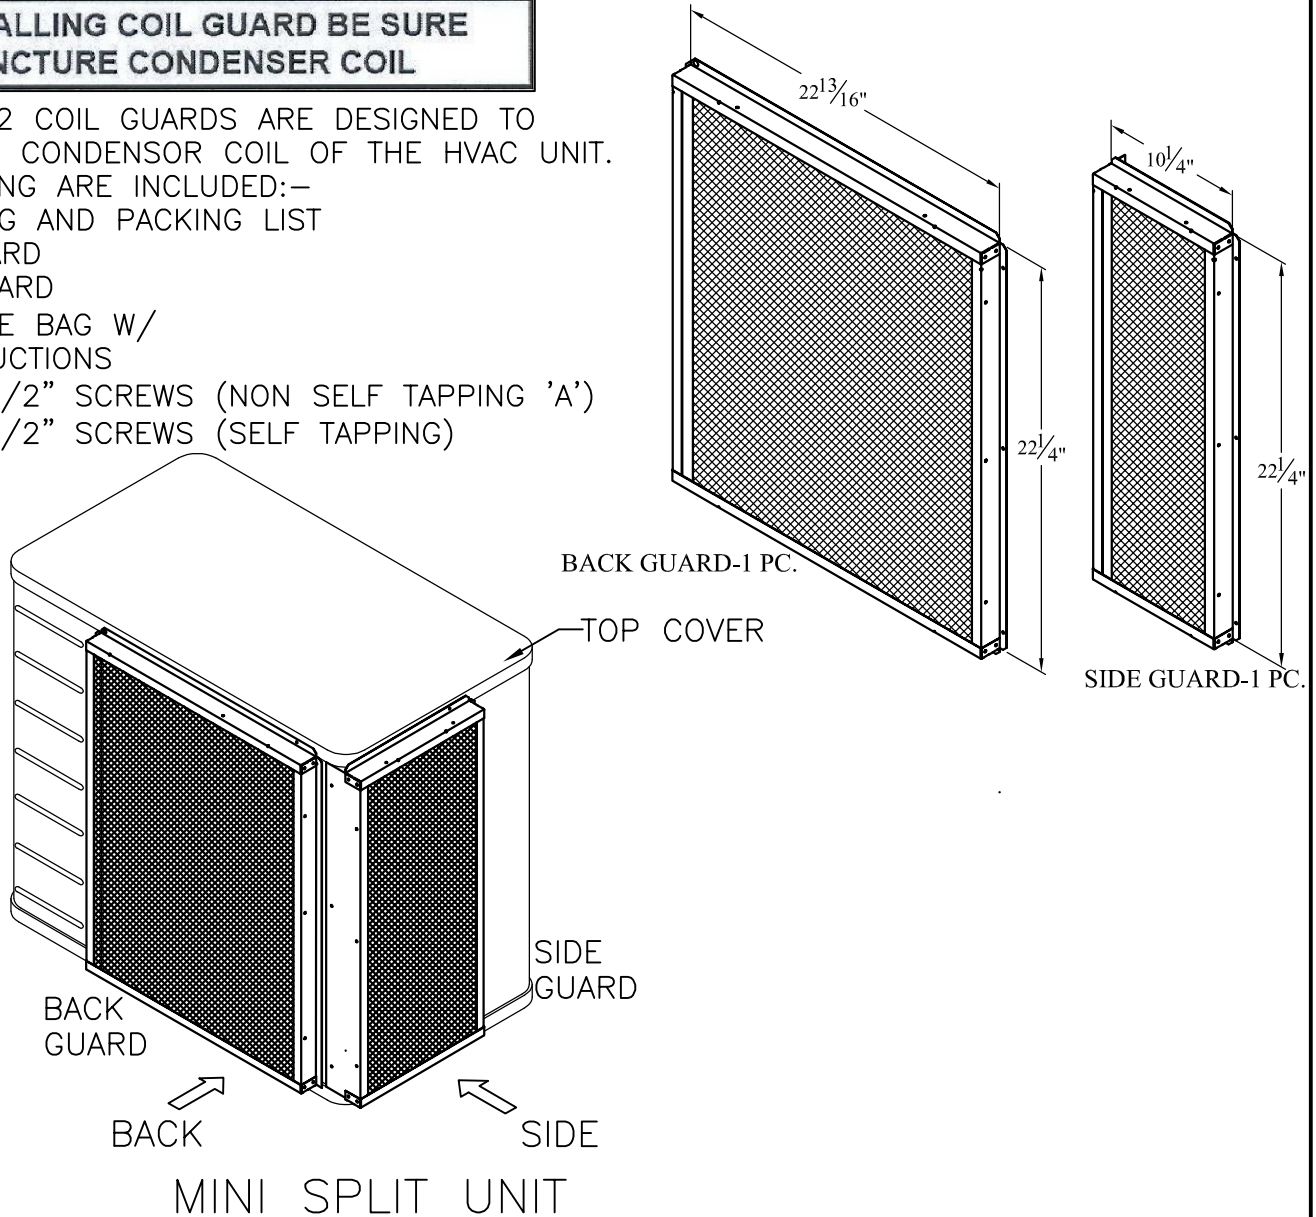


FIG. 1

**NOTE:- BE CAREFUL NOT TO DAMAGE THE COIL WHILE INSTALLING THE GUARDS.  
THE SELF DRILLING SCREWS PROVIDED CAN BE USED ON THE SIDES WITHOUT MATCHING HOLES IN THE UNIT.  
DO NOT REMOVE GRID. LEAVE IT ON THE UNIT.**

5000347 LCCGH051

AUG. 3 / 16



# INSTALL INSTRUCTIONS FOR CONSOLIDATED COIL/HAIL GUARD TO SUIT LENNOX CAT # 15D22

## \*\*\*\*INSTALLATION PROCEDURE\*\*\*\*

1. DISCONNECT ALL POWER SOURCES TO THE UNIT.
2. REMOVE TOP COVER FROM THE UNIT. TO FACILITATE CLEAR VIEW OF SCREW LOCATIONS ON BOTH SIDES, IT IS REQUIRED TO UNSCREW TOP COVER BEFORE LOCATING GUARDS ON THE UNIT. LEAVE THE GRID ON THE UNIT. (FIG. #1)

### 3. BACK GUARD INSTALLTION:-

- LOCATE AND UNSCREW EXISTING SCREWS ON THE UNIT. USE SAME SCREW HOLES TO LINE UP GUARD LEFT FLANGE ON TO THE UNIT. TO HOLD THE GUARD, USE #10X1/2" TYPE A SCREWS (PROVIDED WITH PACKAGE). DO NOT USE EXISTING UNIT SCREWS JUST REMOVED. USE ONLY HAND SCREW DRIVER, TO AVOID ANY COIL DAMAGE. DO NOT USE POWER DRILL ON LEFT SIDE. (FIG.#2)
- ALIGN EDGE OF GUARD TO FIT TO INSIDE EDGE OF UNIT PANEL
- SECURE THE GUARD ON RIGHT SIDE BY USING #10X1/2" SELF TAPPING SCREWS. (PROVIDED WITH PACKAGE).

### 4. SIDE GUARD INSTALLTION:-

- LOCATE THE GUARD OVER TO COVER THE ENTIRE GRID.
- SECURE LEFT AND RIGHT SIDE FLANGES ONTO THE UNIT BY SECURING THEM WITH #10X1/2" SELF TAPPING SCREWS (PROVIDED WITH PACKAGE).

5. SCREW TOP COVER BACK ON THE UNIT.

