

INSTALLATION INSTRUCTIONS FOR NATURAL TO LP/PROPANE KIT 11K49 USED WITH ML180, EL180, 80AF1, ML193, ML195, EL195, 92AF1 & 95AF1 SERIES UNITS

⚠ WARNING

This conversion kit is to be installed by a licensed professional service technician (or equivalent) or other qualified agency in accordance with the manufacturer's instructions, all codes and requirements of the authority having jurisdiction in the USA, and the requirements of the CSA-B149 installation codes in Canada. If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life. The qualified agency performing this work assumes responsibility for this conversion.

⚠ CAUTION

As with any mechanical equipment, personal injury can result from contact with sharp sheet metal edges. Be careful when you handle this equipment.

⚠ CAUTION

Gas valve conversion kit MUST be installed BEFORE the unit is fired using LP/propane gas. Unit damage WILL OCCUR if the unit is fired using LP/propane gas with the original natural gas orifices.

Shipping & Packing List

Package 1 of 1 contains the following:

- 12 -Main burner orifices (0.034)
- 1 - Gas converter sticker
- 1 - Nameplate conversion sticker
- 1 - Bag assembly containing:
 - 1- Gas valve regulator spring
 - 1- Low gas inlet pressure switch (S145)
 - 1- Gas valve inlet brass fitting
 - 1- Wiring harness

Application

Use natural to LP/Propane gas conversion kit 11K49 to convert ML180, EL180, 80AF1, ML193, ML195, EL195, 92AF1 and 95AF1 units from natural gas to LP/Propane.

Installation

⚠ DANGER

Danger of explosion.

There are circumstances in which odorant used with LP/propane gas can lose its scent. In case of a leak, LP/propane gas will settle close to the floor and may be difficult to smell. An LP/propane leak detector should be installed in all LP applications.

⚠ IMPORTANT

DO NOT use pipe dope or any pipe sealant on gas orifice threads.

- 6 - Replace the gas valve regulator spring with the provided regulator spring. See figure 6.
- 7 - **ML180(X), EL180(X) and 80AF1(X) NO_x units being converted from natural to LP /Propane.**
 - a - Remove the burner box assembly from the vestibule panel.
 - b - Remove the screws which secure each of the NO_x inserts to the clamshell. **Remove the NO_x insert and reinstall the screws. See figure 1.**
 - c - Re-install the manifold/valve assembly.

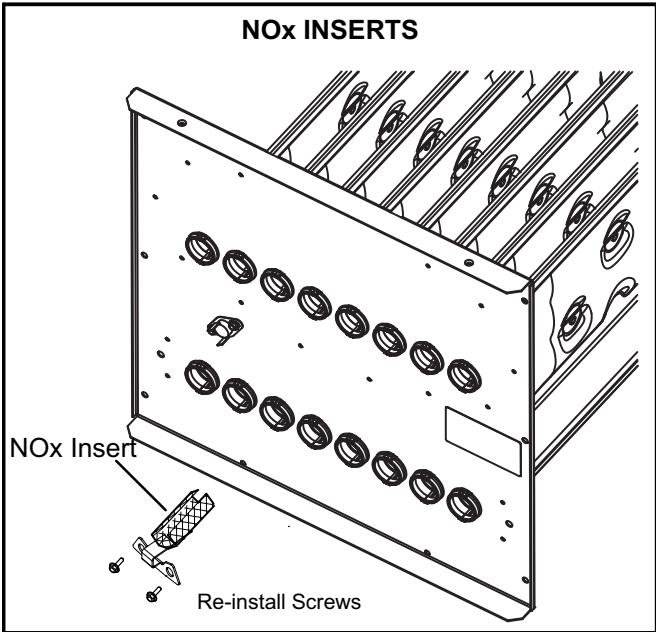


FIGURE 1

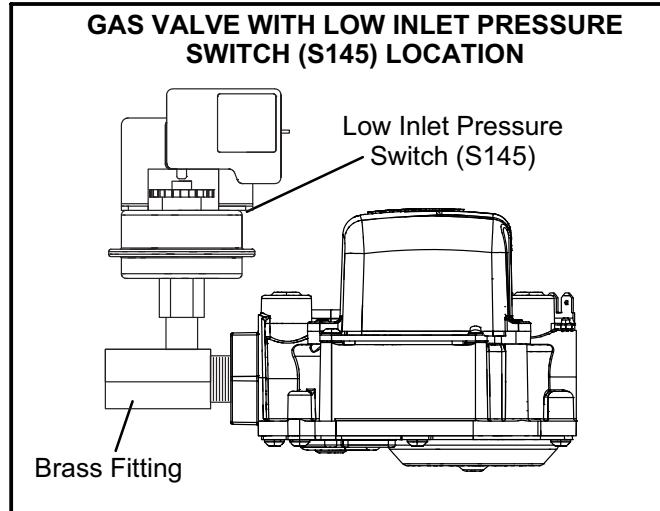


FIGURE 2

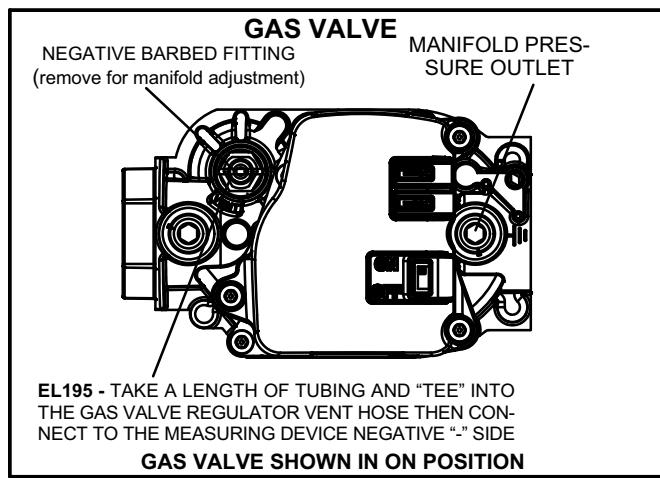


FIGURE 3

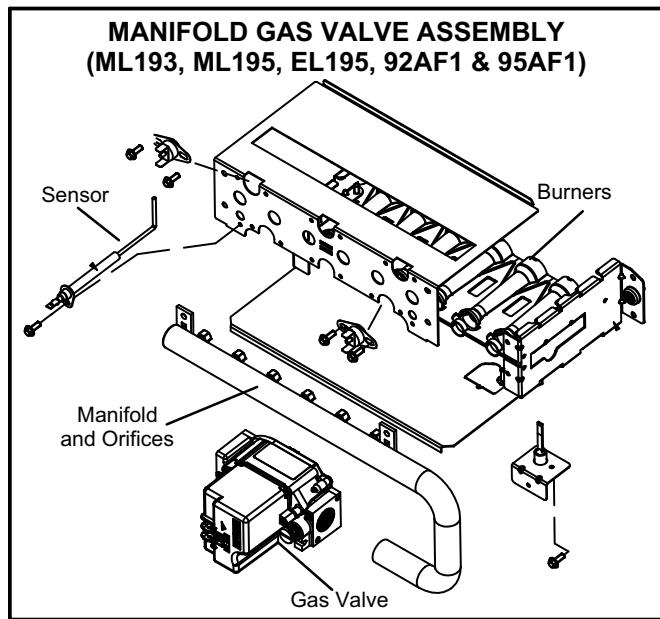


FIGURE 4

! IMPORTANT

Carefully check all piping connection for gas leaks.
DO NOT use matches, candles, open flames or other means of ignition to check for gas leaks. Use a soap solution or other preferred means.

! CAUTION

Some soaps used for leak detection are corrosive to certain metals. Carefully rinse piping thoroughly after leak test has been completed.

MANIFOLD GAS VALVE ASSEMBLY (ML180, EL180 & 80AF1)

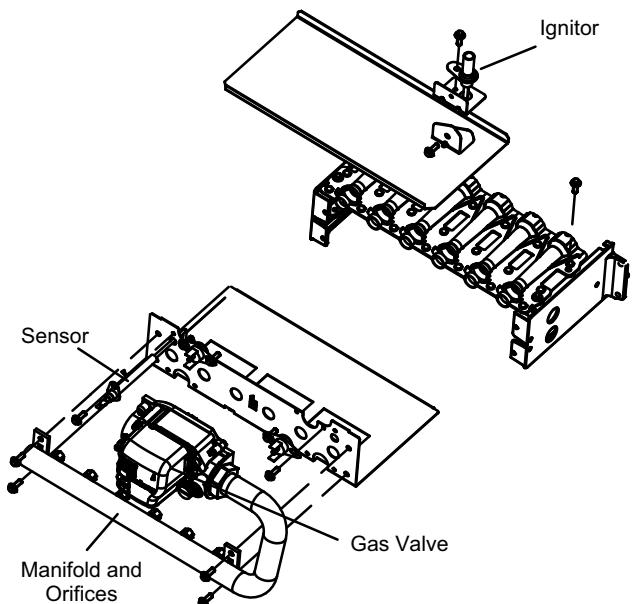


FIGURE 5

CONVERSION OF GAS VALVE

1. Remove the barbed (if equipped) fitting and pressure regulator adjusting screw.
2. Remove the existing spring.
3. Insert the replacement spring.
4. Install the new plastic pressure regulator adjustment screw so that the top of the screw is flush (level) with the top of the regulator. Turn the pressure regulator adjusting screw clockwise six complete turns. This adjustment provides a preliminary pressure setting of about 10 inches w.c. for the LP /propane regulator.
5. Check the regulator setting either with a manometer or by clocking the gas meter.
6. Re-install the barbed fitting.

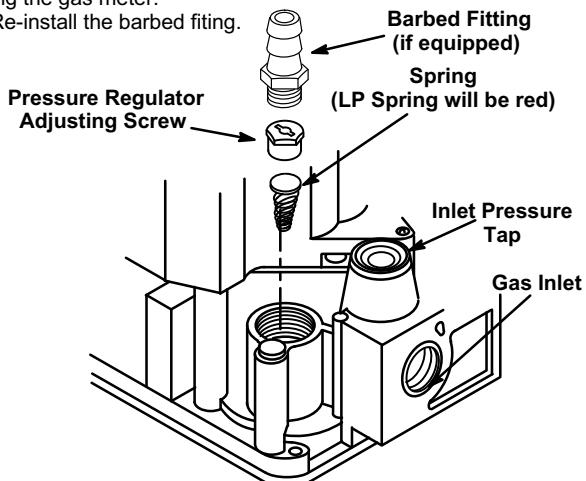



FIGURE 6

Start-Up & Adjustment

BEFORE LIGHTING - Smell all around the appliance area for gas. Be sure to smell next to the floor because LP/Propane gas is heavier than air and will settle on the floor.

Use only your hand to move the gas control switch. Never use tools. If the switch will not move by hand, do not try to repair it. Force or attempted repair may result in a fire or explosion.

LOW INLET PRESSURE SWITCH (S145) WIRING Point-to-Point Wiring Diagram

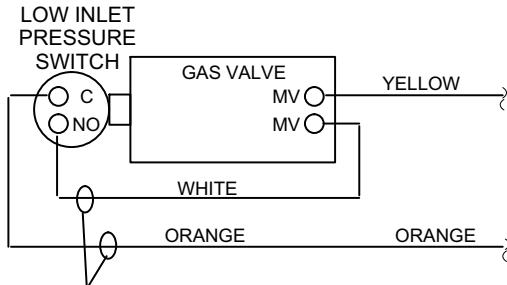

PROVIDED HARNESS WIRES

Schematic Diagram

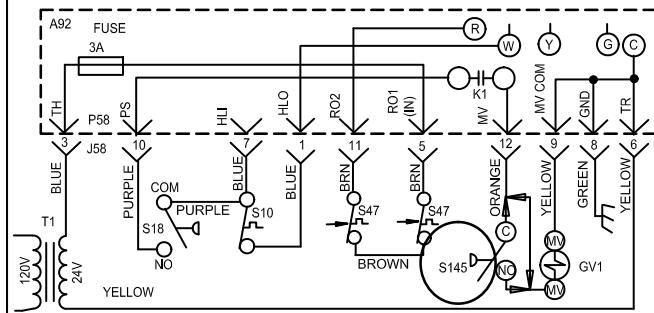


FIGURE 7

A - Placing the Unit into Operation

⚠️ IMPORTANT

Follow the lighting instructions provided on the unit. If lighting instructions are not available, refer to the following section.

Units are equipped with a hot surface ignition system. The ignition system automatically lights the burners each time the thermostat calls for heat.

- 1 - **STOP!** Read the safety information at the beginning of this section.
- 2 - Set the thermostat to its lowest setting.
- 3 - Turn off all electrical power to the furnace.
- 4 - Do **not** try to light the burners by hand.
- 5 - Remove the unit access panel.
- 6 - Move gas valve switch to **OFF**. See figure 3.
- 7 - Wait five (5) minutes for any gas to clear out. If you then smell gas, **STOP!** Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you do not smell gas, go to the next step.
- 8 - Move gas valve switch to **ON**. See figure 3.
- 9 - Replace the unit access panel.
- 10 - Turn on all electrical power to the unit.
- 11 - Set the thermostat to desired setting.
- 12 - If the furnace will not operate, see the section "Turning Gas Off to the Unit" and call your the gas supplier.

Gas Pressure Measurement

A - Gas Flow (Approximate)

TABLE 1

Unit	GAS METER CLOCKING CHART			
	Seconds for One Revolution			
	Natural		LP	
	1 cu ft Dial	2 cu ft Dial	1 cu ft Dial	2 cu ft DIAL
-045	80	160	200	400
-070	55	110	136	272
-090	41	82	102	204
-110	33	66	82	164
-135	27	54	68	136
Natural-1000 btu/cu ft		LP-2500 btu/cu ft		

Furnace should operate at least 5 minutes before checking gas flow. Determine time in seconds for **two** revolutions of gas through the meter. (Two revolutions assures a more accurate time.) **Divide by two** and compare to time in table 1 below. If manifold pressure matches table 2 and rate is incorrect, check gas orifices for proper size and restriction. Remove temporary gas meter if installed.

B - Supply Pressure Measurement

When testing supply gas pressure, use the 1/8" N.P.T. supply line tap located on the gas valve to facilitate test gauge connection. See figure 2. Check gas line pressure with unit firing at maximum rate. Low pressure may result in erratic operation or underfire. High pressure can result in permanent damage to gas valve or overfire.

On multiple unit installations, each unit should be checked separately, with and without units operating. Supply pressure must fall within range listed in table 2.

NOTE - To obtain accurate reading, shut off all other gas appliances connected to meter.

C - Manifold Pressure Measurement

ML180, EL180, 80AF1, ML193, ML195, 92AF1 & 95AF1

- Connect test gauge to manifold pressure tap (figure 2) on gas valve.
- Start unit and allow 5 minutes for unit to reach steady state.
- After allowing unit to stabilize for 5 minutes, record manifold pressure and compare to value given in table 2.
- If necessary, make adjustments. Figure 2 shows location of adjustment screw.

D - Manifold Pressure Measurement EL195

When testing manifold gas pressure, use the 1/8" N.P.T. plugged tap (manifold pressure outlet) located on the gas valve to facilitate test measuring device. See figure 3.

- Remove the threaded manifold pressure outlet plug from the gas valve and install the barbed fitting.
- Take a length of square tubing and connect one end to the barbed fitting and the other to the positive "+" side of the measuring device.
- Take another length of tubing and "tee" into the gas valve regulator vent hose. Connect to the measuring device negative "-" side.
- Start unit and allow 5 minutes for unit to reach steady state.
- After allowing unit to stabilize for 5 minutes, record manifold pressure and compare to value given in table 2.
- If necessary make adjustment. Turn off unit and remove the tubing from the negative (-) barbed fitting on the gas valve.
- Remove the negative barbed fitting as shown in figure 3 and using a screw driver make adjustment to increase or decrease manifold pressure.
- Repeat steps 1 through 7 until manifold pressure is correct.

TABLE 2

Unit	Manifold Pressure in.wg 0-7500 ft.	Supply Line Pressure in. w.g.	
		Min	Max
All Models	10.0	11.0	13.0

E - Proper Combustion

Furnace should operate minimum 15 minutes with correct manifold pressure and gas flow rate before checking combustion. Take combustion sample beyond the flue outlet and compare to table 3.

NOTE - Shut unit off and remove manometer as soon as the supply pressure, manifold pressure and combustion sample have been obtained. Take care to remove barbed fitting and replace threaded plug.

TABLE 3

Model	CO ₂ % For LP
All ML193, ML195, EL195, 92AF1, 95AF1 Units	8.4 - 9.6
All ML180, EL180, 80AF1 Units	7.5 - 9.0

The carbon monoxide reading should not exceed 50 ppm.

E - Turning Off Gas To the Unit

- Set the thermostat to its lowest setting.
- Turn off all the electrical power to the unit.
- Remove the access panel.
- Move the switch on the gas valve to **OFF**. Do not force the switch.