



## Replacement Guide for iComfort S30 Smart Hub (12X98)


**WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier

### REMOVING EXISTING SMART HUB


1. Disconnect power to the entire system.
2. Note the orientation of the antennas which will be need during the replacement procedure.
3. Remove the access cover from Smart Hub.
4. Take a picture or make a drawing showing the control wires and what terminals they are connected to.
5. Disconnect control wiring.
6. Remove the screw (though-hole) securing the Smart Hub to wall.
7. Lift up and out to remove Smart Hub from the key hole.
8. Discard Smart Hub.

THROUGH-HOLE

FRONT WITH  
ACCESS  
COVER  
REMOVED

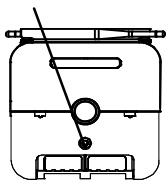

KEYHOLE

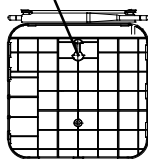

REAR

### SMART HUB INSTALLATION

1. Remove new Smart Hub from shipping container.
2. Remove the access cover from the Smart Hub.
3. Mount the Smart Hub on the wall with key hole support.
4. Use the through-hole screw previously removed to secure the Smart Hub.
5. Reconnect all wiring that was documented during the removal of the old Smart Hub.
6. Replace the access cover.
7. Unfold the antenna and position as noted during removal of the original Smart Hub.
8. Restore power to system.

0815



507541-01