




Replacement Guide for iComfort S30 Mag-Mount (12X99)


MAG-MOUNT ACCESS
COVER

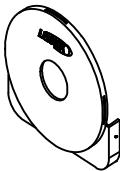

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier

REMOVING EXISTING MAG-MOUNT

1. Disconnect power to the entire system.
2. Remove HD Display from mag-mount.
3. Remove mag-mount access cover to allow access to control wiring and screws securing mag-mount to wall.
4. Take a picture or make a drawing showing the control wires and what terminals they are connected to.
5. Disconnect control wiring.
6. Remove screws securing mag-mount to wall.
7. Remove mag-mount.

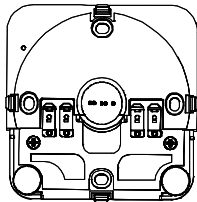

MAG-MOUNT
WITHOUT ACCESS
COVER

MAG-MOUNT INSTALLATION

1. Remove mag-mount from shipping container.
2. Remove mag-mount access cover.
3. Use existing screws to install new mag-mount to wall.
4. Reconnect wires as documented earlier.
5. Replace access cover.

0815



507543-01