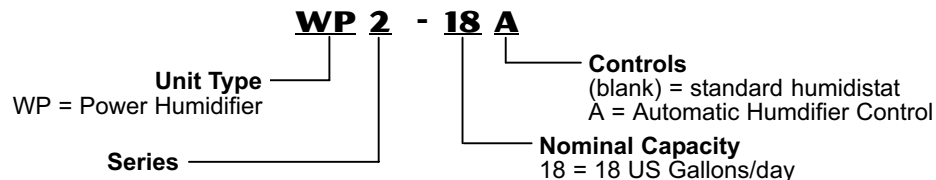


**ENGINEERING DATA****MODEL NUMBER IDENTIFICATION****FEATURES****WARRANTY**

All covered components have a limited warranty for five years in residential applications, one year in non-residential applications.

Refer to the Lennox Equipment Limited Warranty certificate included with the unit for additional details.

APPROVALS

Units are UL and ULC listed.

APPLICATIONS

Applicable to most forced air installations.

Installs on the supply air plenum.

Provides additional humidity to the home during the heating season to increase comfort level.

Humidifier, saddle valve and humidistat shipped in one package.

SEQUENCE OF OPERATION

Humidifier will only operate when indoor blower is operating

When the level of moisture in the return air or living space area drops below the set point of the humidistat, the water solenoid valve opens, water flows into a distribution tray and trickles down through evaporator pad, fan draws air in through the moistened evaporator pad and forces the humidified air back into supply air stream. When the humidistat/automatic control is satisfied, the water solenoid valve closes and the fan turns off.

CABINET

Rugged, corrosion resistant molded plastic.

Motor and electrical service access located on front of cabinet in separate compartment.

Front of unit lifts off to access the evaporator pad and internal plumbing.

MOTOR

Thermally protected.

Permanently lubricated for long life.

Factory installed in molded plastic housing for protection against moisture.

CONTROLS**Humidistat - WP2-18 models**

Can be horizontally or vertically mounted on wall or duct.

Provides automatic control of room relative humidity.

Wired in series with the humidifier water solenoid valve.

Adjustable setting.

Automatic Humidifier Control - WP2-18A models

Duct mounted.

Senses indoor relative humidity and outdoor temperature.

Includes outdoor temperature sensor.

Adjusts humidity setpoint to provide optimum humidity levels within the space and indoor

Adjustable setting.

FEATURES

WATER SUPPLY SYSTEM

Consists of supply tubing assembly, fluid restrictor, distribution tray, cleanable/replaceable internal mesh strainer and 24 volt brass water solenoid valve.

Evaporator Media Pad

Provides large evaporation capacity.
Pad and support frame removable for cleaning or replacement.
Annual pad replacement recommended.

Drain

1/2 in. drain fitting at bottom of cabinet.
1/2 in. ID plastic tubing must be field provided.
Unused water from the evaporator pad is drained from the unit to help remove mineral deposits left from the evaporative process.

Saddle Valve

All necessary fittings furnished as standard equipment.
Field installs in the water supply line.

MAINTENANCE SUPPLIES


Replacement Media

Recommended annual replacement of media pad.



SPECIFICATIONS

Model No.	Humidistat Control	WP2-18
	Automatic Control	WP2-18A
Capacity	Plenum Air Temperature	120°F
	US Gallons per day	18
Evaporator pad size - H x W x D - in.		10 x 13 x 1-3/4
Connections	Plenum H x W - in.	14-7/8 x 14-3/16
	Water supply	1/4 in. compression
	Drain	1/2 in. I.D.
	Electrical	Power cord with 3 prong plug
Electrical characteristics		120V - 60hz - 1ph
Shipping Data - lbs. (1 package)		17
MAINTENANCE SUPPLIES - MUST BE ORDERED EXTRA		
Replacement Media		X2661

TYPICAL APPLICATIONS

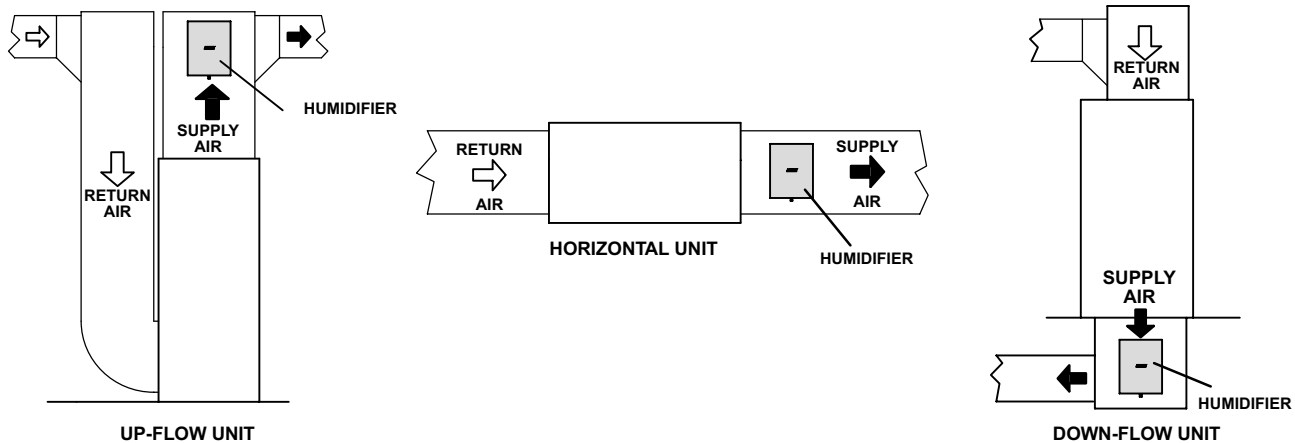

DIMENSIONS - INCHES (MM)

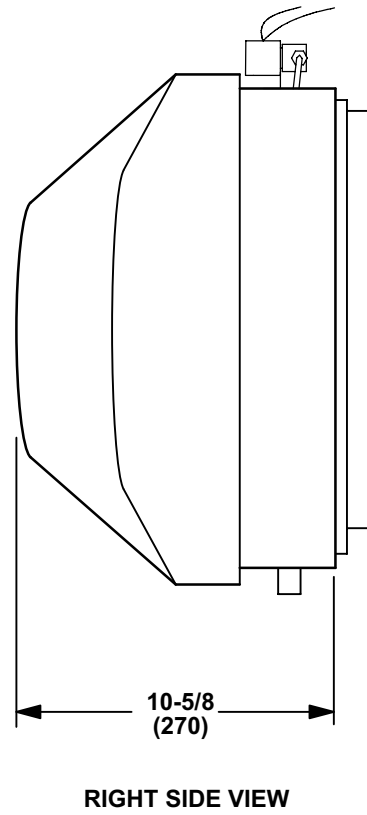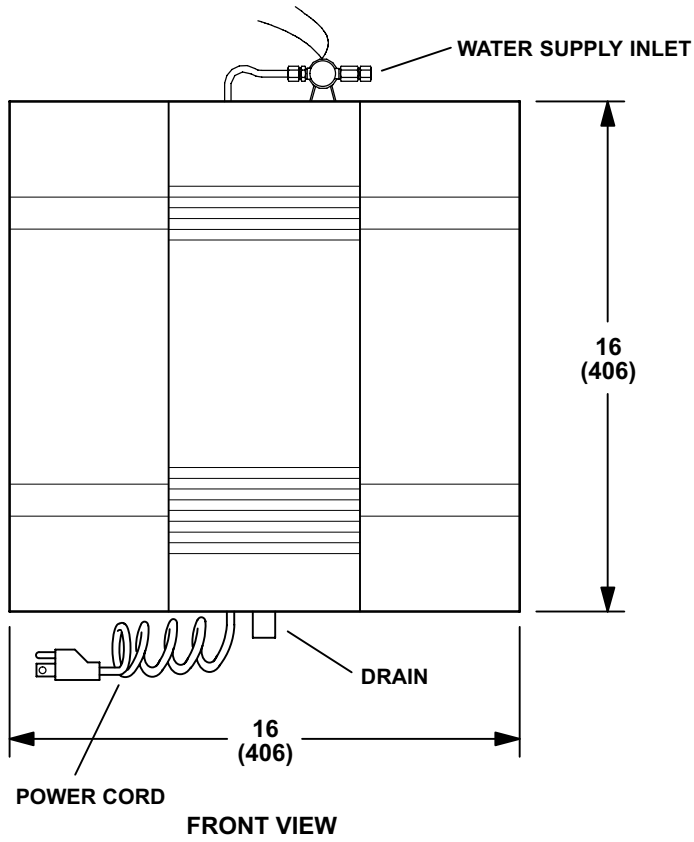



Visit us at www.lennox.com

For the latest technical information, www.lennox.com

Contact us at 1-800-4-LENNOX

NOTE - Due to an ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability.
Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury.
Installation and service must be performed by a qualified installer and servicing agency.

©2006 Lennox Industries Inc.