MINI-SPLIT SYSTEMS

MLB
Mini-Split
Low Ambient Single Zone Heat Pump Systems - R-410A - 60 Hz

Bulletin No. 210950
May 2022
Supersedes April 2022

LENNOX®

RESIDENTIAL / COMMERCIAL PRODUCT SPECIFICATIONS

MWMC Wall-Mounted
Non-Ducted Indoor Unit

M22A/M33C Cassette
Non-Ducted Indoor Unit

Wireless
Remote Controller
(furnished with
Wall-Mount,
Cassette, Console and
Ceiling/Floor
Non-Ducted Models)

MCFA/MCFB Ceiling/Floor-Mount
Non-Ducted Indoor Unit
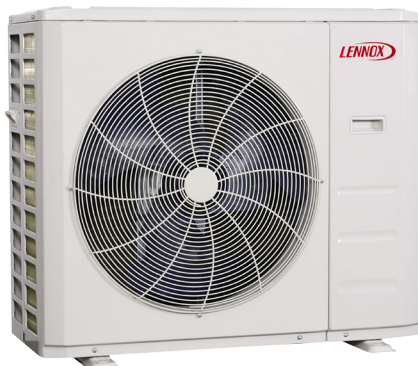
MFMA Floor-Mount Console
Non-Ducted Indoor Unit

MMDB Medium Static Ducted Indoor Unit
with Wired Remote Controller (furnished)

MLB036 and 048 Heat Pump Outdoor Unit

ENERGY STAR

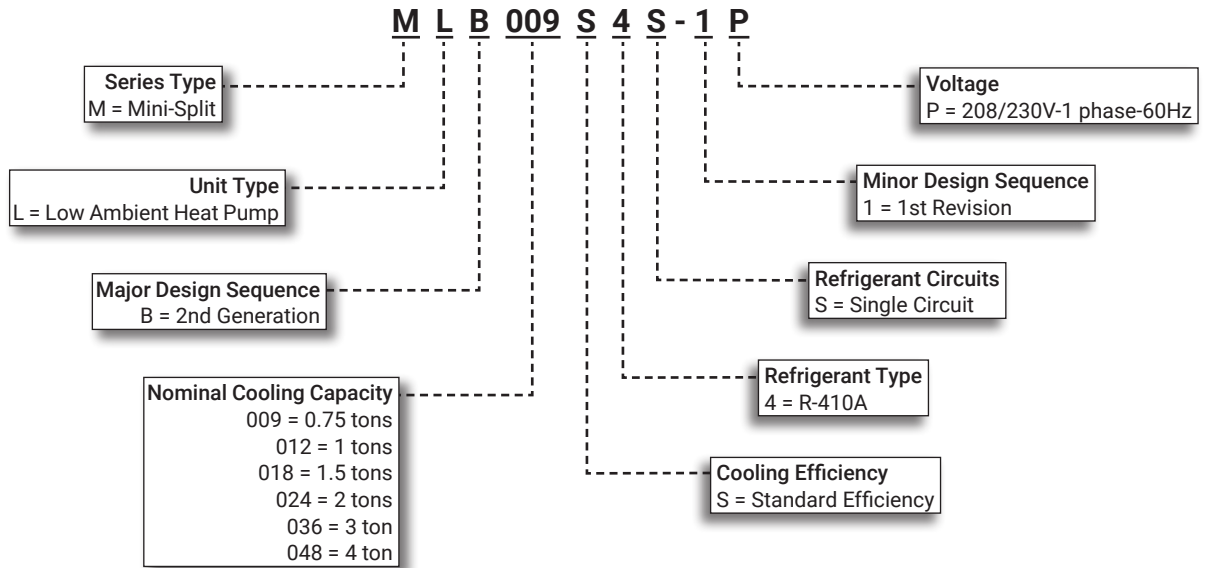Certain models
have earned the
ENERGY STAR®
mark by meeting
strict energy
efficiency guidelines
set by the US EPA.

MLB009 thru 036 Heat Pump Outdoor Units

SEER - up to 28.10
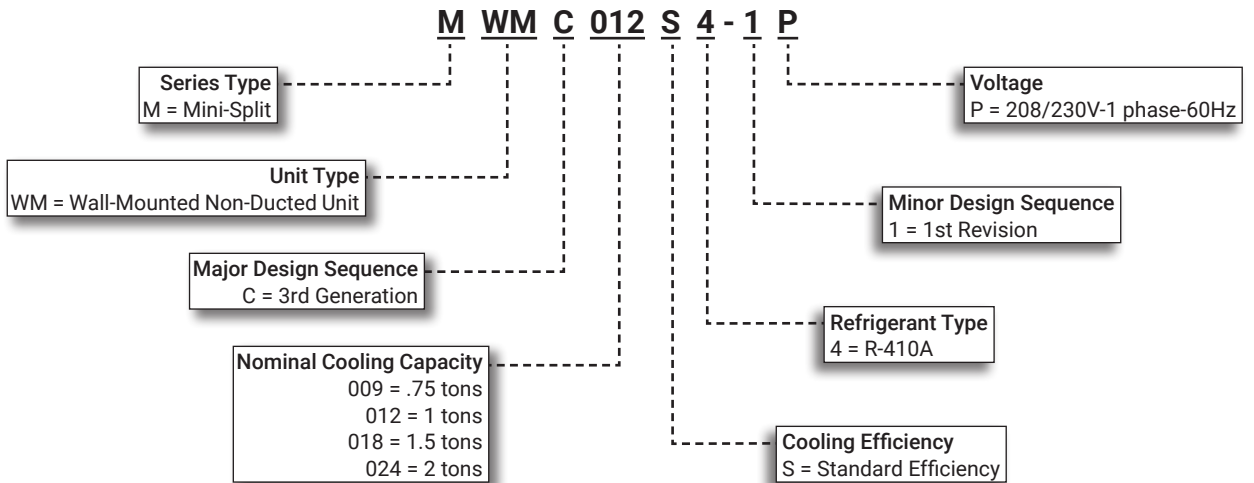**HSPF - up to 13.0**
0.75 to 4 Tons
Cooling Capacity - 9,000 to 48,000 Btuh
Heating Capacity - 10,000 to 51,000 Btuh
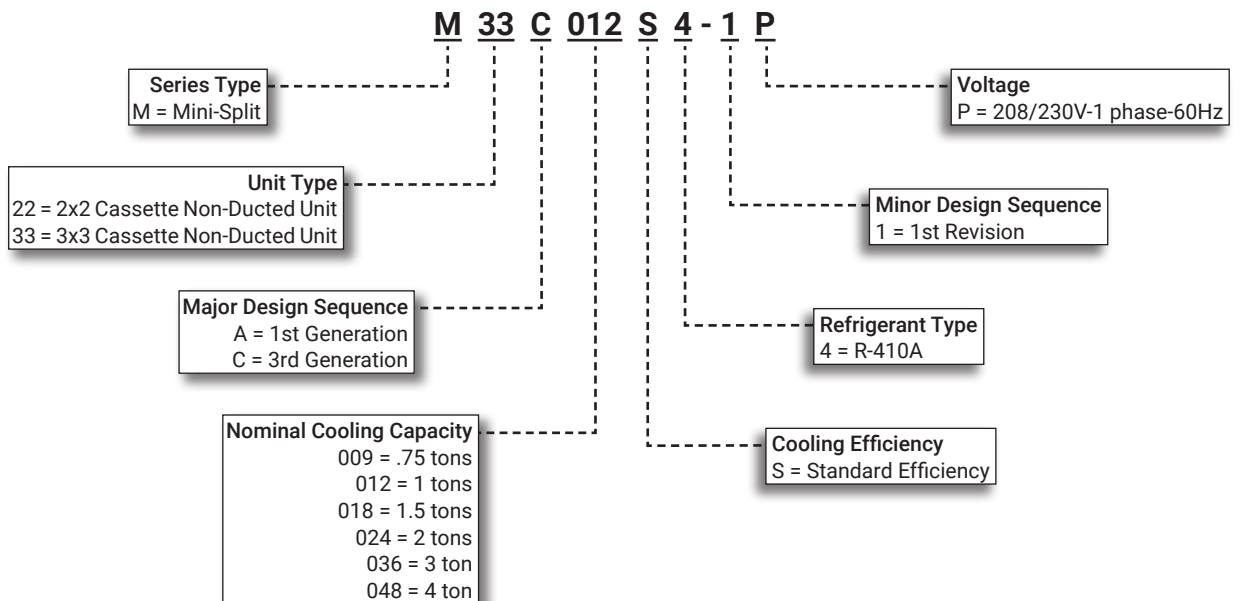
MODEL NUMBER IDENTIFICATION
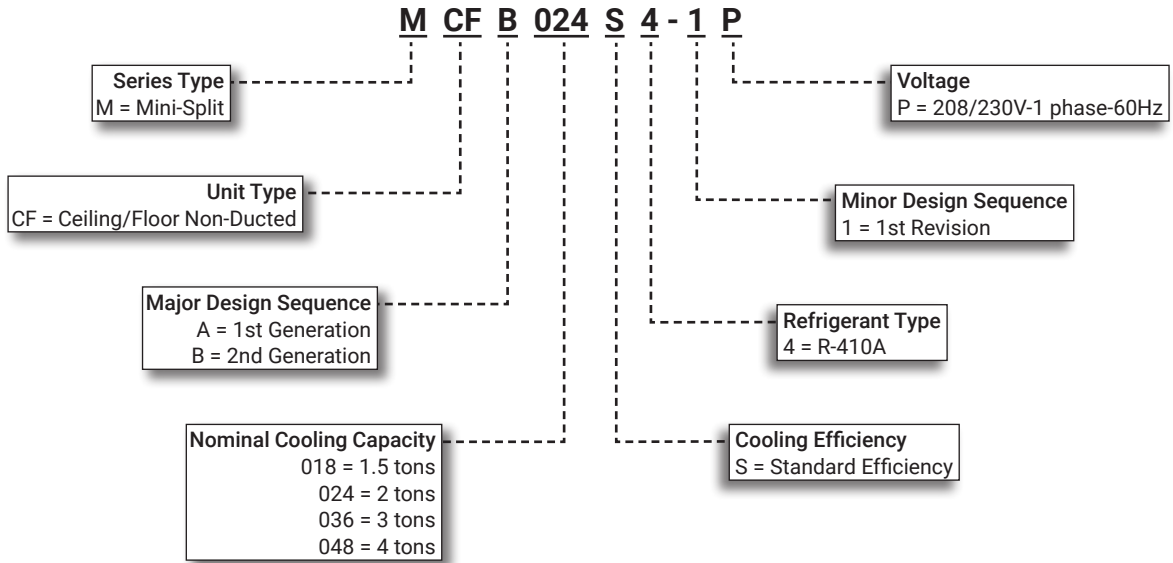
OUTDOOR SINGLE ZONE HEAT PUMP UNITS

M L B 009 S 4 S - 1 P

Series Type
M = Mini-Split

Unit Type
L = Low Ambient Heat Pump

Major Design Sequence
B = 2nd Generation

Nominal Cooling Capacity
009 = 0.75 tons
012 = 1 tons
018 = 1.5 tons
024 = 2 tons
036 = 3 ton
048 = 4 ton

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
1 = 1st Revision

Refrigerant Circuits
S = Single Circuit

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

WALL-MOUNTED INDOOR UNITS

M WM C 012 S 4 - 1 P

Series Type
M = Mini-Split

Unit Type
WM = Wall-Mounted Non-Ducted Unit

Major Design Sequence
C = 3rd Generation

Nominal Cooling Capacity
009 = .75 tons
012 = 1 tons
018 = 1.5 tons
024 = 2 tons

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
1 = 1st Revision

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

CASSETTE NON-DUCTED INDOOR UNITS

M 33 C 012 S 4 - 1 P

Series Type
M = Mini-Split

Unit Type
22 = 2x2 Cassette Non-Ducted Unit
33 = 3x3 Cassette Non-Ducted Unit

Major Design Sequence
A = 1st Generation
C = 3rd Generation

Nominal Cooling Capacity
009 = .75 tons
012 = 1 tons
018 = 1.5 tons
024 = 2 tons
036 = 3 ton
048 = 4 ton

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
1 = 1st Revision

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

MODEL NUMBER IDENTIFICATION

CEILING/FLOOR NON-DUCTED INDOOR UNITS

M CF B 024 S 4 - 1 P

Series Type
M = Mini-Split

Unit Type
CF = Ceiling/Floor Non-Ducted

Major Design Sequence
A = 1st Generation
B = 2nd Generation

Nominal Cooling Capacity
018 = 1.5 tons
024 = 2 tons
036 = 3 tons
048 = 4 tons

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
1 = 1st Revision

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

FLOOR-MOUNT CONSOLE NON-DUCTED INDOOR UNITS

M FM A 012 S 4 - 1 P

Series Type
M = Mini-Split

Unit Type
FM = Floor Mount Non-Ducted

Major Design Sequence
A = 1st Generation

Nominal Cooling Capacity
012 = 1 tons

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
1 = 1st Revision

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

MEDIUM STATIC DUCTED INDOOR UNITS

M MD B 012 S 4 - 2 P

Series Type
M = Mini-Split

Unit Type
MD = Medium Static Ducted Unit

Major Design Sequence
B = 2nd Generation

Nominal Cooling Capacity
009 = .75 tons
012 = 1 tons
018 = 1.5 tons
024 = 2 tons
036 = 3 tons
048 = 4 tons

Voltage
P = 208/230V-1 phase-60Hz

Minor Design Sequence
2 = 2nd Revision

Refrigerant Type
4 = R-410A

Cooling Efficiency
S = Standard Efficiency

CONTENTS

APPROVALS AND WARRANTY

APPROVALS

- AHRI Standard 210/240 certified with Addenda 1 and 2
- ENERGY STAR® certified units (certain models) are designed to use less energy, help save money on utility bills, and help protect the environment
- Rated According to U.S. Department of Energy (DOE) test procedures
- Indoor and outdoor units and components UL and CEC bonded for grounding to meet safety standards for servicing
- ETL certified for the U.S. and Canada
- Meets 2014 Florida Building Code Wind Design Criteria
  - Ultimate Wind Speed – 186 miles per hour
  - Risk Categories – III and IV
  - Wind Exposures – C and D
  - Mean Roof Heights – Up to 60 feet above ground

WARRANTY

- Compressor - Limited seven years
- All other covered components - Limited five years

NOTE - Refer to Lennox Basic Limited Warranty at www.Lennox.com for additional details.

FEATURES   OUTDOOR UNITS

APPLICATIONS

- 0.75 through 4 ton
- Single phase power supply (208/230V)
- Outdoor unit sound levels as low as 54.5 dBA
- Indoor unit sound levels as low as 23 dBA
- Ductless mini-split systems provide a wide range of capacities and applications and provide an alternative when a ducted system is impractical or cost prohibitive
- Units shipped completely factory assembled, internally piped, and wired

NOTE - Outdoor unit is designed for outdoor location only.

NOTE - It is recommended that Medium Static Ducted Indoor Units not be installed in unconditioned spaces with temperatures above 100°F.

REFRIGERATION SYSTEM

R-410A Refrigerant
- Non-chlorine, ozone friendly
- Unit is factory pre-charged

Outdoor Coil
- Aluminum fins fitted to copper tubes
- Wire grille guard provided

Outdoor Fan
- Direct drive fan moves large air volumes uniformly through entire outdoor coil for high refrigeration capacity
- Fan guard provided

Refrigerant Line Connections, Service Valve
- Flare connection lines are located on side of unit cabinet
- Fully serviceable brass service valve prevents corrosion and provides access to refrigerant system

COMPRESSOR

Variable Frequency Rotary Compressor
- Compressor features high efficiency operation
- Balanced for reduced vibration and quiet operation
- Brushless DC motor uses powerful Neodymium magnets, which are approximately 15-20 times stronger than ferrite magnets used in conventional AC compressors

Compressor Crankcase Heater
- Protects against liquid refrigerant migration that can occur during low ambient operation

CONTROLS

DC Inverter Control
- Provides continuous operation, while adjusting capacity according to room temperature
- The accurate sensing of cooling loads prevents frequent changes in capacity and ensures efficient, economical operation

Inverter Module Protection
- Protects against differences in current, voltage and temperature
- Displays code on the indoor unit indicating a need for servicing

CONTROLS (continued)

Outdoor Unit Microprocessor
- Electronic expansion valve control
- Automatic compressor timed-off protection (3 minutes)
- Temperature sensor
- LEDs on control display error codes and assist in troubleshooting
- 4-Way reversing valve control

Electronic Expansion Valve
- Furnished on all models

Compressor Overcurrent Protection
- Overcurrent protection can result due to any of the following:
  - Ambient temperature is too high
  - Locked rotor on the compressor
  - Outdoor air is blocked or restricted

Condenser High Temperature Protection
- Condenser high temperature can occur due to any of the following conditions:
  - High outdoor ambient
  - Outdoor fan blocked
  - Outdoor coil blocked
- The outdoor coil thermistor continuously monitors the temperature and communicates with the microprocessor
- Depending on the temperature measured, the compressor will be allowed to increase the frequency if needed to meet the load or is forced to run at the current or reduced frequency
- If the temperature becomes excessively high the compressor will be de-energized

Compressor Discharge Temperature Protection
- The compressor discharge line thermistor continuously monitors the temperature and communicates with the microprocessor
- Depending on the temperature measured, the compressor will be allowed to increase the frequency to meet the load or is forced to run at the current or reduced frequency
- If the temperature becomes excessively high, the compressor will be de-energized

Voltage Protection
- Protects unit from low or high voltage fluctuations

Terminal Strip
- Furnished for easy wiring connections

Automatic Piping/Wiring Correction
- Automatically checks piping/wiring connections
- A "Check Switch" on outdoor unit control reviews zone wiring and piping connections and displays "CE" if all connections are correct
- If a unit(s) is not connected to the correct zone the control will automatically remap the wiring to the correct zone based on indoor unit size

Defrost Control
- Defrost cycle is automatically enabled if there is a build-up of frost on the outdoor coil
- Outdoor fan operation is terminated during the defrost cycle
- Indoor fan changes to ultra low speed during the defrost cycle to help bring warm refrigerant back to the outdoor coil to assist during defrost operation
- Defrost LED is lit on the indoor unit panel on the front cover during a defrost cycle

Reversing Valve
- 4-way interchange reversing valve effects a rapid change in direction of refrigerant flow resulting in quick changeover from cooling to heating and vice versa
- Valve operates on pressure differential between outdoor unit and indoor unit of the system

CABINET
- Constructed of heavy gauge steel
- Tabs on unit base allow secure mounting to slab
- Condensate drain outlets furnished on unit base

NOTE - Drain must be field furnished.
- Pan heater prevents ice build-up in the bottom of the unit during heating operation
- Access cover for power and control wiring connections
- Access cover for service valves

WALL-MOUNTED INDOOR UNITS

- Low-sound, three-speed Wall Mount with LED display offers three access points for refrigerant outlet pipes: left, right or rear

- The front panel can be raised for accessible wiring and maintenance

- Swing louver angles to 90°

- Unit installs horizontally on a vertical wall

- Pre-Heat Function - Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode

- LED Readout - Mounted on unit. LED displays unit operation status, and codes for maintenance and servicing

- Auto Restart - Automatically restores the previous function setting if power is interrupted

- Cooling Override - Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation

- Flare Connections - Equipped with liquid and gas flare fittings for quick and secure piping

- Multi-Refrigerant Outlet - Allows left, right, or rear access for refrigeration line connection

- Three Speed Fan - Fan functions at three speeds: low, medium and high

- Air Filter - Cleanable air filter is furnished as standard

- Wireless Remote Controller - Furnished as standard, see Page 10

CASSETTE INDOOR UNITS

- Low-sound and encased in galvanized steel, the Cassette unit with LED display offers 360° airflow for immediate, equal distribution of wide-range cooling and heating

- 360° Airflow Panel - Allows for even, wide-range cooling and heating

- Pre-Heat Function - Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode

- LED Readout/Infrared Receiver Panel - Mounted on unit. LEDs display unit operation status, and codes for maintenance and servicing

- Infrared receiver for use with wireless remote controller (furnished)

- Auto Restart - Automatically restores the previous function setting if power is interrupted

- Cooling Override - Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation

- Built-In Condensate Pump - 27-1/2 in. maximum lift

- Compact Design - Allows accessible wiring and space-saving installation with reduced width and depth

- Flare Connections - Equipped with liquid and gas flare fittings for quick and secure piping

- Three Speed Fan - Fan functions at three speeds: low, medium and high

- Turbo Fan With Backward Curved Blades - Reduces sound levels and air resistance

- Air Filter - Cleanable air filter is furnished as standard

- Wireless Remote Controller - Furnished as standard, see Page 16 for M22A and Page 13 for M33C

NOTE - The cassette panel must be ordered separately. See Specifications table for ordering information.

CEILING/FLOOR MOUNT INDOOR UNITS

- Low-sound, three-speed Ceiling and Floor Mount models with LED display has a multi-blade fan that distributes air vertically and horizontally with a wide angle sweeping motion

- Two installation options are available:

  1. Horizontally against the ceiling

  2. Vertically against the floor/wall

- **Pre-Heat Function** - Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode

- **LED Readout/Infrared Receiver Panel** - Mounted on unit. LEDs display unit operation status, and codes for maintenance and servicing

- Infrared receiver for use with wireless remote controller (furnished)

NOTE - Readout panel design varies depending on unit size.

- **Auto Restart** - Automatically restores the previous function setting if power is interrupted

- **Cooling Override** - Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation

- **Flare Connections** - Equipped with liquid and gas flare fittings for quick and secure piping

- **Multi-Refrigerant Outlet** - Allows left, right, or rear access for refrigeration line connection

- **Three Speed Fan** - Fan functions at three speeds: low, medium and high

- **Air Filter** - Cleanable air filter is furnished as standard

- **Wireless Remote Controller** - Furnished as standard, see Page 16

FLOOR MOUNT CONSOLE INDOOR UNIT

- Low-sound, three-speed Floor Mount Console model with LED display has a multi-blade fan that distributes air vertically and horizontally with a wide angle sweeping motion

- Installed vertically against the floor/wall

- Swing louver angles to 90°

- **Pre-Heat Function** - Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode

- **LED Readout/Infrared Receiver Panel** - Mounted on unit. LEDs display unit operation status, and codes for maintenance and servicing

- Infrared receiver for use with wireless remote controller (furnished)

- **Auto Restart** - Automatically restores the previous function setting if power is interrupted

- **Cooling Override** - Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation

- **Flare Connections** - Equipped with liquid and gas flare fittings for quick and secure piping

- **Condensate Drain Connection** - Rear of unit

- **Condensate Flex Adaptor** - Flex adaptor and hose clamps are furnished for drain connection

- **Three Speed Fan** - Fan functions at three speeds: low, medium and high

- **Air Filter** - Cleanable air filter is furnished as standard

- **Hanging Brackets (2)** - Furnished for installation

- **Wireless Remote Controller** - Furnished as standard, see Page 16

MEDIUM STATIC DUCTED INDOOR UNITS
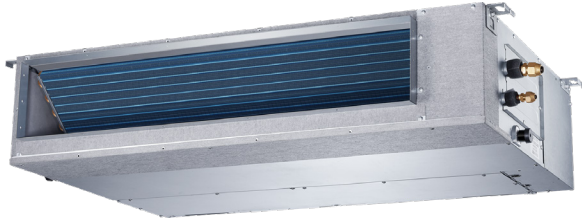
- Slim, compact design for limited space requirements. Installs out of sight between the drop ceiling and ceiling slab with ducted distribution to the indoor space

- Pre-Heat Function - Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode

- LED Readout Panel - Mounted in the unit control box unit. LEDs display unit operation status, and codes for maintenance and servicing

- Auto Restart - Automatically restores the previous function setting if power is interrupted

- Cooling Override - Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation

- Built-In Condensate Pump - 27-1/2 inch lift

- Duct Connections - Return air connections can be made horizontally or from the bottom of the unit with interchangeable panel

- Flare Connections - Equipped with liquid and gas flare fittings for quick and secure piping

- Three Speed Fan - Fan functions at three speeds: low, medium and high

- Air Filter - Cleanable air filter is furnished as standard

- Wired Remote Controller - Furnished as standard, see Page 19

AUTO CHANGEOVER OPERATION

- If the indoor unit is set to "AUTO" mode the unit will operate in cooling, heating or fan mode based on temperature setting

- Fan runs in auto mode

WIRELESS REMOTE CONTROLLER (RG10L-WM)

(FURNISHED WITH WALL-MOUNT INDOOR UNITS)

· Complete remote control of system

· Maximum operating range is 25 ft.

· Operates on two AAA 1.5V batteries (furnished)

· Wireless remote controller holder furnished

· Holder can be mounted on a wall for easy access

· Mounting screws furnished
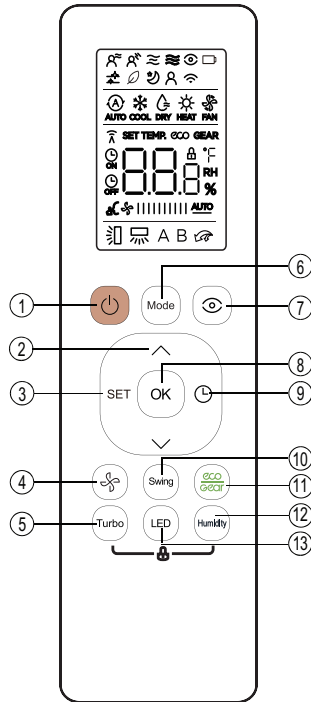
1 ON/OFF Button
· Turns system on and off

2 UP/DOWN Buttons ∧ ∨
· Increase or decrease the indoor temperature in one degree increments (maximum 86°F, minimum 60°F)

NOTE - Temperature cannot be adjusted in FAN mode.

NOTE - Press and hold and buttons together for 3 seconds to alternate the temperature display between the °C and °F scale.

3 SET Button
· Scrolls through unit operations in this order:
  1. Breeze Away
  2. Active Clean
  3. Sleep
  4. Follow Me

NOTE - The selected symbol will flash on the display area. Press the OK button to confirm.

4 FAN Button
· Cycles fan speeds in the following order:
  · AUTO → 20% → 40% → 60% → 80% → 100%

5 TURBO Button
· Enables the unit to reach the preset temperature during cooling or heating operation in the shortest time

6 MODE Button
· Select system operation modes
· Press button to cycle through each setting:
  · AUTO → COOL → DRY → HEAT → FAN

7 ECO INTELLIGENT EYE Button
· Detects motion in the room to reduce cooling mode when no activity is detected for 30 minutes

8 OK Button
· Confirms selected function

9 TIMER Button
· Initiates an auto-on or auto-off time sequence
· Press TIMER button to initiate the ON time sequence
· Press Temp. up or down button for multiple times to set the desired time to turn on the unit
· Press TIMER button to initiate the OFF time sequence.

NOTE - Each press of the button increases or decreases the time (depending on function) in 30 minute increments up to 10 hours.

Above 10 hours each press of the button will increase or decrease the auto-timed setting by 60 minutes up to 24 hours.

To cancel, set timer to 0.0 or turn remote off and on.

10 SWING Button
· Used to stop or start louver auto swing feature

11 ECO/GEAR Button
· Controls temperature/energy efficiency of the unit

NOTE - Only available in cooling mode.

ECO Operation
· Sets unit to 75°F unit operation if setpoint is lower
· Sets fan to Auto operation if setpoint is over 75°F

NOTE - If setpoint is manually changed to less than 75°F, ECO operation is canceled.

GEAR Operation
· Reduces electrical consumption to 75% or 50%

12 HUMIDITY Button
· Adjusts the room humidity during DRY mode from 35% to 85%
· Each press of the button increases the humidity in 5% increments

13 LED Button
· Turns the LCD display backlight on the indoor unit on or off

NOTE - Press and hold the button for 5 seconds to display the actual room temperature. Press more than 5 seconds to revert back to display set temperature.

WIRELESS REMOTE CONTROLLER INDICATORS (RG10L-WM)

Information is displayed when the Wireless Remote Controller is powered on.

Not applicable for this unit

Breeze Away feature display

Not applicable for this unit

Not applicable for this unit

ECO Intelligent Eye display (certain units)

Active Clean feature display

Not applicable for this unit

Sleep feature display

Follow Me feature display

Not applicable for this unit

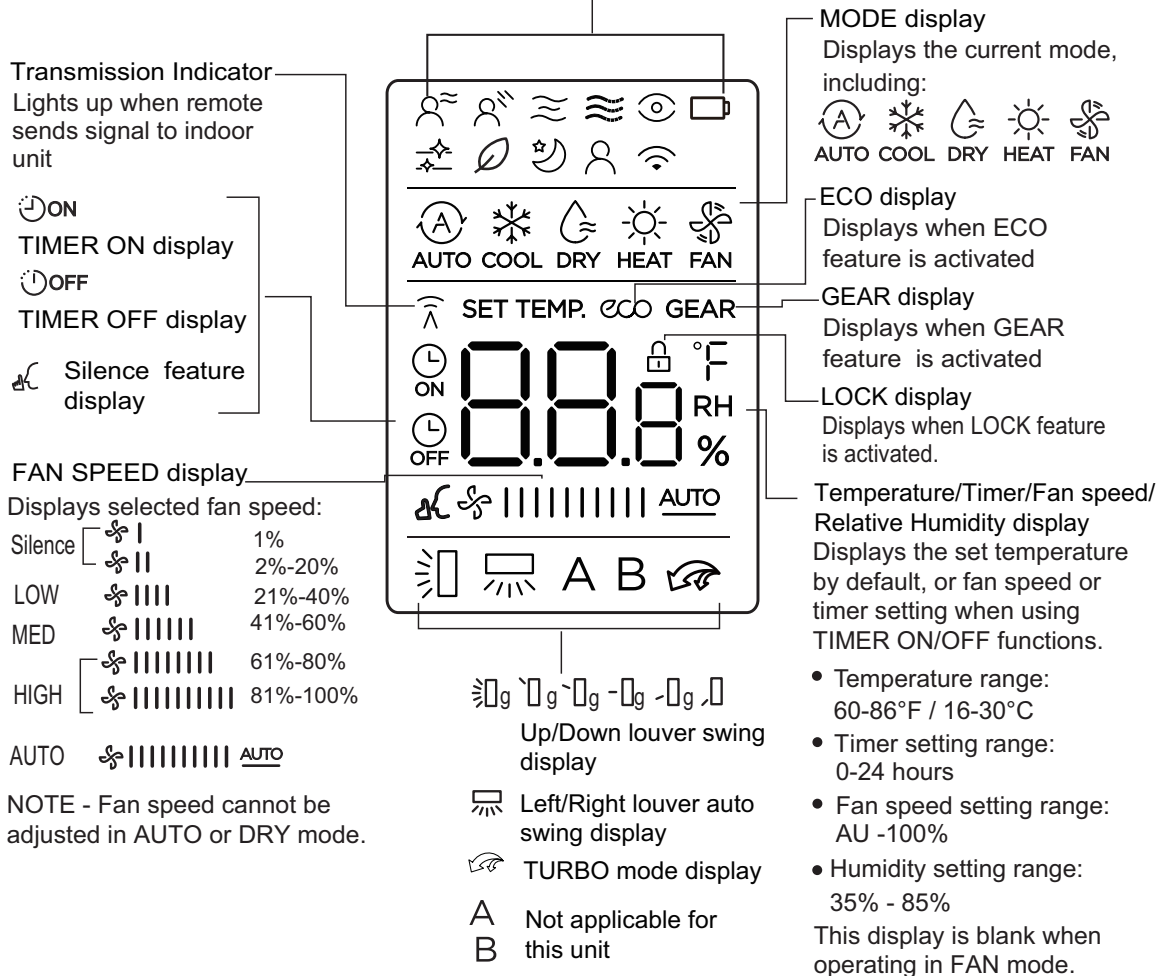Low battery detection (flashing)

Transmission Indicator
Lights up when remote sends signal to indoor unit

ON
TIMER ON display

OFF
TIMER OFF display

Silence feature display

FAN SPEED display
Displays selected fan speed:

Silence	⚙ I		1%
	⚙ II		2%-20%
LOW	⚙ IIII		21%-40%
MED	⚙ IIIIII		41%-60%
HIGH	⚙ IIIIIIII		61%-80%
	⚙ IIIIIIIIII		81%-100%
AUTO	⚙ IIIIIIIIII AUTO		

NOTE - Fan speed cannot be adjusted in AUTO or DRY mode.

Up/Down louver swing display

Left/Right louver auto swing display

TURBO mode display

A Not applicable for
B this unit

MODE display
Displays the current mode, including:

AUTO COOL DRY HEAT FAN

ECO display
Displays when ECO feature is activated

GEAR display
Displays when GEAR feature is activated

LOCK display
Displays when LOCK feature is activated.

Temperature/Timer/Fan speed/ Relative Humidity display
Displays the set temperature by default, or fan speed or timer setting when using TIMER ON/OFF functions.

- Temperature range: 60-86°F / 16-30°C
- Timer setting range: 0-24 hours
- Fan speed setting range: AU -100%
- Humidity setting range: 35% - 85%

This display is blank when operating in FAN mode.

Note:
All icons are shown for display purposes only.
During actual unit operation, only active icons are displayed.

WIRELESS REMOTE CONTROLLER OPERATION (RG10L-WM)

Auto Operation
1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature.
3. Press the ON/OFF button to start the system.

Cooling /Heating/Fan Operation
1. Press the MODE button to select COOL, HEAT or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature.
3. Press the FAN button to select the fan speed.
4. Press the ON/OFF button to start the system.

Dehumidifying (DRY) Operation
1. Press the MODE button to select DRY mode.
2. Press the UP/DOWN buttons to set the desired temperature.
3. Press the ON/OFF button to start the system.

NOTE - Fan speed selection is disabled.

Timer ON/OFF Operation
1. Press the TIMER button. The remote controller shows TIMER ON or TIMER OFF icon
2. Press the TIMER button again to set desired time. Each time the button is pressed the time increases by 30 minutes between 0 and 10 hours and then by 60 minutes between 10 and 24 hours.
3. After setting the TIMER ON or TIMER OFF there will be a one second delay before the remote controller transmits the signal to the unit. After approximately 2 seconds the set temperature will re-appear on the LCD display window.

Silence Operation
1. Press the FAN button for more than 2 seconds to activate or disable the Silence function

Lock Function
1. Press the TURBO and HUMIDITY buttons together two times in less than one second to lock the Controller to prevent tampering
2. Press the TURBO and HUMIDITY together buttons again for two seconds to unlock the Controller

Swing Function
1. Press the Swing button to activate up/down louver operation. Louvers oscillate up and down automatically. Press and hold the Swing button again to disable.

NOTE - Pressing the Swing button multiple times will set the louvers at five different fixed airflow angles.

2. Press and hold Swing button for 2 seconds to activate left/right louver operation. Louvers swing left and right automatically.

SET BUTTON FUNCTIONS

Breeze Away
• Prevents unit from blowing air directly on a person

NOTE - Only available in COOL, FAN or DRY modes.

Active Clean
• Washes away dust, mold, and grease that may cause odors when it adheres to the indoor coil by automatically freezing and then rapidly thawing the coil
• Indoor unit displays "CL"
• After 20 to 45 minutes the unit will automatically turn cancel the operation

NOTE - Only available in COOL or DRY modes.

Sleep
• Enables the system to automatically increase cooling or decrease heating (in 2°F increments) per hour for the first 2 hours, then maintain a steady temperature for 5 hours
• System keeps the final operation mode after 8 total hours of operation

NOTE - To cancel, push the "MODE", "FAN SPEED" or "ON/OFF" buttons.

SLEEP mode is only available when the unit is in COOL, HEAT or AUTO mode

Follow Me
• Allows remote temperature sensing of the room at the remote controller location

WIRELESS REMOTE CONTROLLER (RG10B-CSWHB)

(FURNISHED WITH M33C CASSETTE INDOOR UNITS)

- Complete remote control of system
- Maximum operating range is 25 ft.
- Operates on two AAA 1.5V batteries (furnished)
- Wireless remote controller holder furnished
- Holder can be mounted on a wall for easy access
- Mounting screws furnished
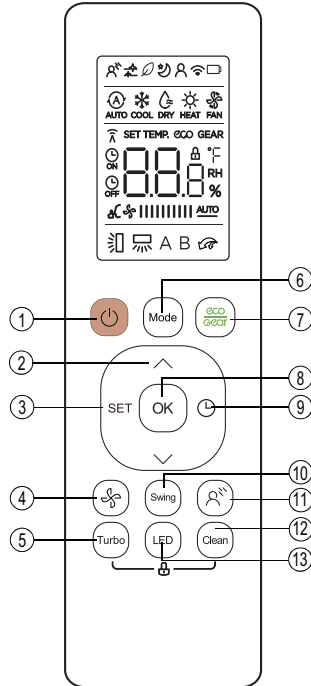
1 ON/OFF Button
- Turns system on and off

2 UP/DOWN Buttons ∧ ∨
- Increase or decrease the indoor temperature in one degree increments (maximum 86°F, minimum 60°F)

NOTE - Temperature cannot be adjusted in FAN mode.

NOTE - Press and hold and buttons together for 3 seconds to alternate the temperature display between the °C and °F scale.

3 SET Button
- Scrolls through unit operations in this order:
  3. Sleep 🌙
  4. Follow Me 🧍

NOTE - The selected symbol will flash on the display area. Press the OK button to confirm.

4 FAN Button
- Cycles fan speeds in the following order:
  - AUTO → 20% → 40% → 60% → 80% → 100%

NOTE - Holding Fan button down for 2 seconds will activate **Silence** feature.

5 TURBO Button
- Enables the unit to reach the preset temperature during cooling or heating operation in the shortest time

6 MODE Button
- Select system operation modes
- Press button to cycle through each setting:
  - AUTO → COOL → DRY → HEAT → FAN

7 ECO/GEAR Button
- Controls temperature/energy efficiency of the unit

NOTE - Only available in cooling mode.

ECO Operation
- Sets unit to 75°F unit operation if setpoint is lower
- Sets fan to Auto operation if setpoint is over 75°F

NOTE - If setpoint is manually changed to less than 75°F, ECO operation is canceled.

GEAR Operation
- Reduces electrical consumption to 75% or 50%

8 OK Button
- Confirms selected function

9 TIMER Button
- Initiates an auto-on or auto-off time sequence
- Press TIMER button to initiate the ON time sequence
- Press Temp. up or down button for multiple times to set the desired time to turn on the unit
- Press TIMER button to initiate the OFF time sequence.

NOTE - Each press of the button increases or decreases the time (depending on function) in 30 minute increments up to 10 hours.

Above 10 hours each press of the button will increase or decrease the auto-timed setting by 60 minutes up to 24 hours.

To cancel, set timer to 0.0 or turn remote off and on.

10 SWING Button
- Used to stop or start louver auto swing feature

11 BREEZE AWAY Button
- Prevents unit from blowing air directly on a person

NOTE - Only available in COOL, FAN or DRY modes.

12 CLEAN Button
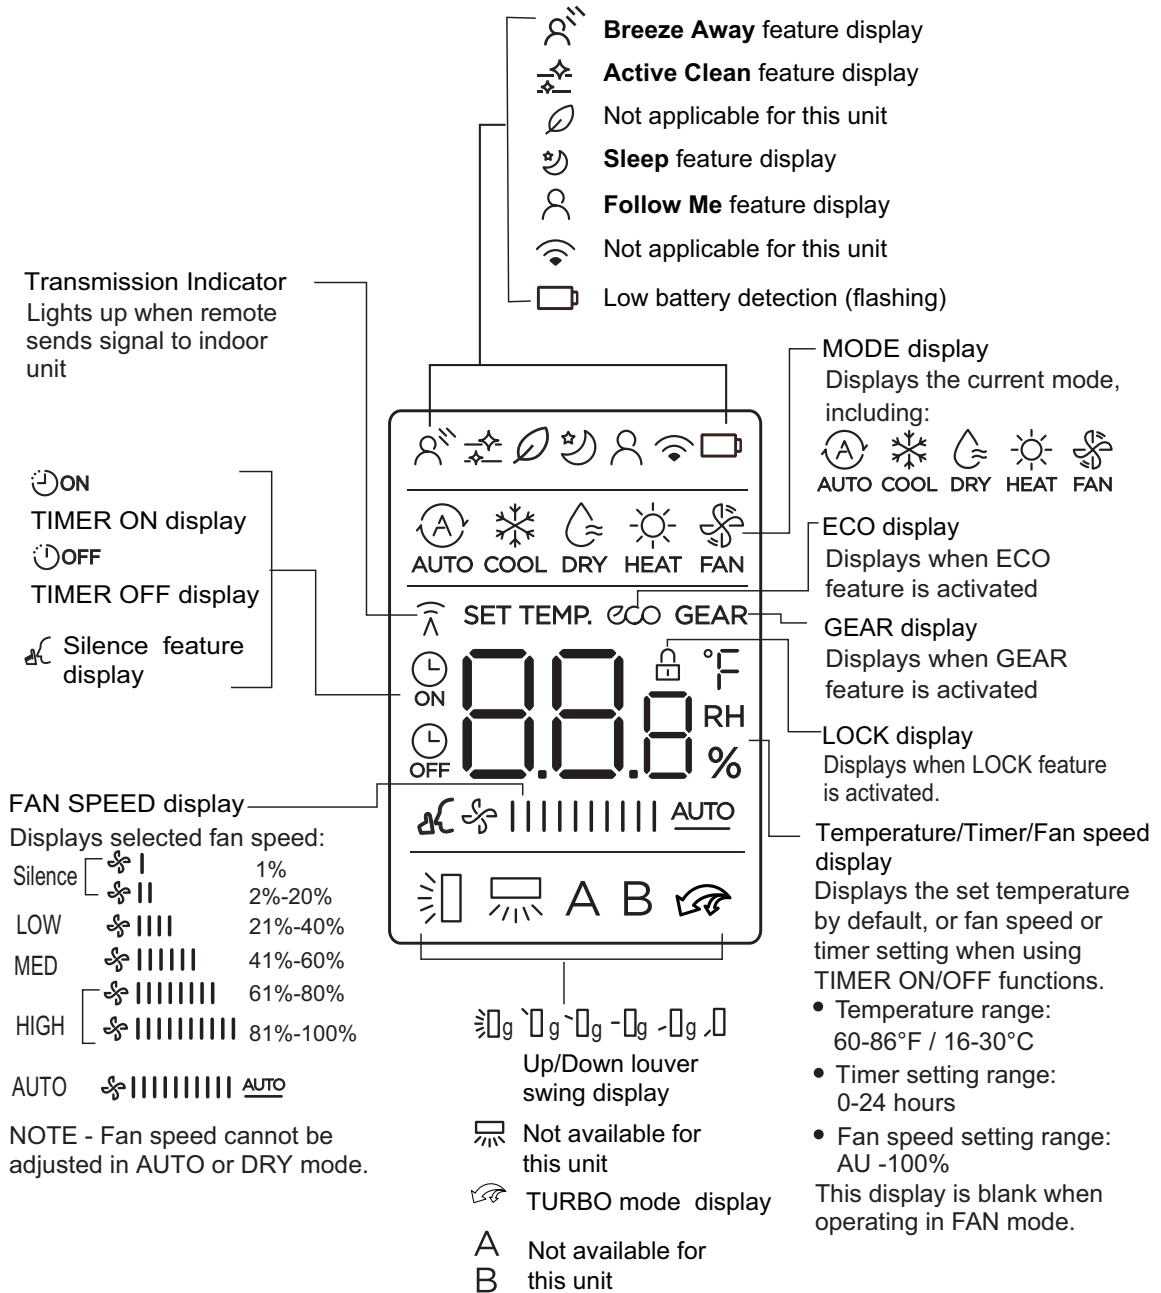- Start/stop the Active Clean function (see description on Page 15)

13 LED Button
- Turns the LCD display backlight on the indoor unit on or off

NOTE - Press and hold the button for 5 seconds to display the actual room temperature. Press more than 5 seconds to revert back to display set temperature.

WIRELESS REMOTE CONTROLLER INDICATORS (RG10B-CSWHB)

Information is displayed when the Wireless Remote Controller is powered on.

Breeze Away feature display

Active Clean feature display

Not applicable for this unit

Sleep feature display

Follow Me feature display

Not applicable for this unit

Low battery detection (flashing)

Transmission Indicator
Lights up when remote sends signal to indoor unit

MODE display
Displays the current mode, including:

AUTO   COOL   DRY   HEAT   FAN

ON
TIMER ON display
OFF
TIMER OFF display

AUTO   COOL   DRY   HEAT   FAN

SET TEMP.   ECO   GEAR

ECO display
Displays when ECO feature is activated

GEAR display
Displays when GEAR feature is activated

Silence feature display

LOCK display
Displays when LOCK feature is activated.

FAN SPEED display
Displays selected fan speed:

Silence		1%
		2%-20%
LOW		21%-40%
MED		41%-60%
		61%-80%
HIGH		81%-100%
AUTO		AUTO

NOTE - Fan speed cannot be adjusted in AUTO or DRY mode.

Up/Down louver swing display

Not available for this unit

TURBO mode display

A Not available for
B this unit

Temperature/Timer/Fan speed display
Displays the set temperature by default, or fan speed or timer setting when using TIMER ON/OFF functions.

- Temperature range: 60-86°F / 16-30°C
- Timer setting range: 0-24 hours
- Fan speed setting range: AU -100%

This display is blank when operating in FAN mode.

Note:
All icons are shown for display purposes only.
During actual unit operation, only active icons are displayed.

WIRELESS REMOTE CONTROLLER OPERATION (RG10B-CSWHB)

Auto Operation
1. Press the **MODE** button to select Auto.
2. Press the **UP/DOWN** button to set the desired temperature.
3. Press the **ON/OFF** button to start the system.

Cooling /Heating/Fan Operation
1. Press the **MODE** button to select **COOL, HEAT or FAN** mode.
2. Press the **UP/DOWN** buttons to set the desired temperature.
3. Press the **FAN** button to select the fan speed in four steps- Auto, Low, Med or High.
4. Press the **ON/OFF** button to start the system.

Dehumidifying (DRY) Operation
1. Press the **MODE** button to select **DRY** mode.
2. Press the **UP/DOWN** buttons to set the desired temperature.
3. Press the **ON/OFF** button to start the system.

NOTE - Fan speed selection is disabled.

Timer ON/OFF Operation
1. Press the **TIMER** button. The remote controller shows TIMER ON or TIMER OFF icon
2. Press the **TIMER** button again to set desired time. Each time the button is pressed the time increases by 30 minutes between 0 and 10 hours and then by 60 minutes between 10 and 24 hours.
3. After setting the **TIMER ON** or **TIMER OFF** there will be a one second delay before the remote controller transmits the signal to the unit. After approximately 2 seconds the set temperature will re-appear on the LCD display window.

Silence Operation
1. Press the **FAN** button for more than 2 seconds to activate or disable the Silence function

Lock Function
1. Press the **TURBO** and **CLEAN** buttons together two times in less than one second to lock the Controller to prevent tampering
2. Press the **TURBO** and **CLEAN** together buttons again for two seconds to unlock the Controller

Swing Function
1. Press the **Swing** button to activate up/down louver operation. Louvers oscillate up and down automatically. Press and hold the Swing button again to disable.

NOTE - Pressing the Swing button multiple times will set the louvers at five different fixed airflow angles.

SET BUTTON FUNCTIONS

Sleep
- Enables the system to automatically increase cooling or decrease heating (in 2°F increments) per hour for the first 2 hours, then maintain a steady temperature for 5 hours
- System keeps the final operation mode after 8 total hours of operation

NOTE - To cancel, push the "MODE", "FAN SPEED" or "ON/OFF" buttons.

SLEEP mode is only available when the unit is in COOL, HEAT or AUTO mode

Follow Me
- Allows remote temperature sensing of the room at the remote controller location

CLEAN FUNCTION

Active Clean
- Washes away dust, mold, and grease that may cause odors when it adheres to the indoor coil by automatically freezing and then rapidly thawing the coil
- Indoor unit displays "CL"
- After 20 to 45 minutes the unit will automatically turn cancel the operation

NOTE - Only available in COOL or DRY modes.

WIRELESS REMOTE CONTROLLER (RG10B-DCFC)

(FURNISHED WITH M22A CASSETTE, FLOOR-MOUNT, CEILING/FLOOR AND CONSOLE MOUNT INDOOR UNITS. OPTIONAL FOR DUCTED INDOOR UNITS)

- Complete remote control of system
- Maximum operating range is 25 ft.
- Operates on two AAA 1.5V batteries (furnished)
- Wireless remote controller holder furnished
- Holder can be mounted on a wall for easy access
- Mounting screws furnished
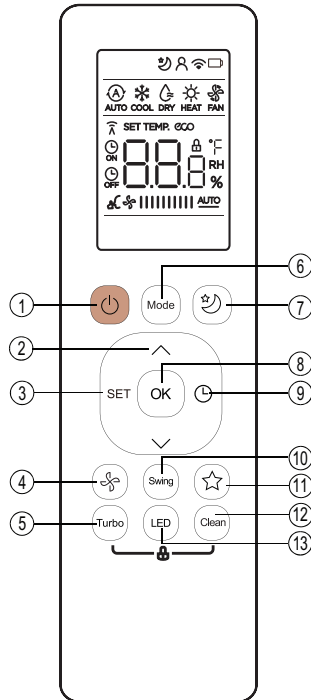
1 ON/OFF Button
- Turns system on and off

2 UP/DOWN Buttons ∧ ∨
- Increase or decrease the indoor temperature in one degree increments (maximum 86°F, minimum 62°F)

NOTE - Temperature cannot be adjusted in FAN mode.

NOTE - Press and hold and buttons together for 3 seconds to alternate the temperature display between the °C and °F scale.

3 SET Button
- Scrolls through unit operations in this order:
  1. Follow Me 人

NOTE - The selected symbol will flash on the display area. Press the OK button to confirm.

4 FAN Button
- Cycles fan speeds in the following order:
  - AUTO → LOW → MED → HIGH

NOTE - Holding Fan button down for 2 seconds will activate **Silence** feature.

5 TURBO Button
- Enables the unit to reach the preset temperature during cooling or heating operation in the shortest time

6 MODE Button
- Select system operation modes
- Press button to cycle through each setting:
  - AUTO → COOL → DRY → HEAT → FAN

7 SLEEP Button

Sleep
- Enables the system to automatically increase cooling or decrease heating (in 2°F increments) per hour for the first 2 hours, then maintain a steady temperature for 5 hours
- System keeps the final operation mode after 8 total hours of operation

8 OK Button
- Confirms selected function

9 TIMER Button
- Initiates an auto-on or auto-off time sequence
- Press TIMER button to initiate the ON time sequence
- Press Temp. up or down button for multiple times to set the desired time to turn on the unit
- Press TIMER button to initiate the OFF time sequence.

NOTE - Each press of the button increases or decreases the time (depending on function) in 30 minute increments up to 10 hours.

Above 10 hours each press of the button will increase or decrease the auto-timed setting by 60 minutes up to 24 hours.

To cancel, set timer to 0.0 or turn remote off and on.

10 SWING Button
- Used to stop or start louver auto swing feature

11 SHORTCUT Button
- Restore the current settings or resume the previous settings

12 CLEAN Button
- Start/stop the Self-Clean function
- Unit cleans itself automatically

NOTE - Only available in COOL or DRY modes.

NOTE - Not for MCFA036-048 and MMDB036-048 models.

13 LED Button
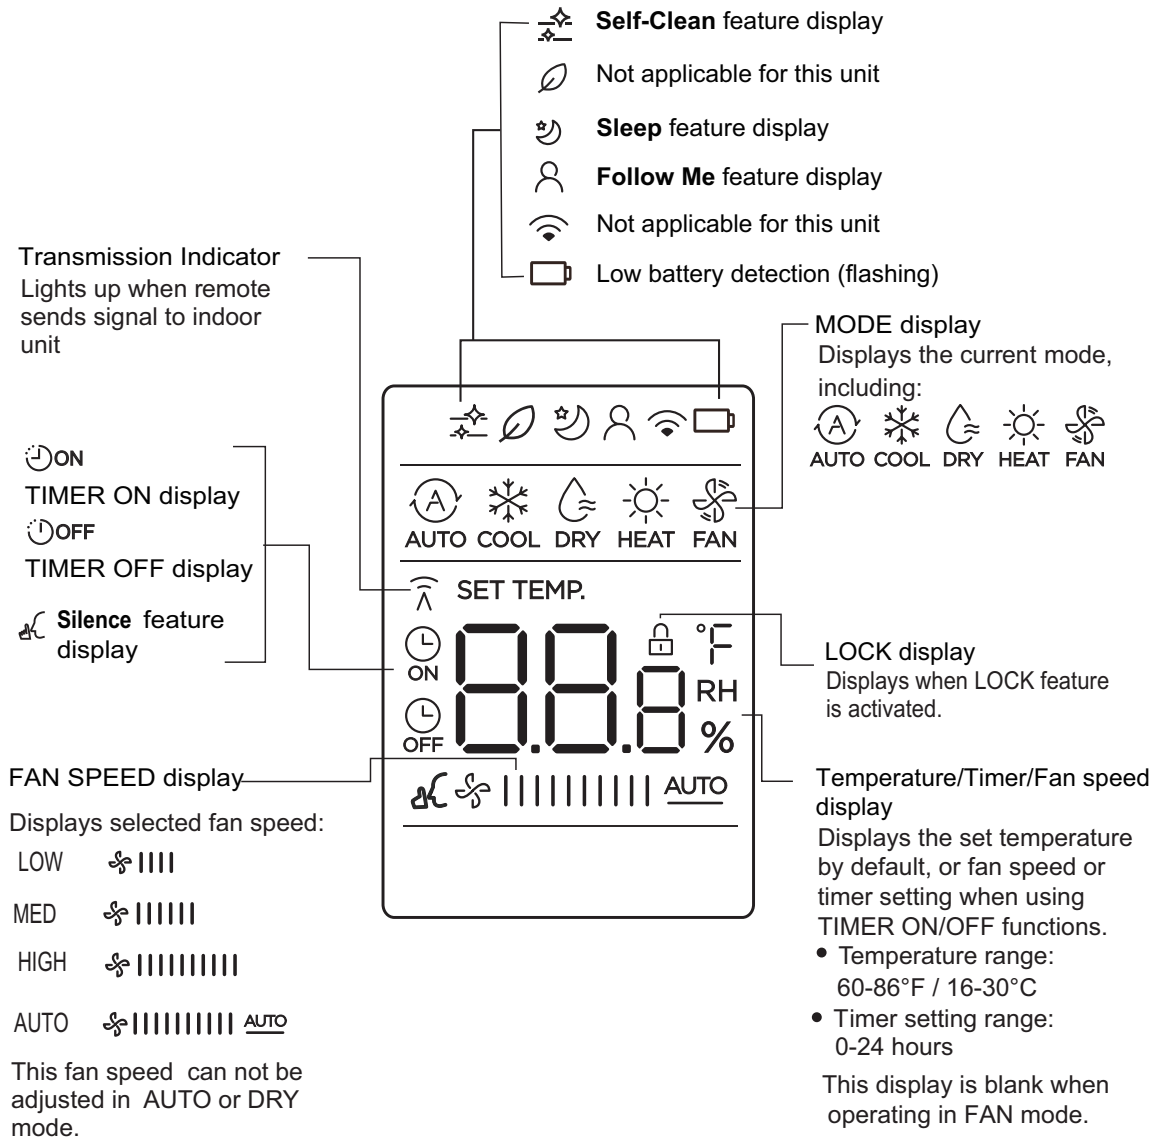- Turns the LCD display backlight on the indoor unit on or off

NOTE - Press and hold the button for 5 seconds to display the actual room temperature. Press more than 5 seconds to revert back to display set temperature.

WIRELESS REMOTE CONTROLLER INDICATORS (RG10B-DCFC)

Information is displayed when the Wireless Remote Controller is powered on.

Self-Clean feature display

Not applicable for this unit

Sleep feature display

Follow Me feature display

Not applicable for this unit

Low battery detection (flashing)

Transmission Indicator
Lights up when remote sends signal to indoor unit

MODE display
Displays the current mode, including:

AUTO COOL DRY HEAT FAN

TIMER ON display

TIMER OFF display

Silence feature display

AUTO COOL DRY HEAT FAN

SET TEMP.

LOCK display
Displays when LOCK feature is activated.

FAN SPEED display

Displays selected fan speed:

LOW

MED

HIGH

AUTO

This fan speed can not be adjusted in AUTO or DRY mode.

Temperature/Timer/Fan speed display
Displays the set temperature by default, or fan speed or timer setting when using TIMER ON/OFF functions.
- Temperature range: 60-86°F / 16-30°C
- Timer setting range: 0-24 hours

This display is blank when operating in FAN mode.

Note:
All icons are shown for display purposes only.
During actual unit operation, only active icons are displayed.

WIRELESS REMOTE CONTROLLER OPERATION (RG10B-DCFC)

Auto Operation
1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature.
3. Press the ON/OFF button to start the system.

Cooling /Heating/Fan Operation
1. Press the MODE button to select COOL, HEAT or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature.
3. Press the FAN button to select the fan speed in four steps- Auto, Low, Med or High.
4. Press the ON/OFF button to start the system.

Dehumidifying (DRY) Operation
1. Press the MODE button to select DRY mode.
2. Press the UP/DOWN buttons to set the desired temperature.
3. Press the ON/OFF button to start the system.
NOTE - Fan speed selection is disabled.

Timer ON/OFF Operation
1. Press the TIMER button. The remote controller shows TIMER ON or TIMER OFF icon
2. Press the TIMER button again to set desired time. Each time the button is pressed the time increases by 30 minutes between 0 and 10 hours and then by 60 minutes between 10 and 24 hours.
3. After setting the TIMER ON or TIMER OFF there will be a one second delay before the remote controller transmits the signal to the unit. After approximately 2 seconds the set temperature will re-appear on the LCD display window.

Silence Operation
1. Press the FAN button for more than 2 seconds to activate or disable the Silence function

Lock Function
1. Press the TURBO and HUMIDITY buttons together two times in less than one second to lock the Controller to prevent tampering
2. Press the TURBO and HUMIDITY together buttons again for two seconds to unlock the Controller

Swing Function
1. Press the Swing button to activate parallel louver operation. Louvers oscillate up and down automatically. Press and hold the Swing button again to disable.
NOTE - Pressing the Swing button multiple times will set the louvers at five different fixed airflow angles.
2. Press Swing button for 2 seconds to activate upright louver operation. Louvers swing left and right automatically.

SET BUTTON FUNCTIONS

Follow Me
• Allows remote temperature sensing of the room at the remote controller location

### WIRED REMOTE CONTROLLER

(FURNISHED WITH DUCTED INDOOR UNITS)
NOTE - Can be ordered separately for non-ducted indoor units.

FEATURES
- Permanent Memory - Maintains clock, fan speed and mode of operation settings following power outages
- Dimensions (H x W x D) - 4-3/4 x 4-3/4 x 7/8 in.
- Additional hardware is furnished for installation
- Wiring - Controller uses 5-wire shielded 20 ft. (6 m) cable (furnished) for easy low voltage connection to the indoor unit
- Maximum cable length is 40 ft. (12 m)

DISPLAY
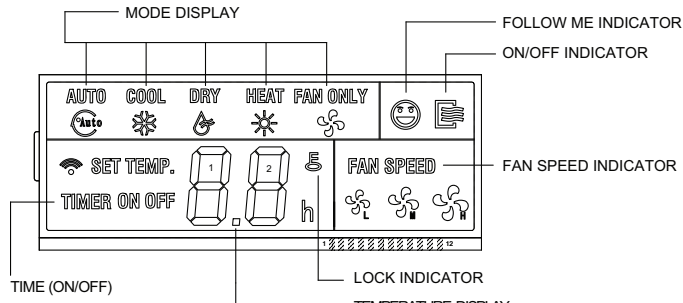
BUTTONS AND FUNCTIONS
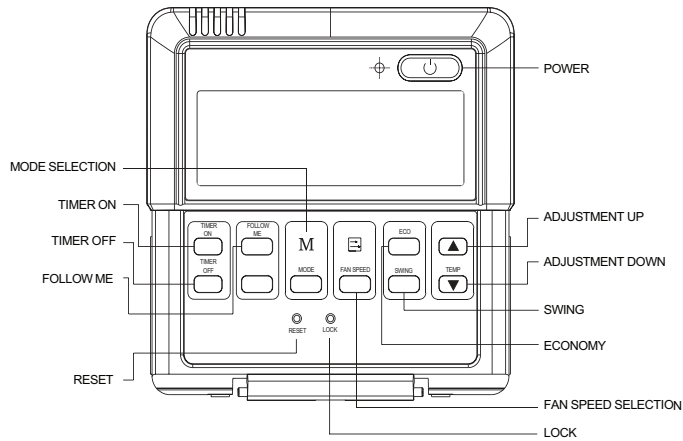
MODE Button
- Select system operation modes. Push button to cycle through each setting

$$AUTO \rightarrow COOL \rightarrow DRY \rightarrow HEAT \rightarrow FAN$$

POWER Button
- Turns system on and off

FAN SPEED Button
- Selects fan speed. Each button press cycles through the following settings on display

NOTE - Not available in **AUTO** mode.

TIMER ON / TIMER OFF Buttons
- TIMER ON (initiates an auto-on time sequence)
- TIMER OFF (initiates an auto-off time sequence) can be used separately or together
- Each press of the button increases the time in 30 minute increments up to 10 hours
- Above 10 hours each press of the button will increase the auto-timed setting by 60 minutes up to 24 hours

NOTE - To cancel, set timer to 0.0.

UP/DOWN Buttons ▲ ▼
- Increase or decrease the indoor temperature in two degree increments (maximum 88°F, minimum 62°F).

NOTE - Temperature cannot be adjusted in FAN mode.

NOTE - Press and hold and buttons together for 3 seconds to alternate the temperature display between the °C and °F scale.

SWING Button
- Used to stop or start horizontal louver auto swing feature

ECONOMY Button
- Maintains the most comfortable temperature and saves energy

RESET Button (Recessed)
- Resets Controller to factory settings. Recessed to prevent tampering

LOCK Button (Recessed)
- Locks Controller buttons to prevent tampering with settings

OPTIONAL ACCESSORIES

Extension Cable for Wired Remote Controller
- 20 ft. cable for easy low voltage connection to the indoor unit
- Extends cable to maximum 40 ft. length

WIRED PROGRAMMABLE CONTROLLER

M0STAT64Q-2

- Wired programmable local controller for mini-split indoor units with convenient timed schedules for daily operation
- Up to 8 events per day
- Schedule start time, mode, setpoint, and fan speed
- Compatible with all indoor units
- Copy/paste function for easy duplication of events to other days
- Built-in system diagnostics
- Large, back-lit, easy-to-read LCD screen with digital display

BUTTONS AND FUNCTIONS

POWER Button
- Turn system on and off

FAN SPEED Button
- Scroll through fan speeds (Auto - Low - Med - High)

MODE Button
- Use + and − buttons to scroll through available operation modes (Auto / Cool / Dry / Fan / Heat)

PLUS (+) and MINUS (−) Buttons
- Setpoint adjustment (62-86°F)
- Select days of the week when setting a schedule
- Select mode of operation

SWING Button
- Stop or start horizontal (up/down) louver auto swing
- Controls swing oscillation and louver angle in 6° increments

TIMER Button
- Sets current time of day (24 hour clock)
- Setup weekly schedules or to setup timed operation for the indoor unit
- Stop/Stop timed operation

DAY OFF / DEL Button
- Disable specific days/schedules of the week
- Delete a specific event

CONFIRM Button
- Confirms each step when managing schedules

BACK/TURBO Button
- Turbo sets indoor unit fan speed to high for a factory-set time period

COPY/FOLLOW ME Button
- Toggles between room temperature sensing from the indoor unit or the controller

DISPLAY

¹ Displays cooling setpoint, heating setpoint or room temperature
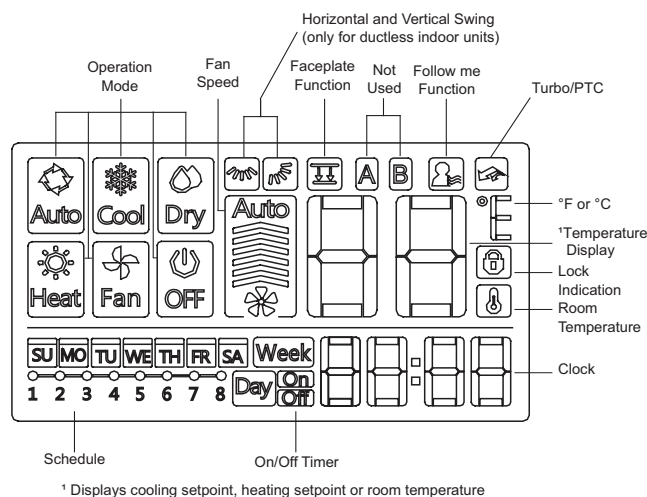
- Audible tone when a button is pressed (can be disabled)
- Lock function disables buttons to prevents tampering
- Controller uses 4-wire shielded 20 ft. (6 m) cable (furnished) for easy low voltage connection to the indoor unit
- Adaptor cables are furnished for various indoor unit connections

NOTE - Cable for longer lengths must be ordered separately.

NOTE - Maximum cable length is 164 ft. (50 m).

- Hardware for mounting furnished
- Mounts to standard electrical junction box (not furnished)
- Lithium battery furnished
- Power Supply: 5 VDC
- Dimensions (H x W x D): 4-7/8 x 4-3/4 x 3/4 in. (124 x 121 x 19 mm)

OPTIONAL ACCESSORIES

Extension Cable for Wired Programmable Controller
- 20 ft. cable for easy low voltage connection to the indoor unit
- Extends cable to 40 ft. (12 m) length

OUTDOOR UNITS

Condenser Pad
- Provides permanent foundation for outdoor units
- One-piece lightweight structural foam and molded from high-density polyethylene (HDPE)
- Lightweight, easy to carry and install
- Textured finish provides a non-skid surface so outdoor unit sits securely in one place
- UV stable

Disconnects
- Positive unit disconnect
- Single door enclosure
- Fused and non-fused models available

Fuses
- 30 and 60 amp fuses available

Indoor/Outdoor Wiring Cable
- 14-gauge, 4-conductor wire
- THHN (Thermoplastic High Heat-resistant Nylon-coated) wire
- Suitable for wet or dry locations
- Rated up to 600V

Refrigerant Line Sets
- Refrigerant lines are shipped refrigeration clean
- Lines are cleaned, dried, pressurized and sealed at factory

Wall Brackets
- Heavy duty 1/8 in. thick steel brackets for supporting outdoor units
- Mount at any height to allow for easy maintenance under units
- Pre-punched holes for easy installation
- Powder coated gray finish
- Load rating 600 lbs. per pair

Whips
- Heavy duty electrical whips are available in 8 and 10 gauge sizes
- 6 ft. lengths
- Weatherproof metal conduit

INDOOR UNITS

Condensate Pumps
- Quietly and efficiently removes condensate
- See Optional Accessories Table for available pumps

A/C Easy Tee® Condensate Cleanout
- Condensate drain service port
- Flexible and easy to use with nitrogen, water or shop vac
- Screw cap on top allows easy access to condensate drain line

SPEEDICHANNEL™ SYSTEM

- SpeediChannel™ is a channel system covers system line sets
- Two-part system has a base and a cover
- Base is fastened to a wall or ceiling with plastic clips (SpeediClip™) that snap into a channel already molded into the base
- Cover fits on top of the base
- Manufactured from rigid PVC, which is UL rated and resistant to UV light
- System is a natural color that closely matches typical mini-split outdoor units
- Can be painted as desired to match any wall color

Typical Application
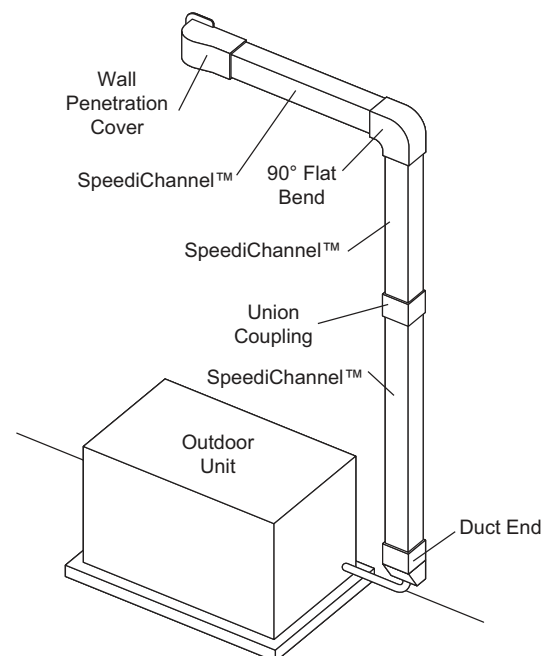
SPEEDICHANNEL™ SYSTEM (continued)

SpeediChannel™ Starter Kit
- The starter kit includes (1) Coupling, (1) Wall Penetration, (1) Inside Elbow, (1) Long Radius Flat Bend, (10) SpeediclipsTM, (10) 11 in. Cable Ties, and (1) SpeediChannel Instruction Booklet

Duct End
- Duct Ends are used to terminate a run of SpeediChannel™ to a small opening just large enough for the line set and condensate drain line to pass through

Flat Wall Escutcheon
- Flat Wall Escutcheons are used to cover a rough opening in a soffit, wall, or ceiling penetration

  - One side of the escutcheon is flat to allow for a SpeediChannel™ to run along a wall and to penetrate through an adjacent wall or ceiling
  - This is the most common type of wall penetration
  - Furnished in two parts, the escutcheon easily snaps onto the SpeediChannel™

Flex Joint
- A Flex Joint is an accordion-style piece of SpeediChannel™
- The flex joint can be extremely flexible when routing a SpeediChannel™ system around an obstacle
- Each joint is 20 in. long and can be combined together for longer flex runs
- The flex joint does not require the use of a union coupling
- The flex joint slides tightly inside the SpeediChannel™ system

T-Joint
- T-Joints are used for creating a tee connection between three pieces of SpeediChannel™
- Each tee is individually packed and furnished with stainless steel screws
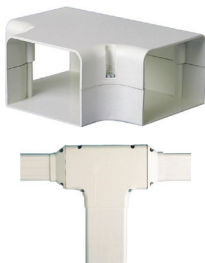
Union Coupling
- Union Couplings are used for joining two pieces of SpeediChannel™
- Each coupling is individually packed and furnished with stainless steel screws

Wall Penetration Cover
- Wall penetration covers are used to transition from the SpeediChannel™ system to a through wall penetration
- Wall covers are designed to allow for easy installation, even after the line set has been installed
- A hooking and fastening arrangement allows for quick installation
- Each wall cover is individually packed, and furnished with stainless steel screws to attach the wall cover to the base
- Three screws are necessary to fasten the wall cover to the wall construction, regardless of the type of installed system

45° and 90° Flat Bend Elbows
- 45º Flat Bends are used to route the SpeediChannel™ around obstacles
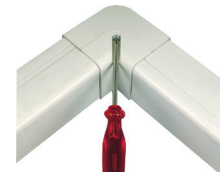- Each bend is individually packed and furnished with stainless steel screws

45°   90°

90° Inside Elbow
- 90º Inside Elbows are used to route the SpeediChannel™ around an inside corner
- Each elbow is individually packed and furnished with stainless steel screws

Mount Block White Qty. (2) 14 in. and (2) 36 in.
- Mount Blocks are used as mounting bases when outdoor units must be bolted down
- End caps (for aesthetics) come furnished with mounting bolts
- Maximum load capacity is 900 pounds per mounting block
- Installation temperatures range from -4ºF to 140ºF
- Mount blocks fit all mini-split outdoor units with a sliding rail feature

Nominal Size - Tons		0.75	1	1.5	2
Outdoor Unit Model No.		MLB009S4S	MLB012S4S	MLB018S4S	MLB024S4S
Ambient Temperature Operating Range - °F	Cooling	−22 - 122	−22 - 122	−22 - 122	−22 - 122
	Heating	−22 - 86	−22 - 86	−22 - 86	−22 - 86
Sound Data (dBA)	Cooling	54.5	56	59	62
	Heating	54.5	56	59	62
Refrigerant	Charge furnished (R-410A)	2 lbs. 9 oz.	2 lbs. 9 oz.	4 lbs. 1 oz.	5 lbs. 12 oz.
	Maximum line length with furnished charge - ft.	25	25	25	25
	Additional charge required per ft. - oz.	0.16	0.16	0.16	0.32
Compressor	No. and Type	(1) Rotary	(1) Rotary	(1) Rotary	(1) Rotary
	Refrigerant oil type	VG74	VG74	VG74	VG74
	Refrigerant oil charge - oz.	11.8	11.8	21	21
Connections - in.	Liquid/Gas pipe (flare)	1/4 / 3/8	1/4 / 1/2	1/4 / 1/2	3/8 / 5/8
	Maximum refrigerant pipe length - ft.	98	98	98	164
	Max. difference in level of indoor unit - ft.	66	66	66	82
Outdoor Fan	(No.) Diameter - in.	(1) 17	(1) 17	(1) 19	(1) 22
	Total air volume - cfm	1120	1180	1355	2355
	rpm	850/680/450	850/680/450	810/720/1150	1150/1050/900/850
Outdoor Coil	Number of rows	2	2	2	2
	Fins per inch	18	18	18	19
	Fin type	Hydrophilic aluminum			
	Tube outside diameter - in.	3/8	3/8	3/8	3/8
	Tube type	Rifled copper tubing			
	Net face area - ft.^{2}	4.73	4.73	5.19	8.16
	Application area - sq. ft.	130 - 195	170 - 250	260 - 375	345 - 505
Design Pressure	PSIG	550/340	550/340	550/340	550/340
Shipping Data	Net/Shipping weight (lbs.)	74 / 80	74 / 80	101 / 108	135 / 145
ELECTRICAL DATA					
Electrical Characteristics - 60 Hz - 1 Phase		208/230V	208/230V	208/230V	208/230V
[1] Maximum Overcurrent Protection (MOCP) amps		15	15	25	35
[2] Minimum circuit ampacity (MCA)		15	15	16	25
Outdoor Fan Motor	Rated load amps	0.4	0.4	0.76	0.5
	Output - W	34	34	80	120

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type circuit breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

		3	4
Nominal Size - Tons		3	4
Outdoor Unit Model No.		MLB036S4S	MLB048S4S
Ambient Temperature Operating Range - °F	Cooling	−22 - 122	−22 - 122
	Heating	−22 - 86	−22 - 86
Sound Data (dBA)	Cooling	63	65
	Heating	63	65
Refrigerant	Charge furnished (R-410A)	16 lbs. 0 oz.	16 lbs. 0 oz.
	Maximum line length with furnished charge - ft.	25	25
	Additional charge required per ft. - oz.	0.32	0.32
Compressor	No. and Type	Twin-Rotary	Twin-Rotary
	Refrigerant oil type	Ester Oil VG74	POE VG74
	Refrigerant oil charge - oz.	49.4	49.4
Connections - in.	Liquid/Gas pipe (flare)	3/8 / 5/8	3/8 / 5/8
	Maximum refrigerant pipe length - ft.	213	213
	Max. difference in level of indoor unit - ft.	98	98
Outdoor Fan	(No.) Diameter - in.	(2) 22	(2) 22
	Total air volume - cfm	4470	4470
	rpm	900/850/800/750	900/850/800/750
Outdoor Coil	Number of rows	2	2
	Fins per inch	18	18
	Fin type	Hydrophilic aluminum	
	Tube outside diameter - in.	3/8	3/8
	Tube type	Rifled copper tubing	
	Net face area - ft.²	6.43+6.97	6.43+6.97
	Application area - sq. ft.	515 - 750	690 - 1010
Design Pressure	PSIG	550/340	550/340
Shipping Data	Net/Shipping weight (lbs.)	220 / 248	227 / 256

ELECTRICAL DATA

Electrical Characteristics - 60 Hz - 1 Phase		208/230V	208/230V
[1] Maximum Overcurrent Protection (MOCP) amps		50	50
[2] Minimum circuit ampacity (MCA)		41	42
Outdoor Fan Motor	Rated load amps	(2) 0.39	(2) 0.39
	Output - W	(2) 85	(2) 85

NOTE - Extremes of operating range are plus and minus 10% of line voltage.

[1] HACR type circuit breaker or fuse.

[2] Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

Model No.	MWMC009S4	MWMC012S4
Nominal Tons	0.75	1
Power Supply - 60 hz - 1 phase	208/230V	208/230V
Rated load amps	0.25	0.25
Output (W)	20	20
Room Temperature Range (°F) — Cooling	60 - 90	60 - 90
Room Temperature Range (°F) — Heating	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	335/230/176	335/230/176
Sound Data (dBA) - Low/Medium/High	23/34/38	36/33.5/22.5
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 3/8	1/4 / 1/2
Drain connection o.d. - in.	1	1
Net/Shipping weights - lbs.	23 / 29	23 / 29

SPECIFICATIONS

Model No.	MWMC018S4	MWMC024S4
Nominal Tons	1.5	2
Power Supply - 60 hz - 1 phase	208/230V	208/230V
Rated load amps	0.13	0.5
Output (W)	30	58
Room Temperature Range (°F) — Cooling	60 - 90	60 - 90
Room Temperature Range (°F) — Heating	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	524/76/306	611/414/319
Sound Data (dBA) - Low/Medium/High	46.5/43/32.5	44/39.5/34
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 1/2	3/8 / 5/8
Drain connection o.d. - in.	1	1
Net/Shipping weights - lbs.	27 / 36	44 / 55

SPECIFICATIONS   CASSETTE INDOOR UNITS

Model No.	M22A009S4	M22A012S4	M22A018S4
Nominal Tons	0.75	1	1.5
Power Supply - 60 hz - 1 phase	208/230V	208/230V	208/230V
Rated load amps	0.9	1.0	1.5
Output (W)	46	46	46
Room Temperature Range (°F) — Cooling	62 - 90	62 - 90	62 - 90
Room Temperature Range (°F) — Heating	32 - 86	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	375/300/255	380/310/260	560/485/415
Sound Data (dBA) - Low/Medium/High	33/37/41	36/39/43	36/39/44
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 3/8	1/4 / 1/2	1/4 / 1/2
Drain connection o.d. - in.	1	1	1
Net/Shipping weights - lbs. — Body	32 / 38	36 / 41	36 / 42

REQUIRED COMPONENTS - ORDERED SEPARATELY

Cassette Panel	13X04	13X04	13X04
Net/Shipping weights - lbs.	6 / 10	6 / 10	6 / 10

SPECIFICATIONS

Model No.	M33C024S4	M33C036S4	M33C048S4
Nominal Tons	2	3	4
Power Supply - 60 hz - 1 phase	208/230V	208/230V	208/230V
Rated load amps	1.0	1.0	1.5
Output (W)	45	125	125
Room Temperature Range (°F) — Cooling	60 - 90	60 - 90	60 - 90
Room Temperature Range (°F) — Heating	32 - 86	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	706 / 636 / 548	947 / 853 / 753	1171 / 1059 / 935
Sound Data (dBA) - Low/Medium/High	43 / 46 / 49	52.5 / 50 / 46.5	55 / 53 / 50
Piping Connections - Liquid/Gas - o.d. - flare - in.	3/8 / 5/8	3/8 / 5/8	3/8 / 5/8
Drain connection o.d. - in.	1	1	1
Net/Shipping weights - lbs. — Body	48 / 56	60 / 69	65 / 74

REQUIRED COMPONENTS - ORDERED SEPARATELY

Cassette Panel	22V17	22V17	22V17
Net/Shipping weights - lbs.	14 / 20	14 / 20	14 / 20

SPECIFICATIONS   CEILING/FLOOR MOUNT INDOOR UNITS

Model No.	MCFB018S4	MCFA024S4	MCFA036S4	MCFA048S4
Nominal Tons	1.5	2	3	4
Power Supply - 60 hz - 1 phase	208/230V	208/230V	208/230V	208/230V
Rated load amps	1.65	2.2	1.5	1.8
Output (W)	90	90	115	(2) 90
Room Temperature Range (°F) Cooling	60 - 90	60 - 90	60 - 90	60 - 90
Heating	32 - 86	32 - 86	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	580/520/465	760/710/600	1035/915/640	1350/1120/1000
Sound Data (dBA) - Low/Medium/High	39/43/46	42/47/51	41/48/52	45/50/55
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 1/2	3/8 / 5/8	3/8 / 5/8	3/8 / 5/8
Drain connection o.d. - in.	1	1	1	1
Net/Shipping weights - lbs.	58 / 69	61 / 73	69 / 82	88 / 103

SPECIFICATIONS   FLOOR MOUNT CONSOLE INDOOR UNITS

Model No.	MFMA012S4
Nominal Tons	1
Power Supply - 60 hz - 1 phase	208/230V
Rated load amps	1.07
Output (W)	20
Room Temperature Range (°F) Cooling	60 - 90
Heating	32 - 86
Air Volume - cfm (High/Medium/Low)	365/318/248
Sound Data (dBA) - Low/Medium/High	33/39/43
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 1/2
Drain connection o.d. - in.	5/8
Net/Shipping weights - lbs.	33 / 42

SPECIFICATIONS   MEDIUM STATIC DUCTED INDOOR UNITS
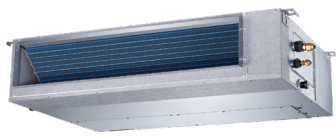
Model No.	MMDB009S4	MMDB012S4	MMDB018S4
Nominal Tons	0.75	1	1.5
Power Supply - 60 hz - 1 phase	208/230V	208/230V	208/230V
Rated load amps	1.27	1.37	1.3
Output (W)	55	55	160
Room Temperature Range (°F) Cooling	60 - 90	60 - 90	60 - 90
Heating	32 - 86	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	353 / 282 / 176	353 / 282 / 176	529 / 450 / 371
External Static Pressure (in. w.g)	0 - 0.16	0 - 0.16	0 - 0.40
Sound Data (dBA) - Low/Medium/High	27 / 28.5 / 33.5	31 / 34.5 / 38	35 / 37.5 / 40
Piping Connections - Liquid/Gas - o.d. - flare - in.	1/4 / 3/8	1/4 / 1/2	1/4 / 1/2
Drain connection o.d. - in.	1	1	1
Net/Shipping weights - lbs.	38 / 49	38 / 49	54 / 66

SPECIFICATIONS

Model No.	MMDB024S4	MMDB036S4	MMDB048S4
Nominal Tons	2	3	4
Power Supply - 60 hz - 1 phase	208/230V	208/230V	208/230V
Rated load amps	1.7	2.45	2.50
Output (W)	160	300	560
Room Temperature Range (°F) Cooling	60 - 90	60 - 90	60 - 90
Heating	32 - 86	32 - 86	32 - 86
Air Volume - cfm (High/Medium/Low)	775 / 693 / 435	1082 / 912 / 703	1228 / 1031 / 715
External Static Pressure (in. w.g)	0 - 0.64	0 - 0.64	0 - 0.64
Sound Data (dBA) - Low/Medium/High	37 / 41 / 44	40.5 / 43.5 / 48	49 / 50 / 52
Piping Connections - Liquid/Gas - o.d. - flare - in.	3/8 / 5/8	3/8 / 5/8	3/8 / 5/8
Drain connection o.d. - in.	1	1	1
Net/Shipping weights - lbs.	87 / 103	106 / 122	120 / 142

OPTIONAL ACCESSORIES - ORDER SEPARATELY

Description		Catalog No.	Size 009	012	018	024	036	048
OUTDOOR UNIT								
Condenser Pad (18 x 38 x 3)		Y5014	•	•	•	•	•	•
Disconnects	30 amp, fused, 1 ph	27P37	•	•	•	•	•	•
	60 amp, non-fused, 1 ph	27P39	•	•	•	•	•	•
Fuses	30A	83P75	•	•	•	•	•	•
	60A	83P77	•	•	•	•	•	•
Line Sets	1/4 in. x 3/8 in. x 25 ft.	90X53	•	N/A				
	1/4 in. x 3/8 in. x 50 ft.	X0258	•	N/A				
	1/4 in. x 1/2 in. x 25 ft.	90X52	N/A	•	•	N/A		
	1/4 in. x 1/2 in. x 50 ft.	X0259	N/A	•	•	N/A		
	3/8 in. x 5/8 in. x 25 ft.	X8406	N/A			•	•	•
	3/8 in. x 5/8 in. x 50 ft.	X8407	N/A			•	•	•
Wall Brackets	30 inch	X1727	•	•	•	•	N/A	
	36 inch	X1728	N/A				•	•
Whips	10 Gauge - 1/2 in. x 6 ft.	29P54	•	•	•	•	•	•
	8 Gauge - 3/4 in. x 6 ft.	27P44	•	•	•	•	•	•
INDOOR UNIT								
[1] Diversitech Condensate Pumps with Reservoir	ClearVue Mini™ - 7.9 US gallons per hour, 35 ft. lift - 120-240V	Y5170	•	•	•	•	•	•
	Mini-Split Pump - 4 US gallons per hour, 20 ft. lift - 115V	Y7946	•	•	N/A			
	Mini-Split Pump - 4 US gallons per hour, 20 ft. lift - 230V	Y7949	•	•	•	•	•	•
[1] Blue Diamond® Condensate Pumps with Reservoir	MicroBlue® - 1.3 US gallons per hour, 6 ft. lift - 110-230V	14T74	•	•	•	N/A		
	MaxiBlue® - 3.7 US gallons per hour, 16.5 ft. lift - 208/230V	14T69	N/A			•	•	N/A
	MegaBlue® - 13.2 US gallons per hour, 23 ft. lift - 208/230V	14T71	N/A					•
	MultiTank Kit	14T75	N/A			•	•	•
	Sensor Cable Extension - 16 ft.	14T76	•	•	•	•	•	•
A/C Easy Tee® Condensate Cleanout		Y7947	•	•	•	•	•	•
CONTROLS								
Wired Remote Controller (Furnished With All Ducted Models) M0STAT61Q-1		14A66	•	•	•	•	•	•
Extension Cable for Wired Remote Controller - 20 ft.		Y8008	•	•	•	•	•	•

NOTE - The Wired Remote Controller above is furnished as standard with the indoor ducted models.
As an option, the Wired Remote Controller can be ordered for a wall-mount, cassette, floor console or ceiling/floor mount unit if desired.

Description		Catalog No.	Size 009	012	018	024	036	048
Wired Programmable Controller M0STAT64Q-2		22U20	•	•	•	•	•	•
Extension Cable for Wired Programmable Controller - 20 ft. M0CTRL64Q-1		Y8738	•	•	•	•	•	•
Indoor/Outdoor Wiring Cable - 14 Gauge, 4 conductor wire, THHN, 250 ft.		Y2067	•	•	•	•	•	•
SPEEDICHANNEL™ SYSTEM								
SpeediChannel™ Starter Kit - 4 in.		Y3387	•	•	•	•	•	•
SpeediChannel - 4 in. x 6-1/2 ft. (qty. 6)		Y3388	•	•	•	•	•	•
Union Coupling - 4 in.		Y3389	•	•	•	•	•	•
90° Flat Bend Elbow - 4 in.		Y3390	•	•	•	•	•	•
90° Inside Elbow - 4 in.		Y3391	•	•	•	•	•	•
45° Flat Bend Elbow - 4 in.		Y3392	•	•	•	•	•	•
Flex Joint - 4 in.		Y3393	•	•	•	•	•	•
T-Joint - 4 in.		Y3394	•	•	•	•	•	•
Duct End - 4 in.		Y3395	•	•	•	•	•	•
Flat Wall Escutcheon - 4 in.		Y3396	•	•	•	•	•	•
Wall Penetration Cover - 4 in.		Y3399	•	•	•	•	•	•
Mount Block (White) Qty, 2 - 14 in.		Y3397	•	•	•	•	•	•
Mount Block (White) Qty, 2 - 36 in.		Y3398	•	•	•	•	•	•

[1] Y7946, Y7949 and 14T74 condensate pumps can be installed inside the indoor units. All other pumps must be installed external to the indoor unit.
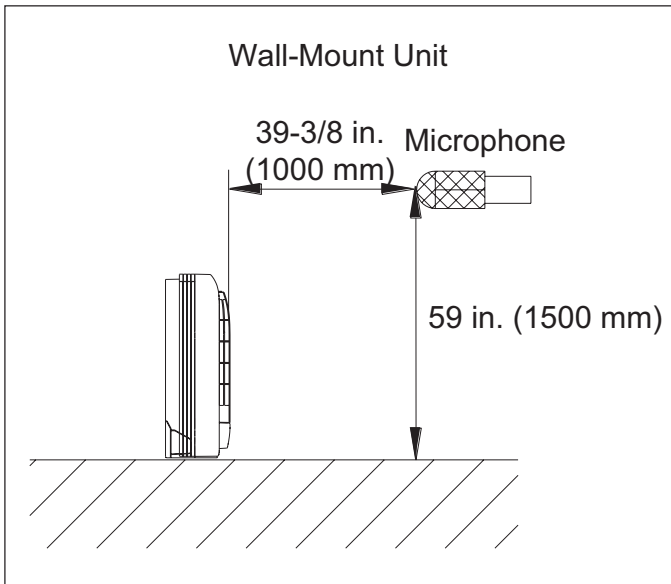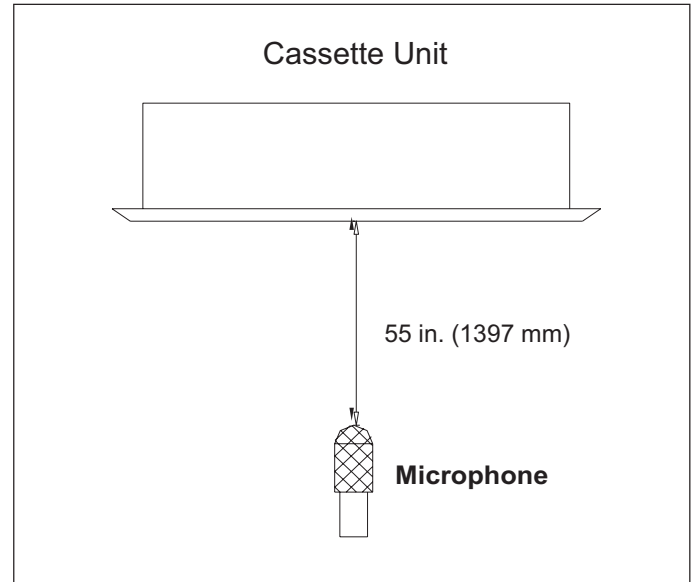
AHRI SYSTEM MATCHES

Indoor Unit Type	Outdoor Unit	Indoor Unit	Cooling Capacity	SEER	EER	Heat Capacity High	Low	HSPF (IV)	AHRI Reference	Energy Star?
Wall-Mounted Non-Ducted	MLB009S4S-1P	MWMC009S4-1P	9,000	28.1	16.2	11,800	7,500	12.5	207683520	Yes
	MLB012S4S-1P	MWMC012S4-1P	12,000	25.5	13.5	12,000	7,500	13.0	207683521	Yes
	MLB018S4S-1P	MWMC018S4-1P	18,000	21.5	12.5	18,000	10,800	13.0	207683522	Yes
	MLB024S4S-1P	MWMC024S4-1P	24,000	21.5	13.0	29,000	19,800	12.0	207683523	Yes
Cassette Non-Ducted	MLB009S4S-1P	M22A009S4-2P	9,000	20.5	13.0	10,000	6,100	10.8	207683531	Yes
	MLB012S4S-1P	M22A012S4-2P	12,000	21.5	12.7	12,000	7,900	10.6	207683532	Yes
	MLB018S4S-1P	M22A018S4-2P	16,000	20.0	12.5	18,000	11,000	10.3	207683533	Yes
	MLB024S4S-1P	M33C024S4-1P	24,000	20.2	11.0	25,000	15,000	11.6	207683534	No
	MLB036S4S-1P	M33A036S4-2P	36,000	18.0	9.5	39,000	25,400	10.3	205782164	No
	MLB048S4S-1P	M33B048S4-2P	48,000	16.5	8.3	51,000	35,000	10.7	205782165	No
Ceiling/Floor Mount Non-Ducted	MLB018S4S-1P	MCFB018S4-2P	17,000	20.2	12.5	18,000	12,000	10.5	207683529	Yes
	MLB024S4S-1P	MCFA024S4-2P	24,000	20.2	11.5	24,600	14,500	11.6	207683530	No
	MLB036S4S-1P	MCFA036S4-2P	36,000	17.5	8.6	39,000	25,000	10.0	205782162	No
	MLB048S4S-1P	MCFA048S4-2P	48,000	17.0	8.2	50,000	35,000	10.8	205782163	No
Floor Mount Console Non-Ducted	MLB012S4S-1P	MFMA012S4-1P	12,000	23.0	13.0	12,000	8,400	11.5	207683528	Yes
Medium Static Ducted	MLB009S4S-1P	MMDB009S4-2P	9,000	23.0	14.0	10,000	6,400	12.0	207683524	Yes
	MLB012S4S-1P	MMDB012S4-2P	12,000	21.5	13.0	12,000	8,300	11.5	207683525	Yes
	MLB018S4S-1P	MMDB018S4-2P	16,500	19.6	12.5	19,000	12,700	11.0	207683526	Yes
	MLB024S4S-1P	MMDB024S4-2P	24,000	20.6	12.5	24,600	14,500	12.6	207683527	Yes
	MLB036S4S-1P	MMDB036S4-2P	36,000	17.5	9.0	40,000	28,000	11.5	205782160	No
	MLB048S4S-1P	MMDB048S4-2P	48,000	16.0	8.7	48,000	33,000	11.1	205782161	No

Ratings are AHRI certified to AHRI Standard 210/240;
  • Cooling Ratings - 95°F wet bulb/75°F dry bulb outdoor air temperature and 80°F dry bulb/67°F wet bulb entering indoor coil air.
  • High Temperature Heating Ratings - 47°F dry bulb/43°F wet bulb outdoor air temperature and 70°F dry bulb/60°F wet bulb entering indoor coil air.
  • Low Temperature Heating Ratings - 17°F dry bulb/15°F wet bulb outdoor air temperature and 70°F dry bulb/60°F wet bulb entering indoor coil air.
To convert HSPF from Region IV to Region V - Divide by 1.15.

Outdoor Unit

Microphone

H

39-3/8 in.
(1000 mm)

Note: H= 0.5 × height of outdoor unit

Cassette Unit

55 in. (1397 mm)

Microphone

Wall-Mount Unit

39-3/8 in.
(1000 mm) Microphone

59 in. (1500 mm)

Medium Static Ducted Unit

Duct

AIR FLOW

Duct

55 in. (1397 mm)

Microphone

Ceiling/Floor/Console Unit

Air outlet side

39-3/8 in.
(1000 mm)

39-3/8 in.
(1000 mm)

Microphone

39-3/8 in. Microphone
(1000 mm)

59 in.
(1500 mm)

COOLING CAPACITY

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
–22	8.93	5.70	9.36	5.93	9.86	6.21	10.43	6.54
–13	9.56	6.18	10.02	6.45	10.57	6.77	11.04	7.03
–4	9.75	6.53	10.35	6.89	11.01	7.29	11.56	7.62
0	10.10	6.88	10.52	7.12	11.14	7.50	11.81	7.90
5	10.38	6.99	10.87	7.28	11.44	7.62	12.06	7.98
17	10.33	7.44	10.99	7.88	11.58	8.26	12.23	8.68
25	10.67	7.59	11.13	7.88	11.83	8.32	12.40	8.68
35	10.80	8.05	11.36	8.41	11.83	8.72	12.55	9.20
47	10.97	8.21	11.51	8.57	12.16	9.01	12.73	9.38
55	11.03	8.41	11.71	8.87	12.26	9.24	12.80	9.59
65	10.87	8.18	11.47	8.59	12.17	9.07	12.87	9.54
75	10.97	8.47	11.64	8.94	12.31	9.40	12.94	9.82
85	11.27	9.14	11.76	9.49	12.43	9.99	13.16	10.51
95	11.51	9.38	12.04	9.75	12.69	10.21	13.29	10.65
105	11.03	9.19	11.71	9.69	12.20	10.03	12.85	10.53
115	9.53	9.38	10.04	9.82	10.58	10.26	11.14	10.63
122	8.46	8.79	8.90	9.29	9.40	9.65	9.84	10.05

HEATING CAPACITY

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
–22	5.79	5.65	5.49	5.28
–13	7.26	7.05	6.83	6.53
–4	8.98	8.71	8.49	8.10
0	10.21	9.90	9.59	9.16
5	11.25	10.94	10.62	10.18
17	13.60	13.24	12.83	12.33
20	14.19	13.71	13.29	12.80
25	14.64	14.19	13.74	13.13
32	15.03	14.61	14.22	13.70
35	15.54	15.12	14.72	14.12
40	15.71	15.27	14.88	14.29
47	15.90	15.45	15.03	14.43
50	16.46	15.90	15.44	14.81
57	16.76	16.32	15.78	15.21

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
−22	9.32	5.97	9.78	6.22	10.40	6.58	10.84	6.82
−13	10.13	6.46	10.60	6.73	11.08	6.99	11.65	7.31
−4	10.38	6.99	10.93	7.32	11.43	7.61	12.14	8.05
0	10.48	6.90	11.15	7.29	11.78	7.65	12.31	7.96
5	10.57	7.39	11.23	7.82	11.91	8.24	12.51	8.60
17	10.95	7.75	11.45	8.06	12.09	8.47	12.77	8.89
25	11.26	8.31	11.79	8.66	12.37	9.03	13.02	9.45
35	11.46	8.03	11.88	8.43	12.56	8.87	13.25	9.30
47	11.75	8.72	12.42	9.16	12.96	9.50	13.63	9.93
55	11.84	8.88	12.56	9.36	13.16	9.76	13.71	10.12
65	11.90	9.33	12.45	9.70	13.13	10.18	13.79	10.63
75	11.77	9.32	12.44	9.79	13.14	10.29	13.87	10.79
85	11.94	9.52	12.52	9.92	13.26	10.44	14.05	11.00
95	12.27	10.20	12.90	10.66	13.52	11.12	14.15	11.57
105	11.48	9.65	12.03	10.06	12.71	10.56	13.50	11.15
115	9.92	9.22	10.35	9.56	10.93	10.04	11.62	10.62
122	8.75	8.69	9.13	9.03	9.71	9.56	10.26	10.07

HEATING CAPACITY 012

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
−22	7.85	7.60	7.34	7.01
−13	9.15	8.87	8.64	8.25
−4	10.22	9.92	9.59	9.22
0	11.45	11.09	10.75	10.31
5	12.74	12.37	12.04	11.55
17	13.95	13.49	13.11	12.61
20	14.54	14.09	13.61	13.05
25	15.04	14.54	14.11	13.60
32	15.39	15.01	14.60	14.06
35	16.03	15.54	15.12	14.58
40	16.32	15.78	15.38	14.69
47	16.61	16.14	15.61	15.04
50	17.09	16.54	15.98	15.36
57	17.39	16.90	16.39	15.75

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
−22	14.48	8.71	15.15	9.07	15.83	9.41	16.64	9.84
−13	15.31	9.77	16.17	10.25	17.15	10.81	17.90	11.22
−4	16.57	10.71	17.40	11.19	18.34	11.74	19.24	12.24
0	16.87	11.61	17.89	12.25	18.66	12.69	19.72	13.35
5	17.11	11.55	18.11	12.16	19.20	12.81	20.26	13.45
17	17.69	12.93	18.55	13.48	19.65	14.19	20.55	14.75
25	17.06	12.36	17.96	12.93	18.79	13.46	19.94	14.20
35	16.66	12.53	17.61	13.18	18.39	13.67	19.31	14.29
47	16.19	11.88	17.08	12.48	17.98	13.06	18.93	13.66
55	15.93	11.94	16.80	12.53	17.80	13.21	18.83	13.90
65	16.02	12.06	16.98	12.71	17.95	13.37	18.74	13.87
75	15.84	12.34	16.72	12.96	17.73	13.66	18.65	14.28
85	15.98	12.42	16.93	13.09	17.67	13.58	18.48	14.12
95	16.18	13.33	16.87	13.81	17.59	14.31	18.40	14.89
105	14.75	12.20	15.65	12.88	16.65	13.64	17.66	14.39
115	13.36	12.62	14.20	13.34	15.02	14.03	15.72	14.58
122	12.25	12.21	12.97	12.87	13.68	13.52	14.28	14.05

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
−22	14.62	14.26	13.84	13.26
−13	16.27	15.78	15.38	14.80
−4	18.11	17.65	17.09	16.39
0	18.91	18.32	17.86	17.12
5	19.78	19.12	18.58	17.91
17	21.22	20.58	19.92	19.21
20	21.27	20.59	19.95	19.11
25	21.17	20.64	19.98	19.20
32	21.14	20.52	20.00	19.20
35	21.44	20.71	20.03	19.19
40	21.43	20.71	20.05	19.15
47	21.50	20.77	20.07	19.35
50	21.92	21.18	20.53	19.79
57	22.27	21.68	21.07	20.33

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
−22	18.58	11.53	19.35	11.93	20.45	12.55	21.62	13.19
−13	19.91	12.63	20.74	13.09	21.67	13.60	23.00	14.35
−4	20.91	14.25	21.78	14.74	22.78	15.33	24.21	16.20
0	21.24	14.24	22.24	14.82	23.29	15.45	24.70	16.28
5	21.55	14.93	22.91	15.78	23.99	16.44	25.22	17.20
17	22.45	16.26	23.66	17.04	24.82	17.78	26.35	18.79
25	23.45	17.36	24.55	18.06	26.09	19.07	27.24	19.80
35	24.17	18.17	25.61	19.16	26.79	19.93	28.02	20.73
47	25.83	18.65	27.30	19.59	28.89	20.64	30.28	21.53
55	25.70	19.20	27.23	20.25	28.54	21.11	30.20	22.20
65	25.96	20.29	27.50	21.39	28.89	22.34	30.12	23.16
75	25.64	19.86	26.80	20.63	28.36	21.72	30.04	22.86
85	24.52	19.72	25.67	20.54	26.91	21.39	28.54	22.54
95	23.12	18.64	24.15	19.36	25.70	20.47	26.94	21.33
105	22.53	19.38	23.57	20.18	24.81	21.12	25.87	21.89
115	20.46	19.49	21.69	20.55	22.79	21.49	23.74	22.24
122	19.35	19.26	20.52	20.35	21.53	21.27	22.50	22.12

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
−22	17.37	16.89	16.42	15.81
−13	21.05	20.33	19.78	18.99
−4	23.99	23.20	22.48	21.69
0	25.23	24.59	23.80	22.97
5	26.97	26.26	25.42	24.53
17	27.27	26.48	25.68	24.55
20	27.38	26.64	25.86	24.70
25	27.47	26.77	26.04	24.95
32	27.74	27.01	26.22	25.12
35	28.01	27.11	26.38	25.32
40	28.90	28.12	27.35	26.28
47	29.91	29.09	28.33	27.22
50	30.19	29.45	28.73	27.44
57	30.98	30.02	29.18	28.07

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
−22	26.94	17.42	28.25	17.99	29.46	18.48	31.03	18.80
−13	29.76	20.20	30.87	20.64	32.02	21.09	33.73	21.46
−4	30.99	21.70	32.49	22.42	34.07	23.15	36.07	23.68
0	32.46	23.57	33.86	24.22	35.12	24.75	37.19	25.32
5	33.12	24.26	34.36	24.79	36.02	25.61	38.14	28.05
17	33.73	25.43	35.36	26.27	36.88	26.99	39.26	27.76
25	34.87	26.67	36.76	27.70	38.13	28.31	40.38	28.96
35	36.22	28.10	37.58	28.72	39.40	29.66	41.50	30.18
47	37.40	29.57	38.80	30.22	40.24	30.89	42.62	31.59
55	37.23	30.36	38.62	31.03	40.06	31.71	42.42	32.43
65	37.06	30.34	38.44	31.01	39.88	31.69	42.23	32.41
75	36.88	30.60	38.26	31.27	39.69	31.96	42.03	32.69
85	34.21	28.75	35.87	29.69	37.41	30.51	39.82	31.37
95	33.01	28.48	34.42	29.27	35.71	29.91	37.81	30.59
105	29.88	26.72	31.00	27.31	32.50	28.21	34.79	29.16
115	26.28	25.76	27.26	26.33	28.58	27.19	30.59	28.12
122	24.29	24.09	25.06	24.91	26.00	25.73	27.53	27.25

HEATING CAPACITY   036

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
−22	27.32	26.83	26.38	25.54
−13	33.47	32.75	32.18	31.18
−4	40.98	39.98	39.24	38.06
0	41.63	40.97	40.09	38.93
5	43.02	41.97	40.94	39.67
17	48.93	47.64	46.34	45.00
20	49.52	48.17	46.99	45.54
25	50.43	49.20	47.86	46.43
32	50.82	49.53	48.23	46.74
35	51.45	50.09	48.73	47.27
40	51.63	50.22	49.38	47.95
47	51.26	50.41	49.66	48.17
50	52.13	51.36	50.65	49.19
57	52.60	51.98	51.41	49.82

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb / Wet Bulb)							
	65°F / 54°F		70°F / 59°F		75°F / 63°F		80°F / 67°F	
	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh	Total mBtuh	Sensible mBtuh
–22	34.36	21.56	36.75	22.72	39.10	23.81	41.59	24.95
–13	37.95	25.00	40.16	26.06	42.49	27.17	45.21	28.48
–4	39.52	26.86	42.27	28.30	45.21	29.83	48.35	31.43
0	41.83	29.48	44.50	30.90	47.09	32.22	50.36	33.95
5	43.12	30.66	45.63	31.96	48.80	33.68	52.19	34.75
17	42.98	31.46	45.97	33.15	48.91	34.75	52.59	36.81
25	43.54	32.33	46.82	34.25	49.54	35.70	52.99	37.62
35	44.34	33.38	46.92	34.80	50.18	36.67	53.38	38.44
47	46.28	35.52	48.98	37.04	51.83	38.61	55.43	40.69
55	46.37	36.71	49.07	38.27	51.93	39.90	55.54	42.04
65	46.42	36.89	49.12	38.46	51.98	40.10	55.59	42.25
75	46.47	37.42	49.18	39.01	52.04	40.67	55.66	42.85
85	43.52	35.50	46.55	37.40	49.52	39.20	53.24	41.53
95	42.15	35.31	44.84	37.00	47.45	38.58	50.75	40.65
105	38.16	33.12	40.38	34.53	43.19	36.38	46.69	38.75
115	27.85	26.50	29.47	27.63	31.52	29.11	34.07	31.00
122	25.74	25.43	27.09	26.69	28.67	28.10	30.66	30.05

Outdoor Temperature - °F (Dry Bulb)	Indoor Temperature - °F (Dry Bulb)			
	60°F	65°F	70°F	75°F
	Total mBtuh	Total mBtuh	Total mBtuh	Total mBtuh
–22	32.12	31.64	31.17	29.93
–13	40.23	39.59	38.97	37.60
–4	49.76	48.93	48.11	46.67
0	51.01	49.91	48.70	46.75
5	52.03	50.86	49.28	47.56
17	57.66	56.26	54.99	52.52
20	58.81	57.49	56.25	53.72
25	60.69	59.38	57.93	55.61
32	61.37	59.99	58.64	56.59
35	62.26	60.92	59.61	56.63
40	63.95	62.39	60.87	57.52
47	63.77	62.77	61.42	58.35
50	64.41	63.52	62.64	60.14
57	65.51	64.54	63.58	61.36

MWMC009S4-1P - COOLING
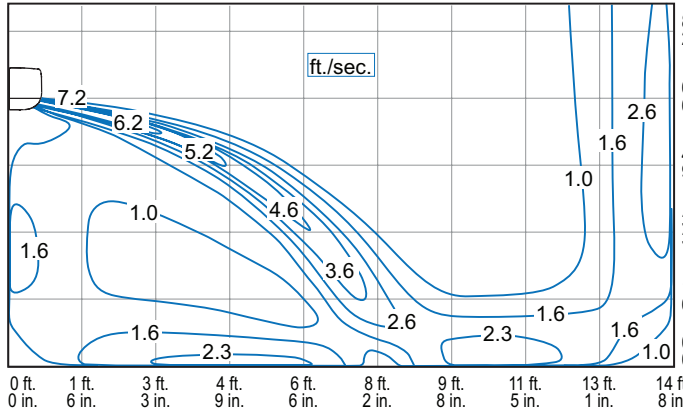
MWMC009S4-1P - HEATING
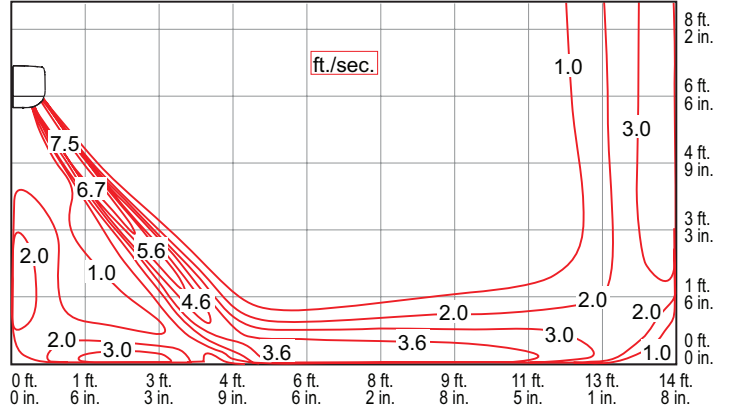
MWMC012S4-1L, MWMC012S4-1P - COOLING
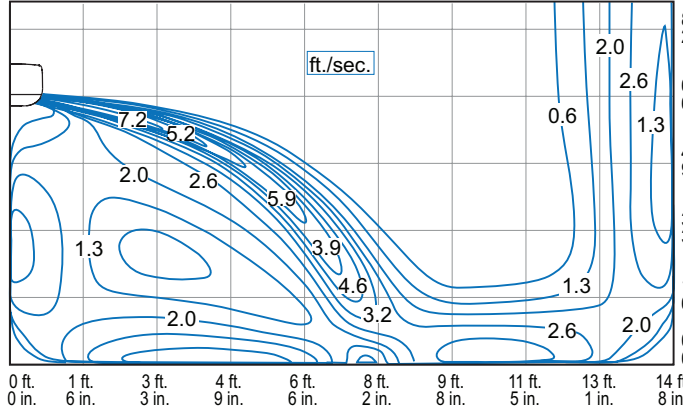
MWMC012S4-1L, MWMC012S4-1P - HEATING
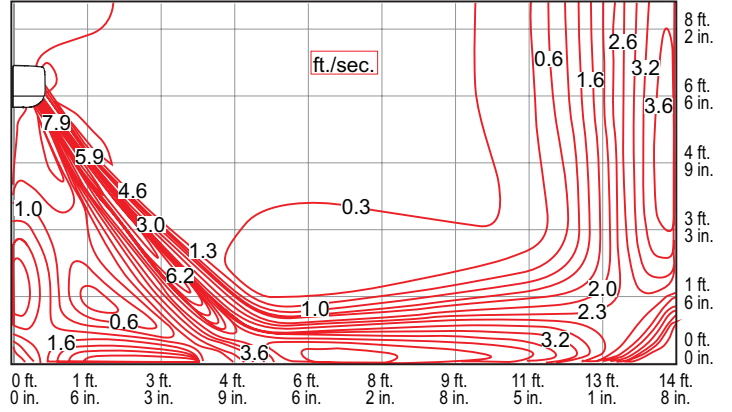
MWMC018S4-1P - COOLING
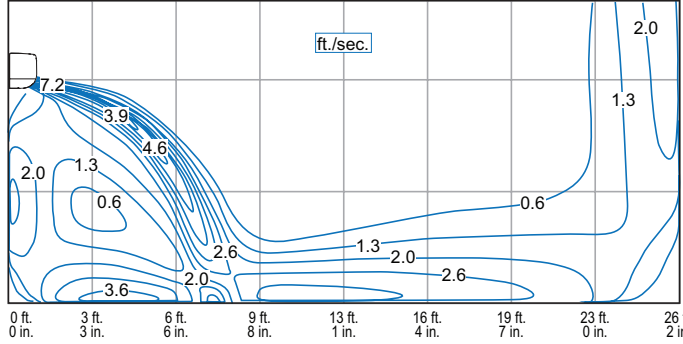
MWMC018S4-1P - HEATING
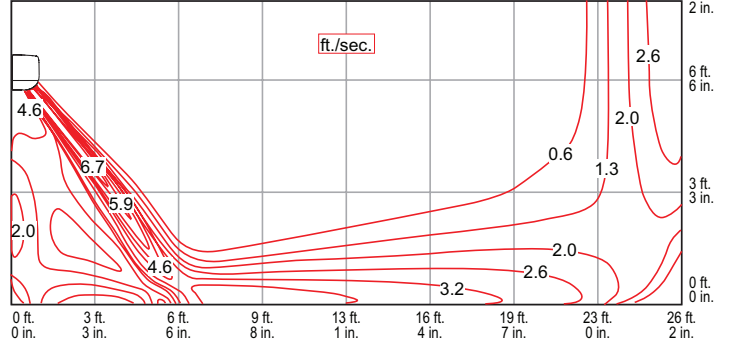
MWMC024S4-1P - COOLING
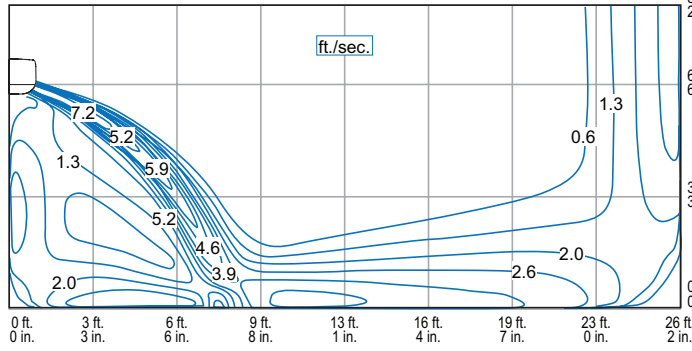
MWMC024S4-1P - HEATING
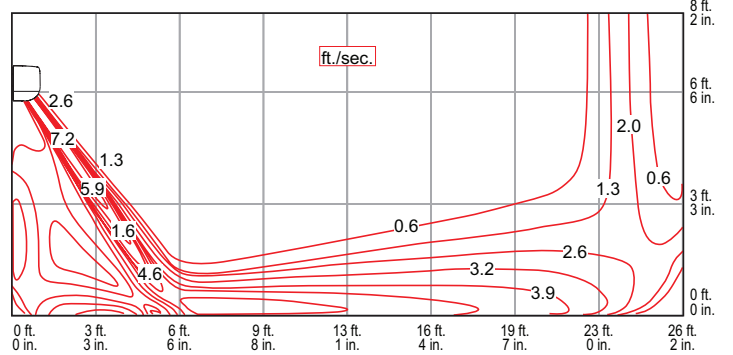
M22A009S4 AND M22A012S4 - COOLING
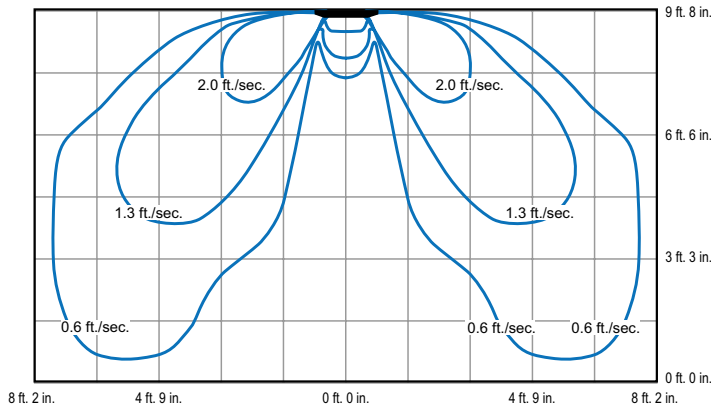
M22A009S4 AND M22A012S4 - HEATING
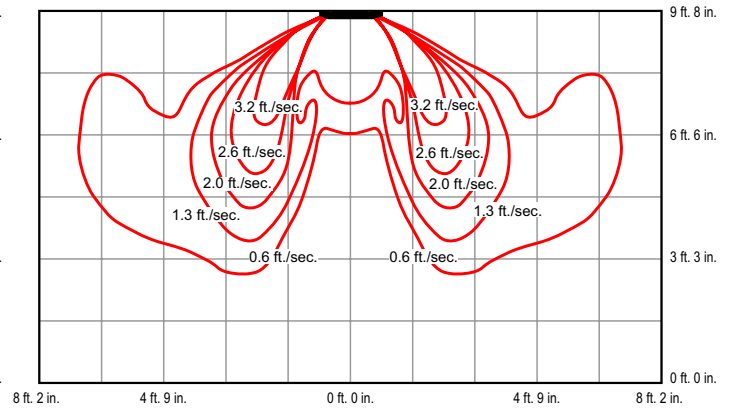
M22A018S4 - COOLING
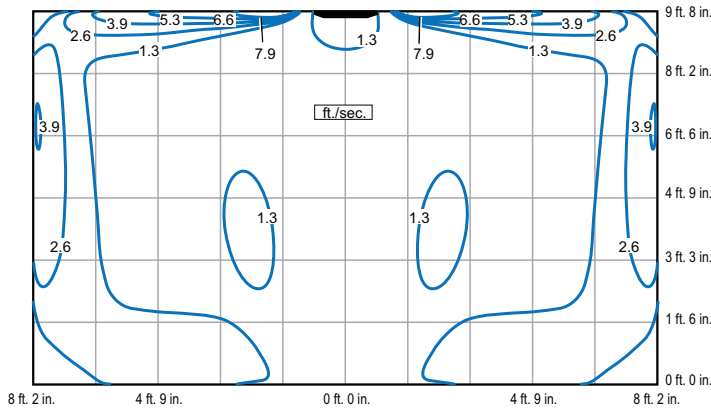
M22A018S4 - HEATING
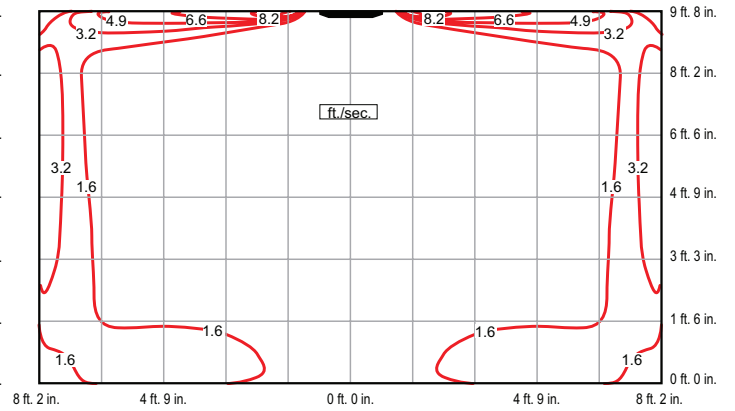
M33C024S4 - COOLING
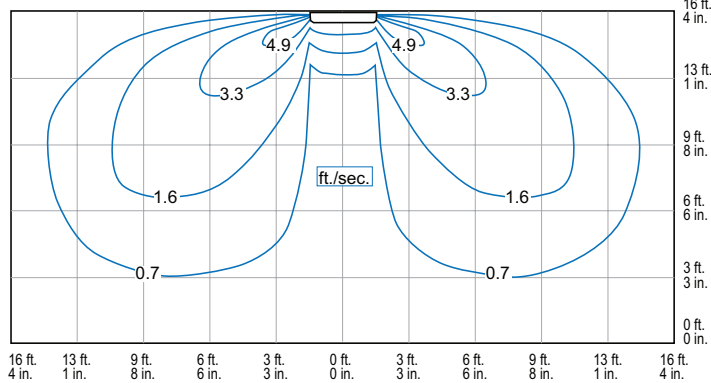
M33C024S4 - HEATING
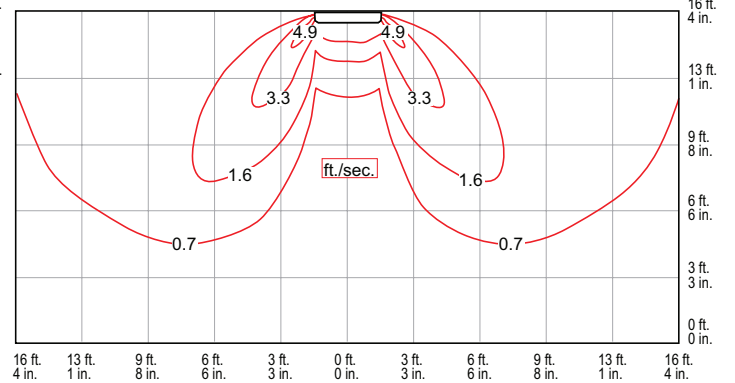
M33C036S4 - COOLING
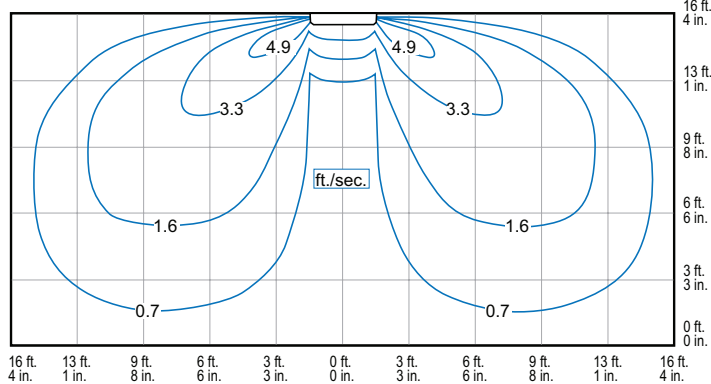
M33C036S4 - HEATING
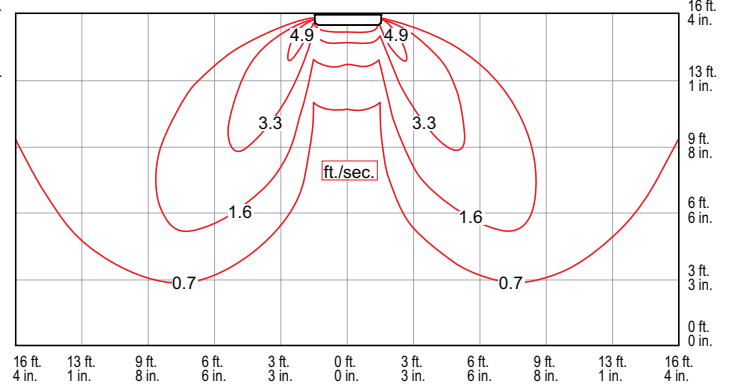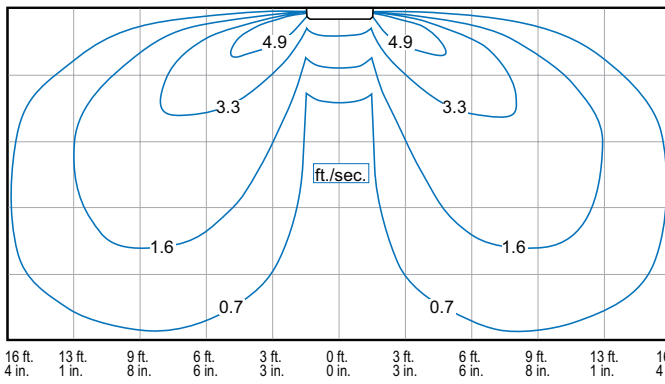
M33C048S4 - COOLING

M33C048S4 - HEATING
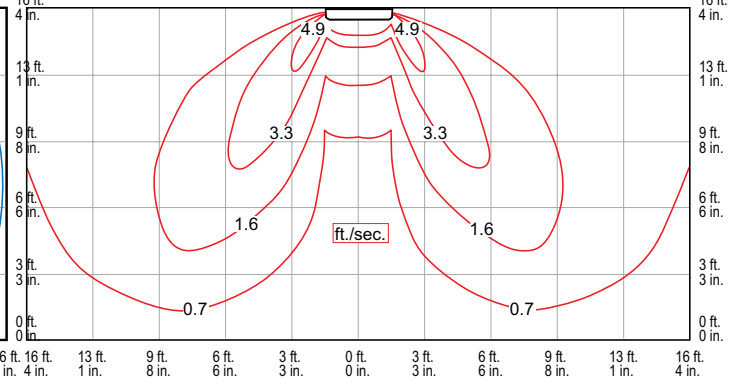
MCFB018S4 AND MCFA024S4 - COOLING - CEILING
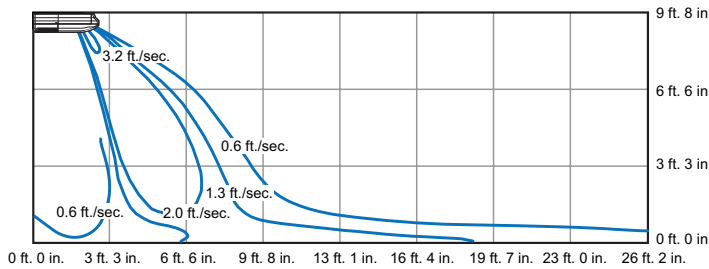
MCFB018S4 AND MCFA024S4 - HEATING - CEILING
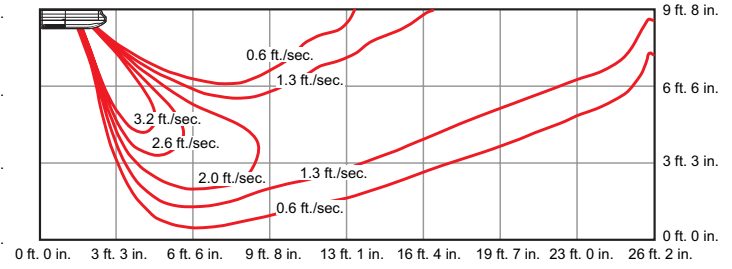
MCFB018S4 AND MCFA024S4 - COOLING - FLOOR
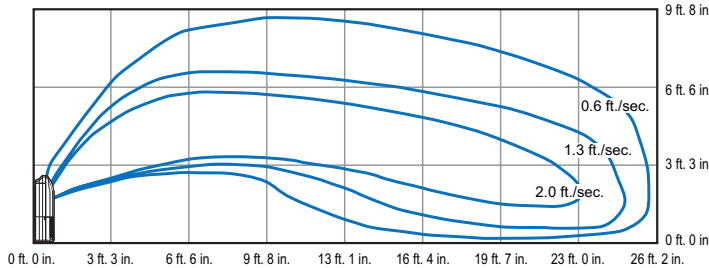
MCFB018S4 AND MCFA024S4 - HEATING - FLOOR
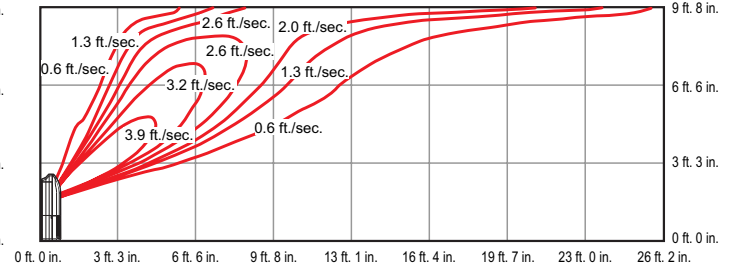
MCFA036S4 - CEILING - COOLING
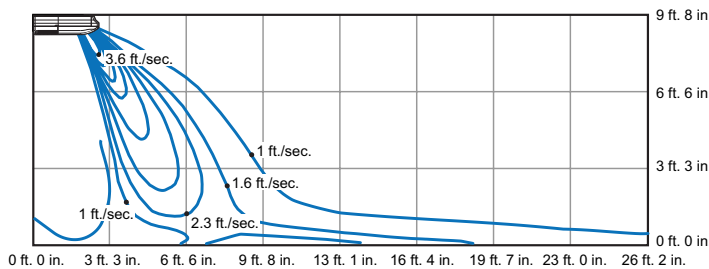
MCFA036S4 - CEILING - HEATING
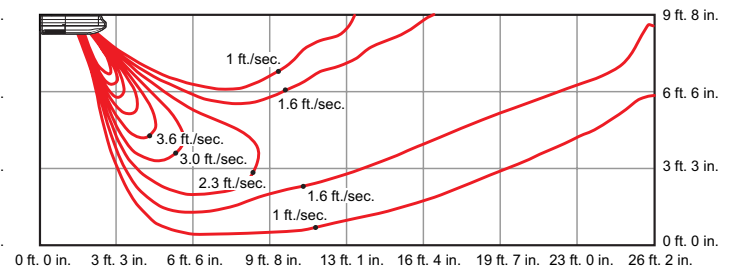
MCFA036S4 - FLOOR - COOLING
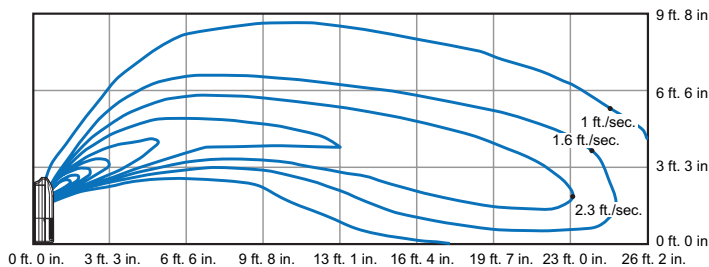
MCFA036S4 - FLOOR - HEATING
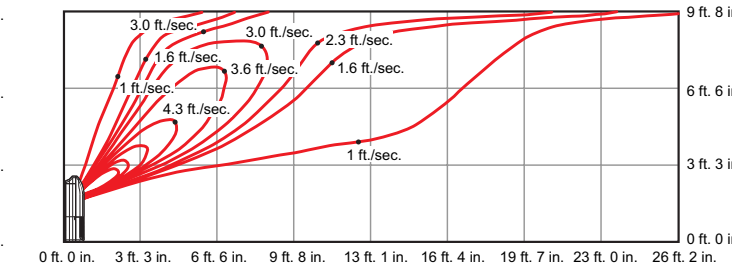
MCFA048S4 - CEILING - COOLING

MCFA048S4 - CEILING - COOLING

MCFA048S4 - FLOOR - COOLING
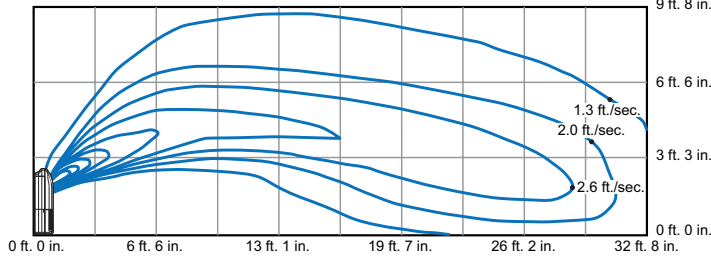
MCFA048S4 - FLOOR - HEATING
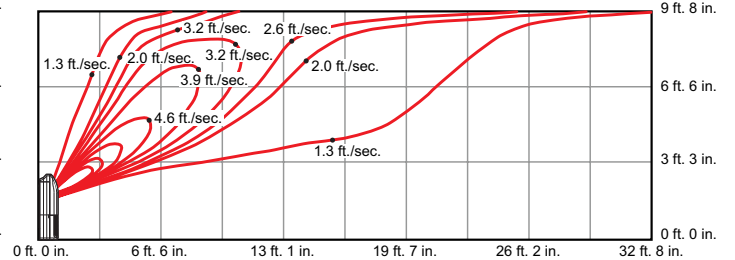
AIR THROW DATA　　　　　　　　**FLOOR MOUNT CONSOLE INDOOR UNITS**

MFMA012S4 - COOLING - FLOOR
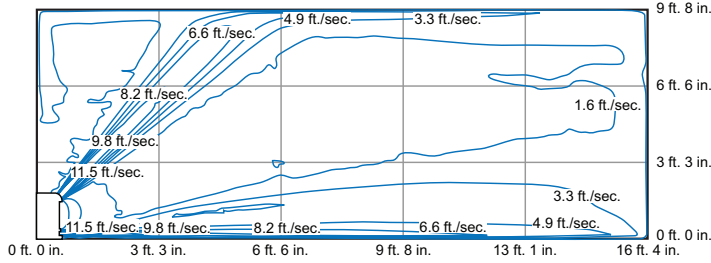
MFMA012S4 - HEATING - FLOOR
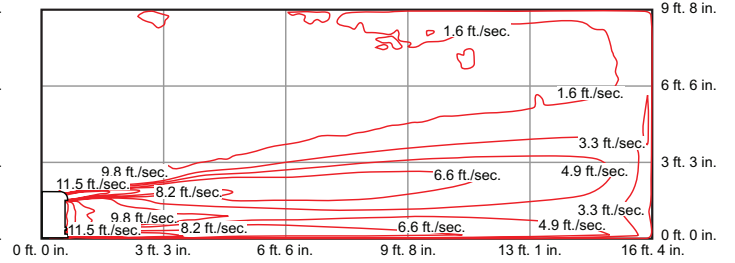
MMDB009S4
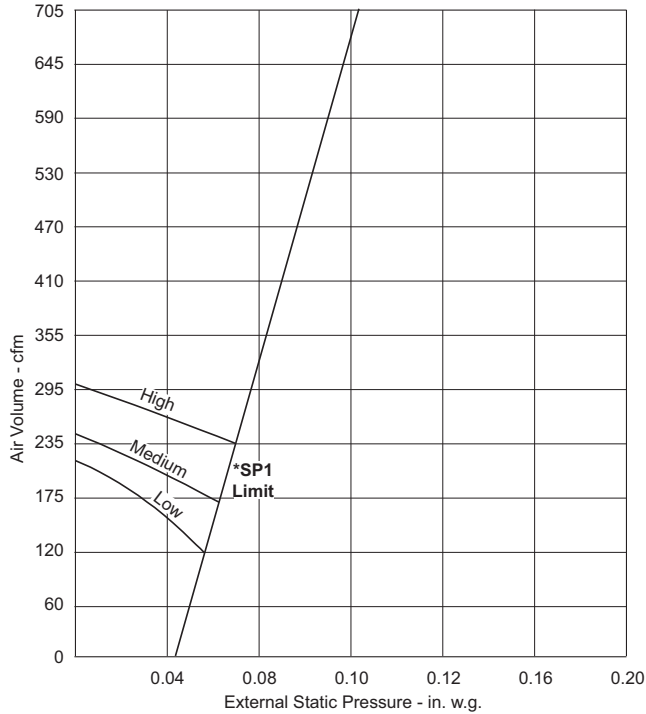
*SP1 Limit airflow rate setting on the controller.
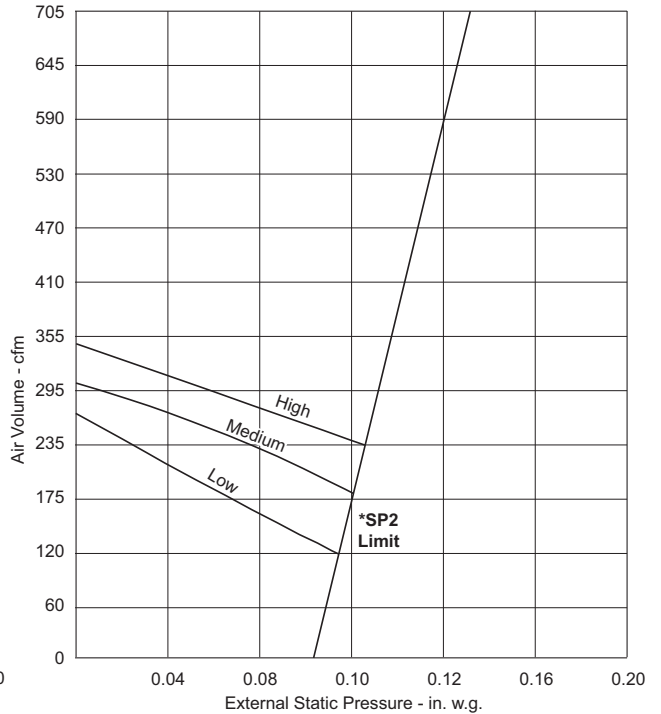
*SP2 Limit airflow rate setting on the controller.
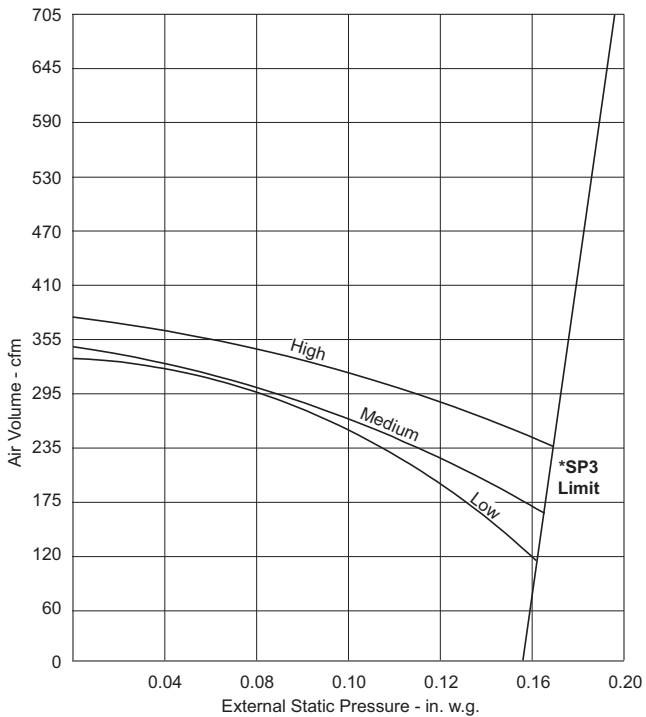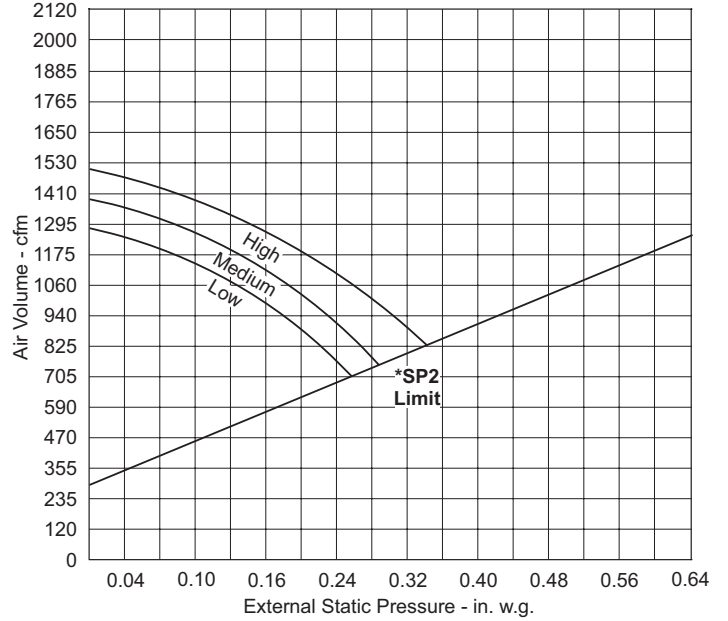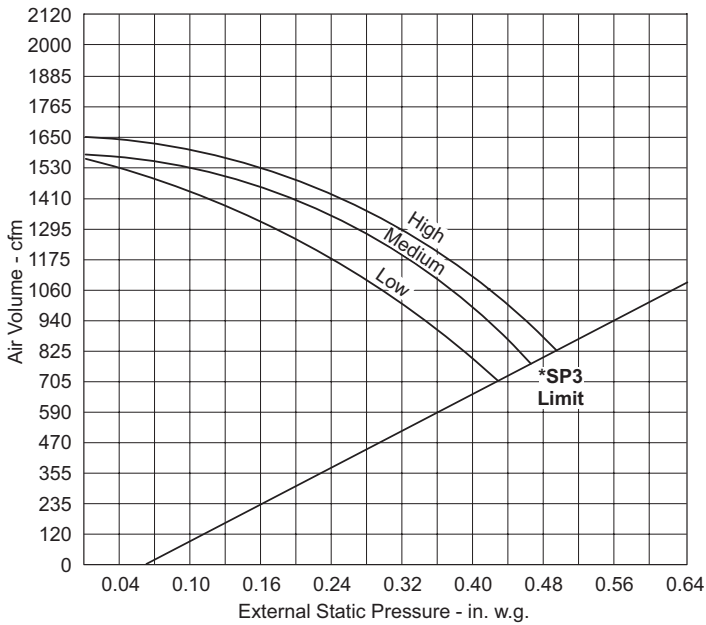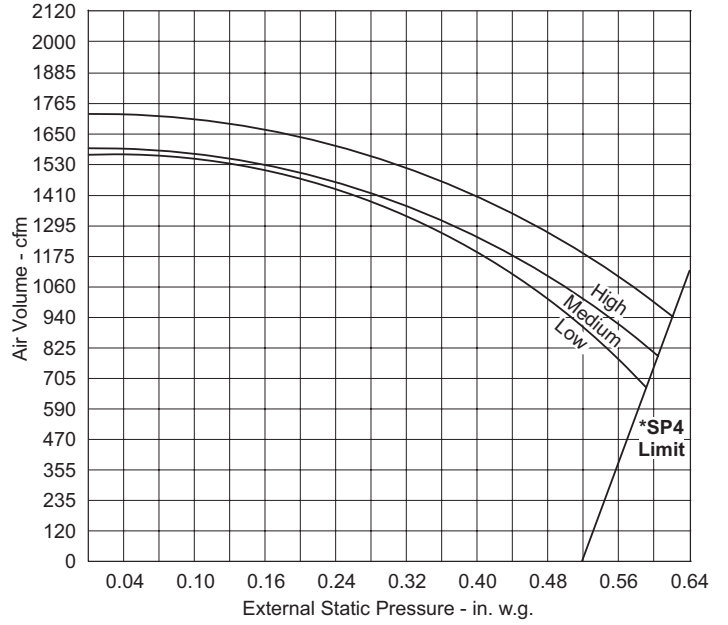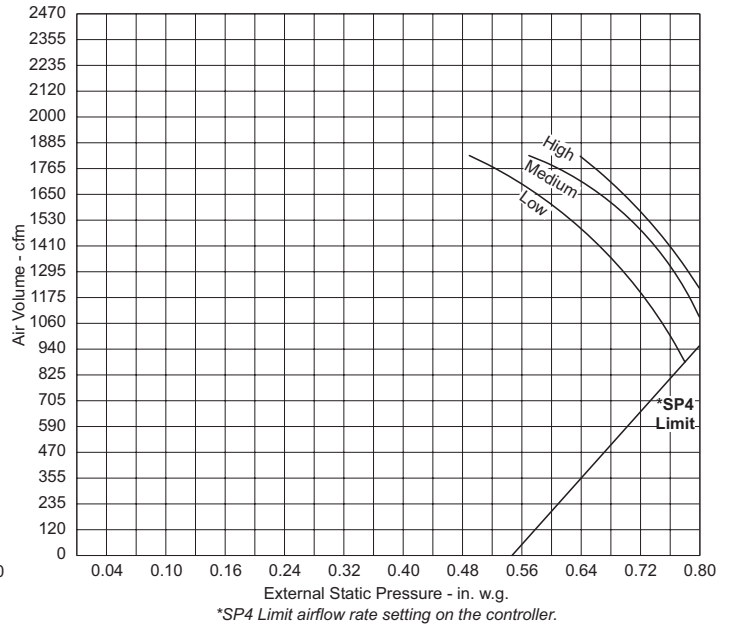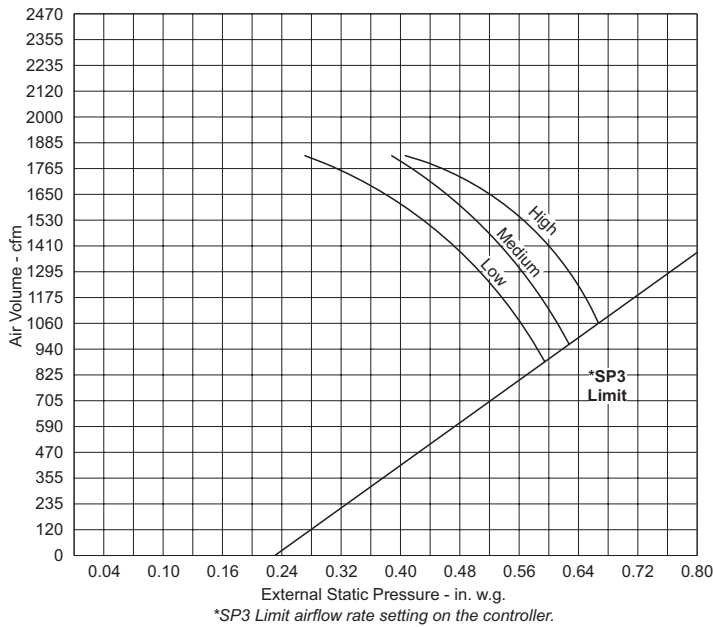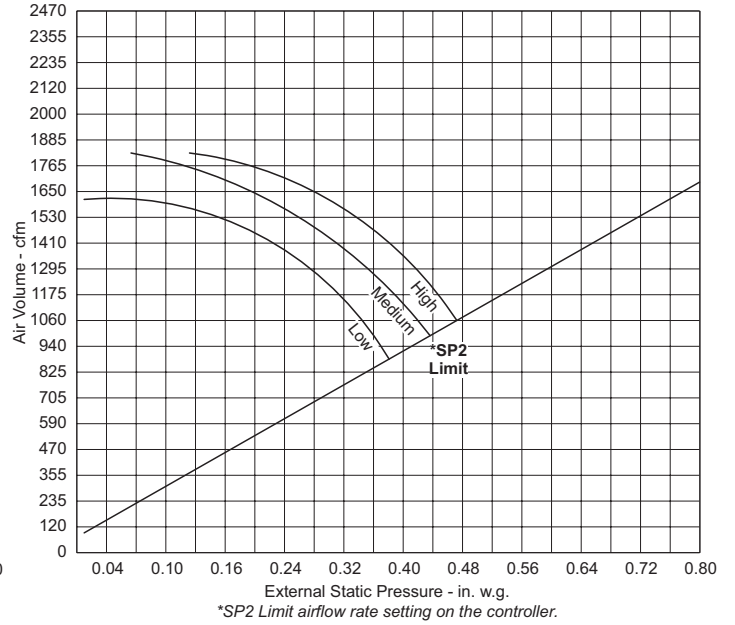
*SP3 Limit airflow rate setting on the controller.
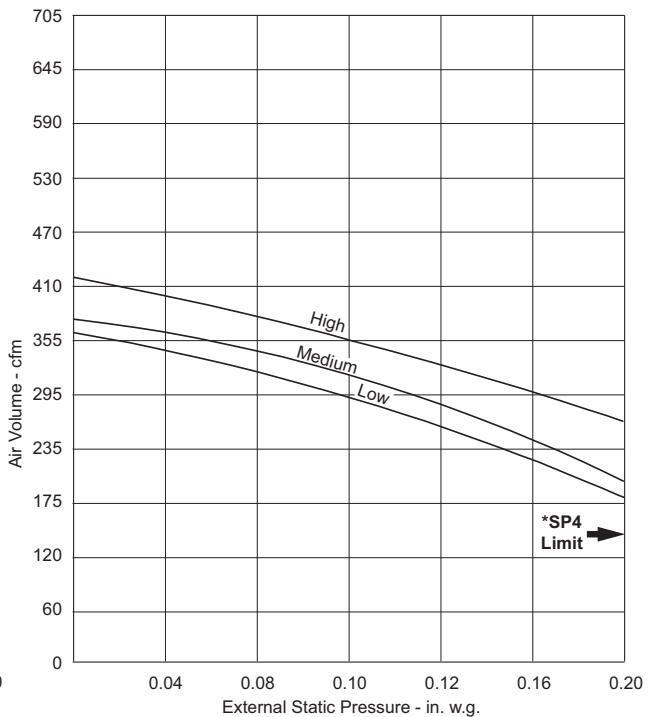
*SP4 Limit airflow rate setting on the controller.

MMDB012S4
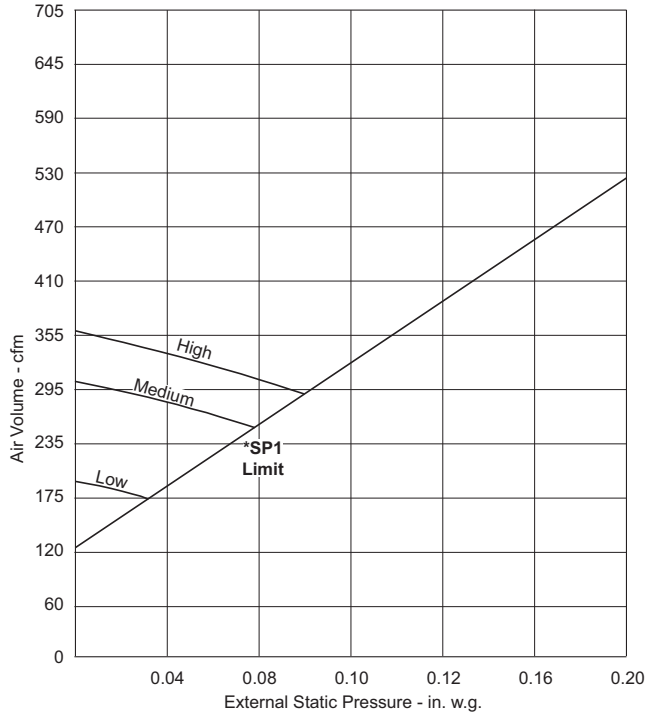
*SP1 Limit airflow rate setting on the controller.
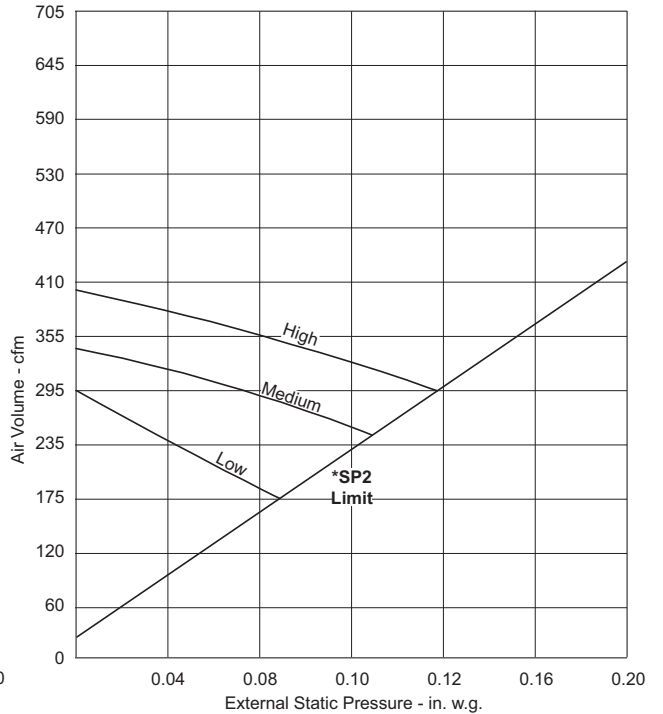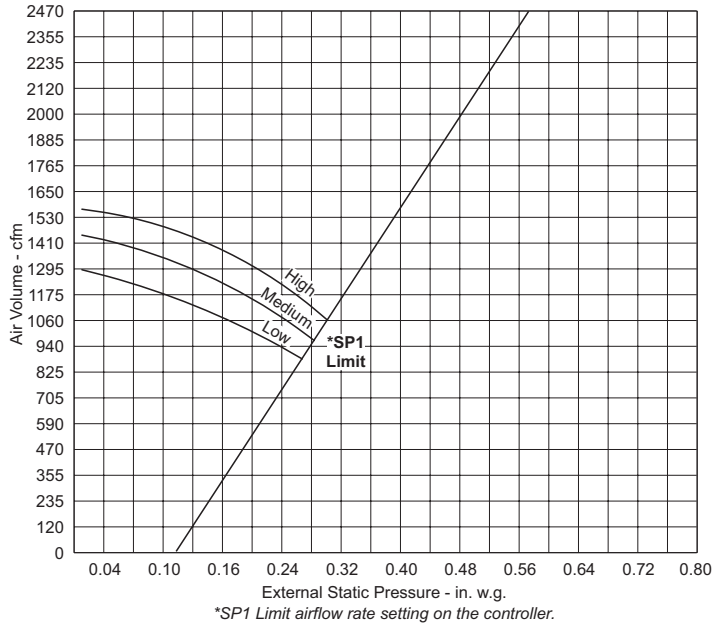

*SP2 Limit airflow rate setting on the controller.
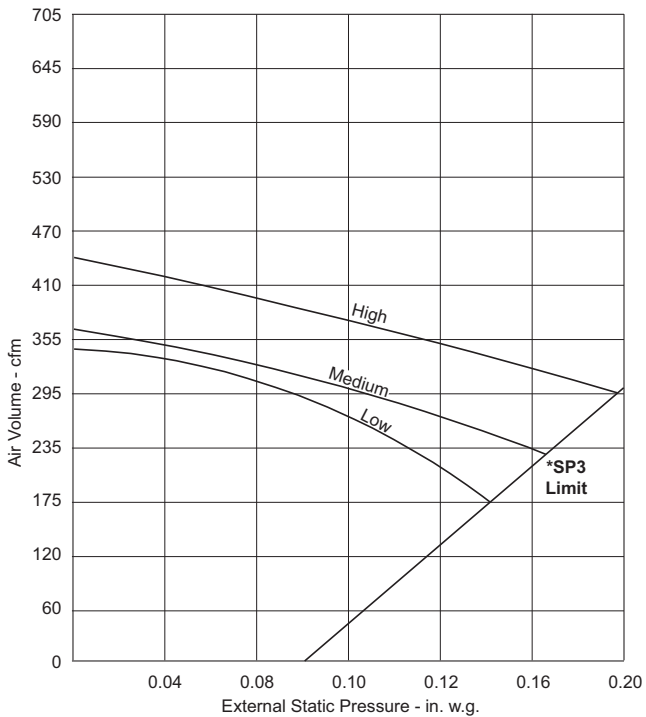
*SP3 Limit airflow rate setting on the controller.
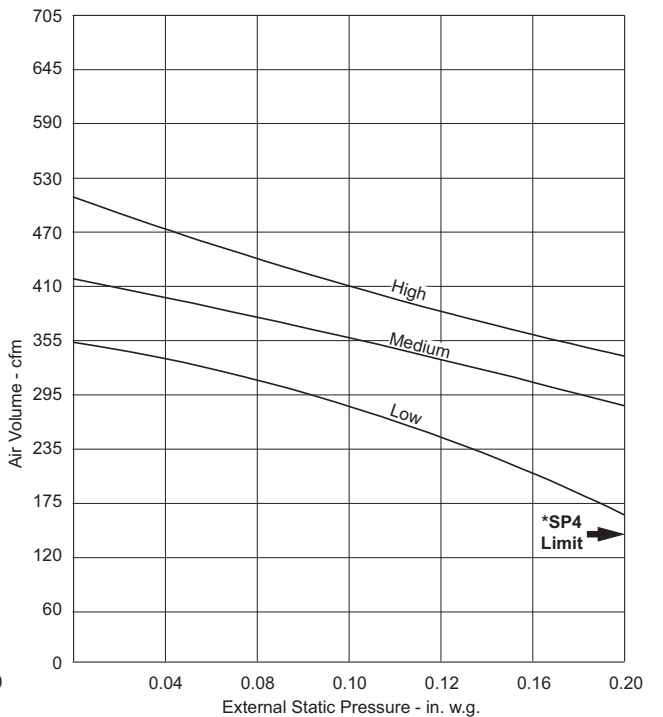
*SP4 Limit airflow rate setting on the controller.

MMDB018S4
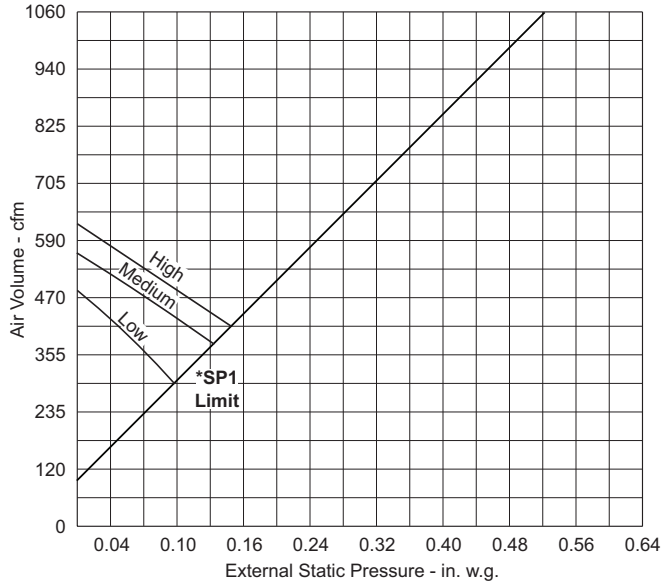
*SP1 Limit airflow rate setting on the controller.
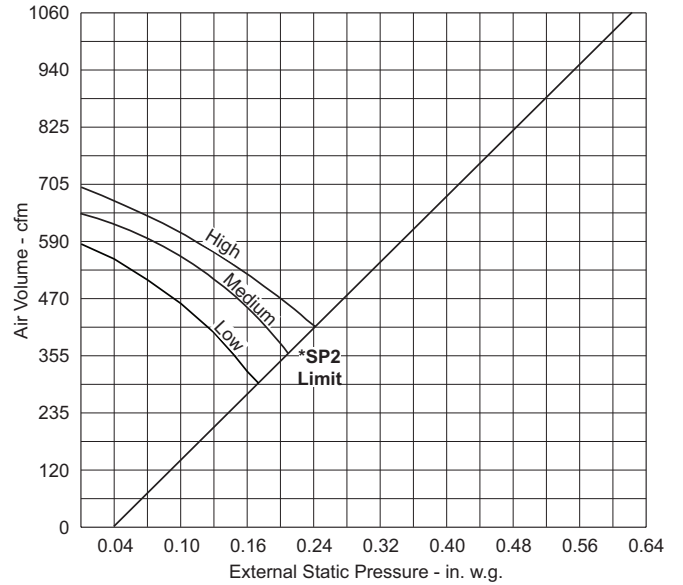
*SP2 Limit airflow rate setting on the controller.
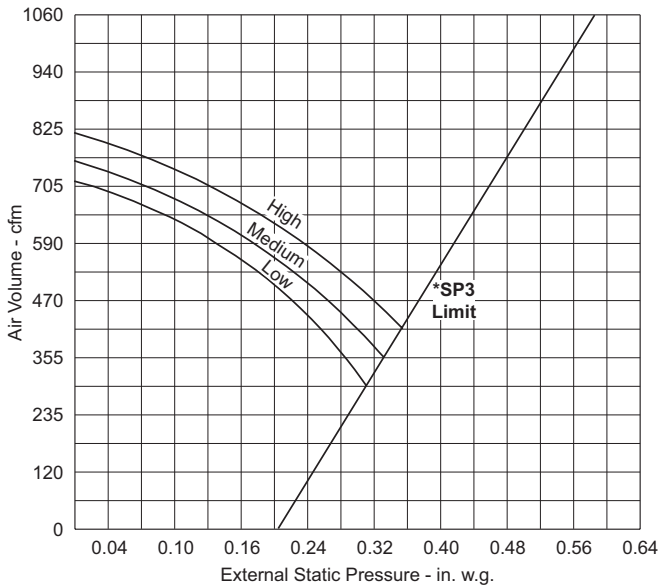
*SP3 Limit airflow rate setting on the controller.
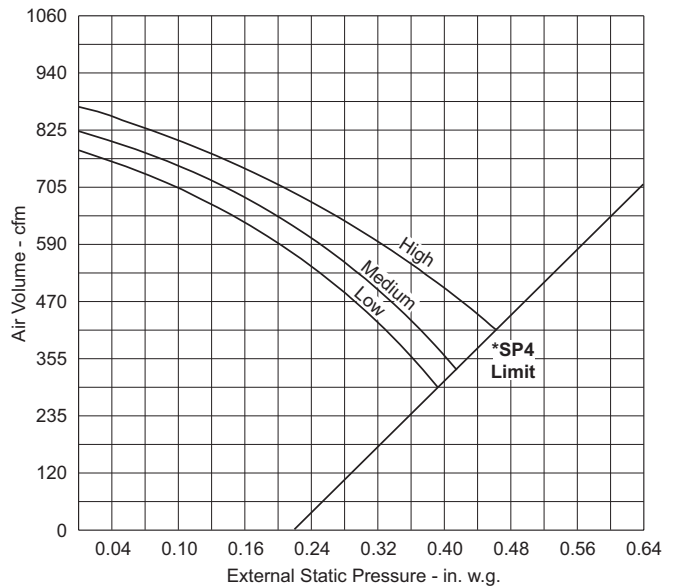
*SP4 Limit airflow rate setting on the controller.

MMDB024S4
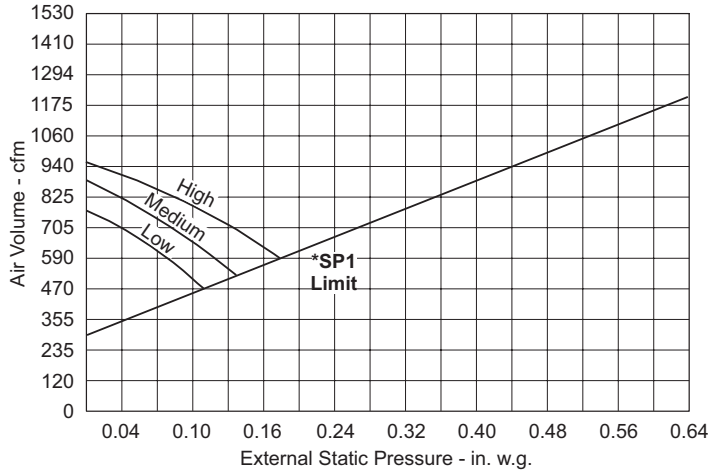
SP1 Limit airflow rate setting on the controller.
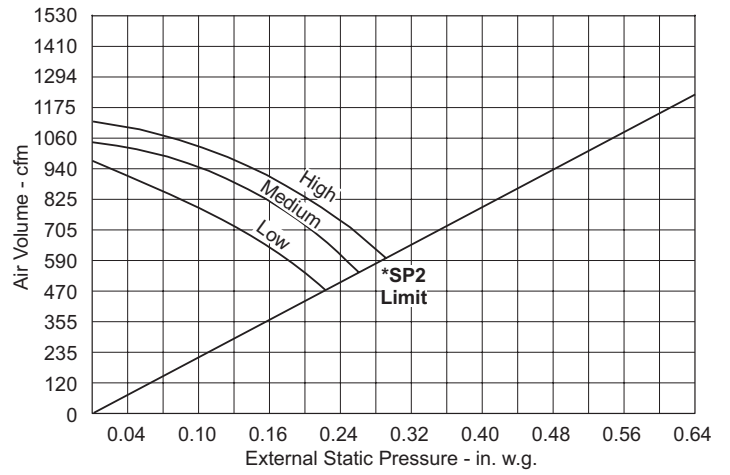
SP2 Limit airflow rate setting on the controller.
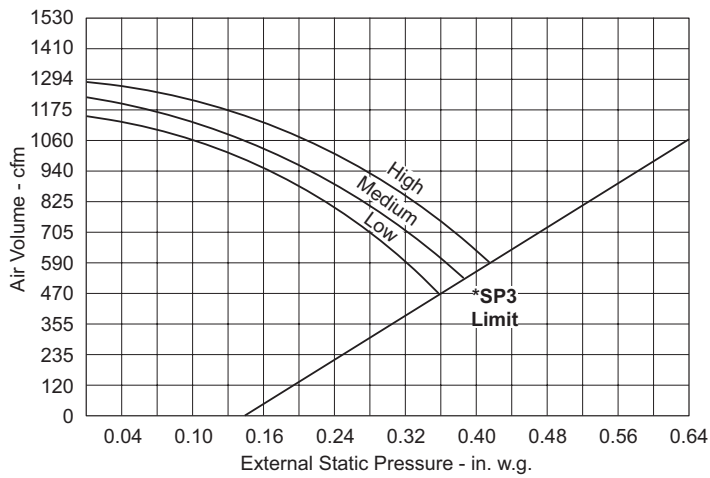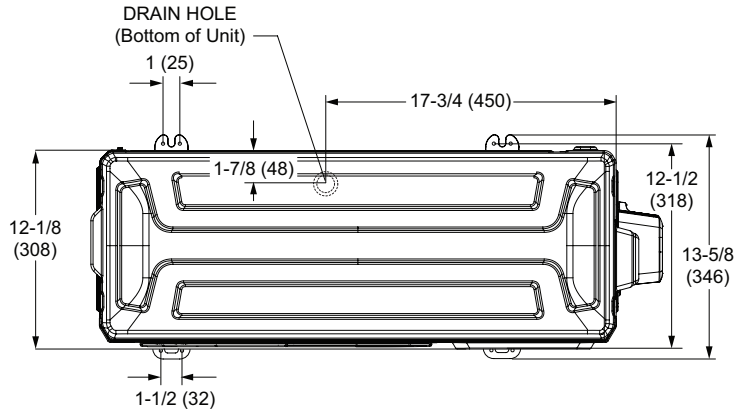

SP3 Limit airflow rate setting on the controller.
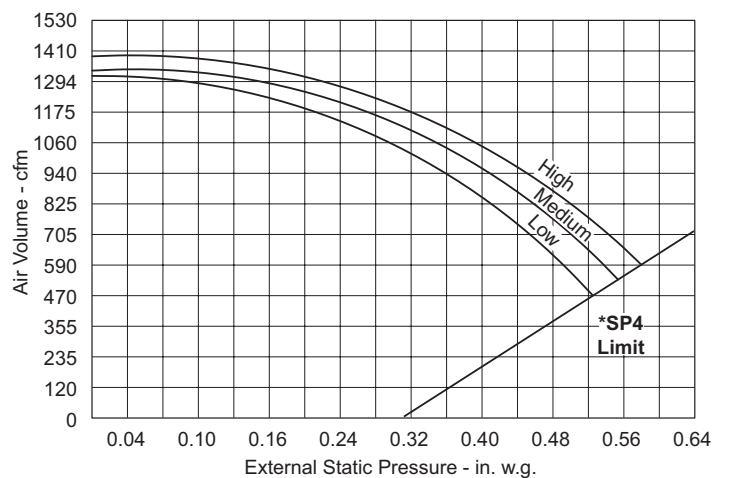
SP4 Limit airflow rate setting on the controller.

MMDB036S4

*SP1 Limit airflow rate setting on the controller.

*SP2 Limit airflow rate setting on the controller.

*SP3 Limit airflow rate setting on the controller.

*SP4 Limit airflow rate setting on the controller.

MMDB048S4

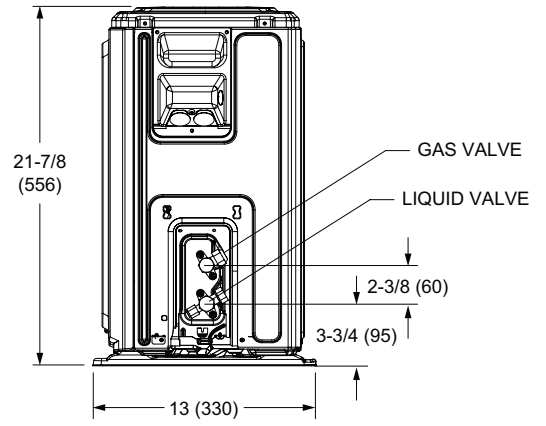*SP1 Limit airflow rate setting on the controller.

*SP2 Limit airflow rate setting on the controller.

*SP3 Limit airflow rate setting on the controller.

*SP4 Limit airflow rate setting on the controller.

MLB009S4S | MLB012S4S

DRAIN HOLE
(Bottom of Unit)

1 (25)

17-3/4 (450)

1-7/8 (48)

12-1/2 (318)

12-1/8 (308)

13-5/8 (346)

1-1/2 (32)

TOP VIEW

32 (813)

20-1/8 (511)
31-3/4 (806)
34-3/8 (873)

FRONT VIEW

21-7/8 (556)

GAS VALVE

LIQUID VALVE

2-3/8 (60)

3-3/4 (95)

13 (330)

SIDE VIEW

MLB018S4S

1/2 (13)

13-3/4
(349)

15
(381)

12-3/4
(324)

2-7/8 (73)

2-7/8 (73)

TOP VIEW

35-1/4 (895)

26-1/8 (664)

35 (889)

37-5/8 955)

FRONT VIEW

26-1/2
(673)

GAS VALVE

LIQUID VALVE

2-3/8 (60)

4-1/4
(108)

13-1/2 (343)

SIDE VIEW

MLB024S4S

DRAIN HOLE
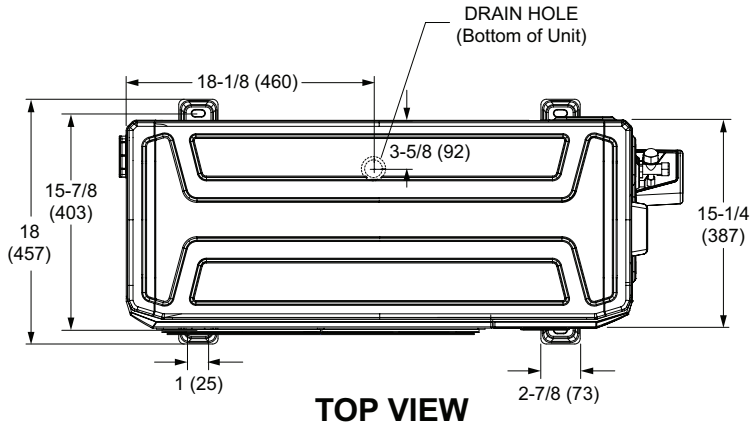(Bottom of Unit)

18-1/8 (460)

3-5/8 (92)

15-7/8
(403)

18
(457)

15-1/4
(387)

1 (25)

2-7/8 (73)

TOP VIEW

40-1/2 (1029)

LENNOX

31-7/8
(810)

GAS VALVE

LIQUID VALVE

2-3/8 (60)

4-1/4
(108)

16-1/8 (410)

SIDE VIEW

26-1/2 (673)

37-1/4 (946)

FRONT VIEW

MLB036S4S | MLB048S4S

27-7/8 (708)

25 (635)

15-7/8 (403)

17-5/8 (448)

3 (76)

TOP VIEW

44-5/8 (1134)

LENNOX

37-1/2 (953)

41-1/8 (1045)

FRONT VIEW

16-3/8 (416)

SIDE VIEW

MWMC009S4 | MWMC012S4 | MWMC018S4 | MWMC024S4

SIDE VIEW

FRONT VIEW

BOTTOM VIEW
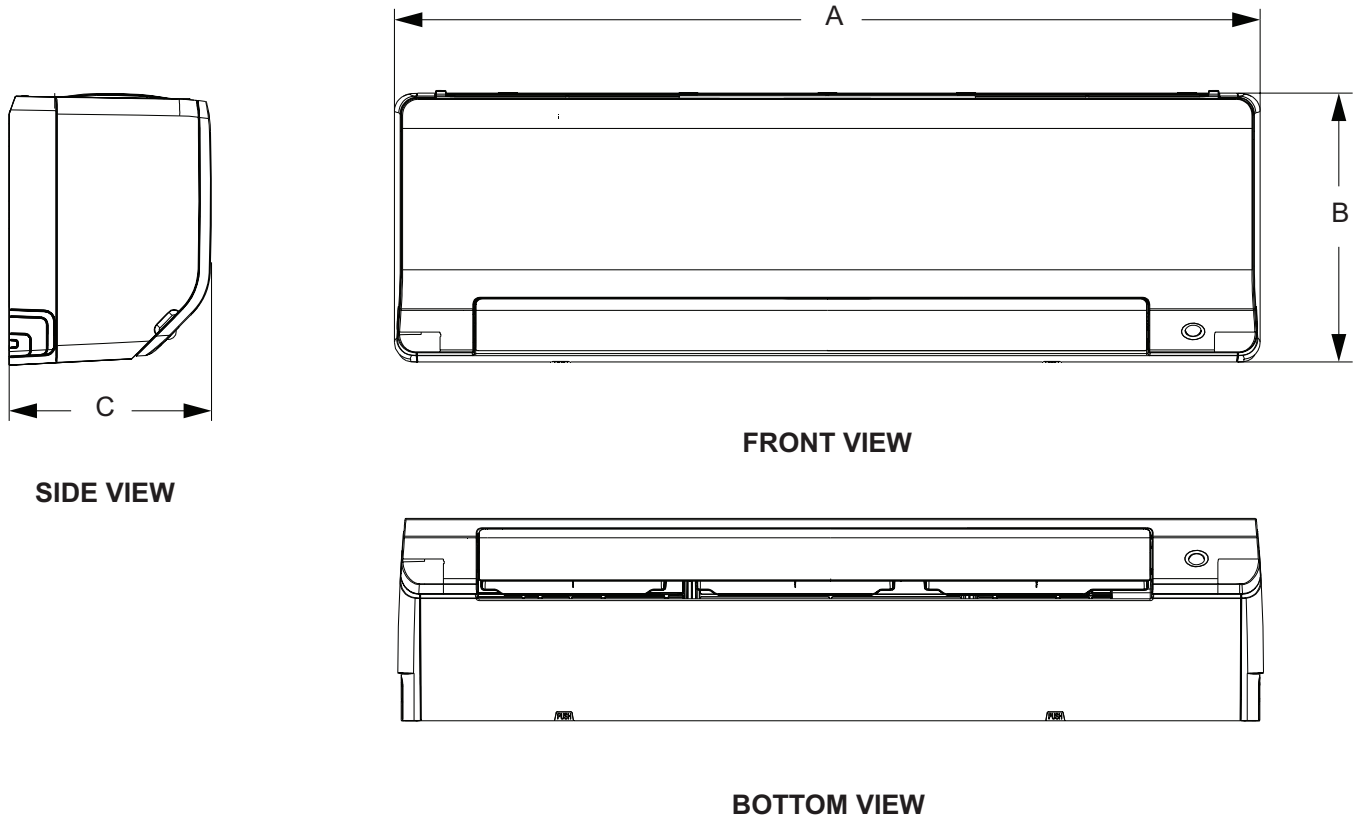
Size	A		B		C	
	in.	mm	in.	mm	in.	mm
MWMC009, 012	33-3/8	848	11-3/4	298	9	229
MWMC018	40	1016	12-1/2	318	9-1/2	241
MWMC024	46-7/8	1191	14-5/8	371	11	279

MWMC009S4 | MWMC012S4

Indoor unit outline

Left rear side
refrigerant pipe inlet
2-1/2 (64) diameter

Right rear side
refrigerant pipe inlet
2-1/2 (64) diameter
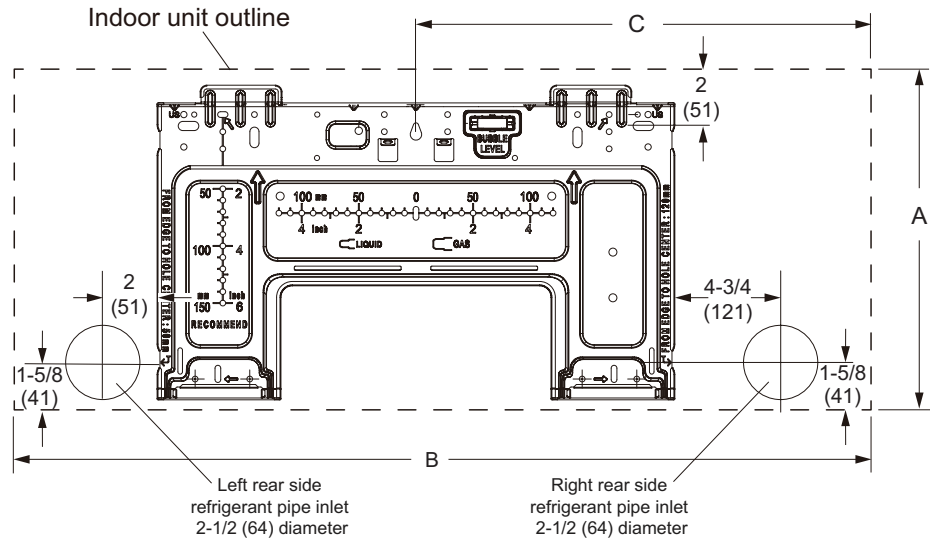
Size	A		B		C	
	in.	mm	in.	mm	in.	mm
MWMC009	11-1/2	290	28-1/2	724	13-3/4	349
MWMC012	11-3/4	297	31-3/4	806	15-7/8	403

MWMC018S4

Indoor unit outline

Left rear side
refrigerant pipe inlet
2-1/2 (64) diameter

Right rear side
refrigerant pipe inlet
2-1/2 (64) diameter

MWMC024S4

Indoor unit outline

Left rear side
refrigerant pipe inlet
2-1/2 (64) diameter

Right rear side
refrigerant pipe inlet
2-1/2 (64) diameter

M22A009S4 | M22A012S4 | M22A018S4

DRAIN
CONNECTION

GAS
PIPE

LIQUID
PIPE

SIDE VIEW

10-3/8
(264)

22-1/2
(572)

20-5/8
(524)

Fresh Air Intake
(NOTE - Not Used)

LEFT SIDE VIEW

21-1/2 (546)

22-1/2 (572)

RIGHT SIDE VIEW

BOTTOM VIEW (Body)

INSTALLATION
HANGERS

LEVELING
ADJUSTMENT
NUT (4)

CEILING

AIR
OUTLET

DIFFUSER
PANEL

AIR
INLET

AIR
OUTLET

23-5/8 (600)
(Ceiling Opening)

SIDE VIEW

25-1/2
(648)

25-1/2 (648)

BOTTOM VIEW (Panel)

M33C024S4 | M33C036S4 | M33C048S4

ELECTRICAL INLET

CONDENSATE PUMP
CONNECTION

HANGING BRACKETS (4)

LIQUID
PIPE

GAS
PIPE

30-3/8 (772)

CONTROL BOX

26-3/8
(670)

26-3/8
(670)

32-5/8
(829)

Fresh Air Intake
(NOTE - Not Used)

A

32-5/8 (829)

LEFT SIDE VIEW

BOTTOM VIEW (Body)

RIGHT SIDE VIEW

DRAIN
CONNECTION

3-7/8
(98)

5-5/8
(143)

4
(102)

5-1/2
(139)

AIR
OUTLET

DIFFUSER
PANEL

AIR
INLET

AIR
OUTLET
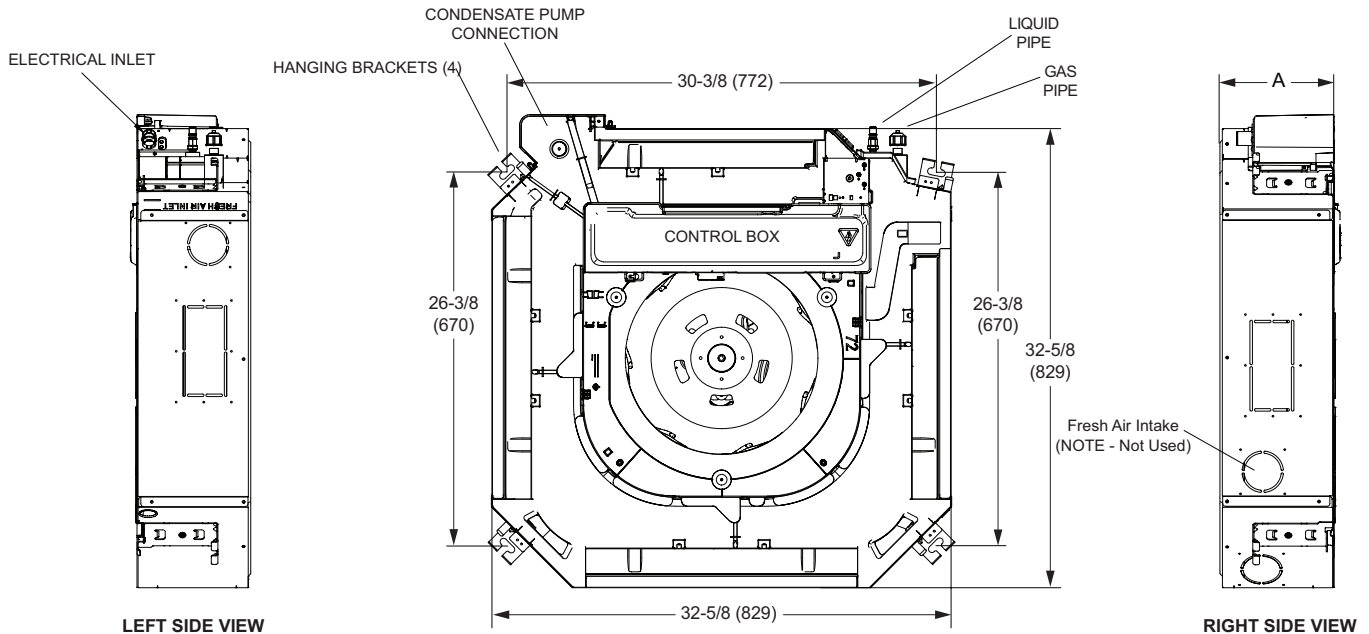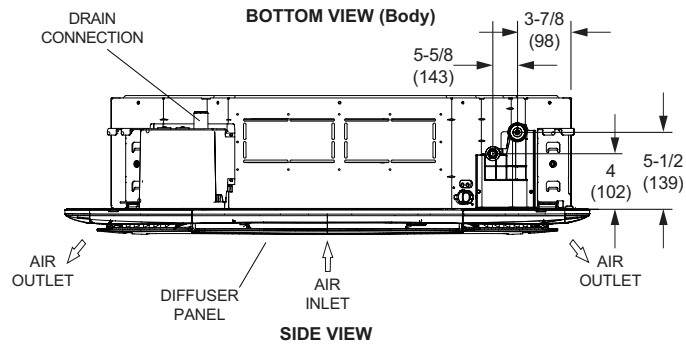
SIDE VIEW
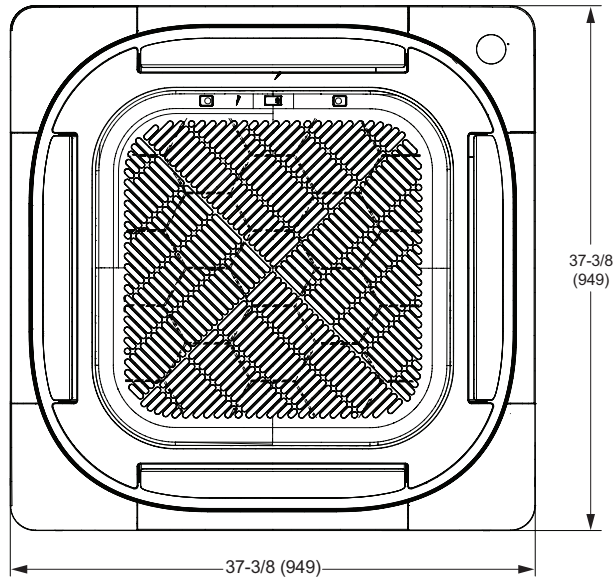
Size	A	
	in.	mm
024	8-1/8	206
036	9-5/8	244
048	11-1/4	286

37-3/8
(949)

37-3/8 (949)

BOTTOM VIEW (Panel)

MCFB018S4 | MCFA024S4 | MCFA036S4 | MCFA048S4

26-5/8 (676)

9-1/4 (235)

SIDE VIEW

FRONT VIEW

Refrigerant Piping

2-3/8 (61)

Refrigerant Piping Opening
3-1/2 x 7-1/4 (89 x 184)

3-1/2 (89)

B

A

8-3/4 (222)

BACK VIEW

2 (51)

Refrigerant Piping

2-1/4 (57)

Condensate Drain Outlets (2) each side

BOTTOM VIEW

Refrigerant Piping Opening
4-3/4 x 5-1/2 (121 x 140)
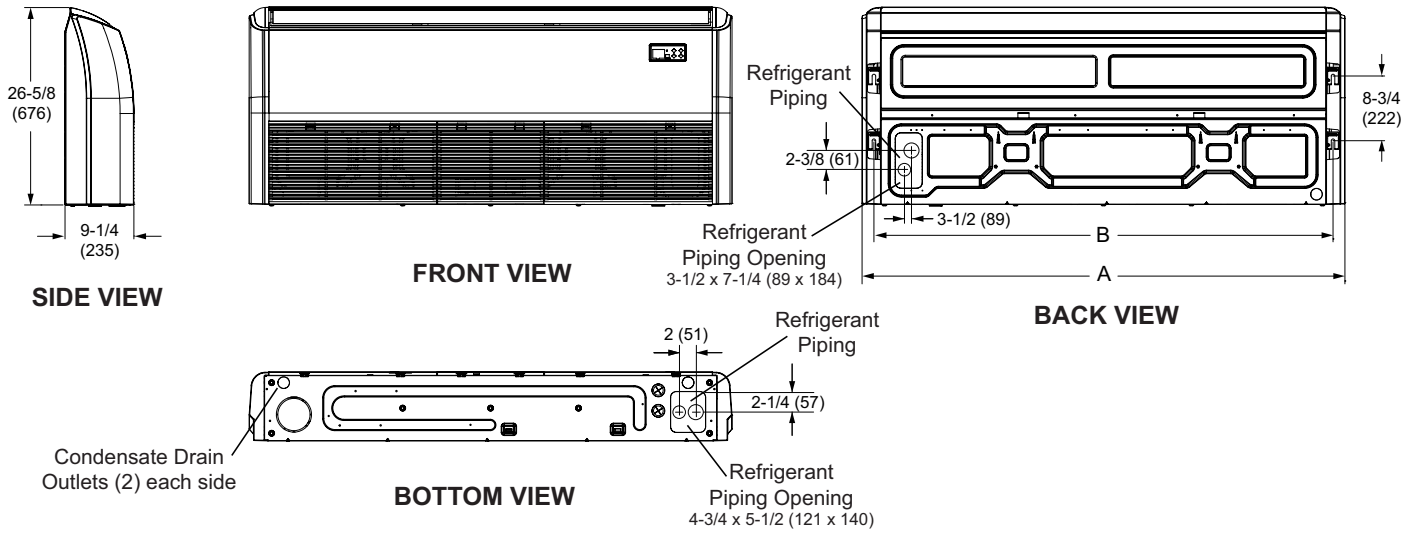
Model No.	A		B	
	in.	mm	in.	mm
018	42	1067	37	940
024	42-1/8	1070	39	991
036	50-5/8	1286	47-3/8	1203
048	65	1651	61-3/4	1568

MFMA012S4

MFMA012S4

8-1/4 (210)

27-1/2 (699)

7-11/16 (195)

23-5/8 (600)

Hanging Brackets (2)

SIDE VIEW

Refrigerant Piping

FRONT VIEW

Condensate Drain Outlet

BACK VIEW
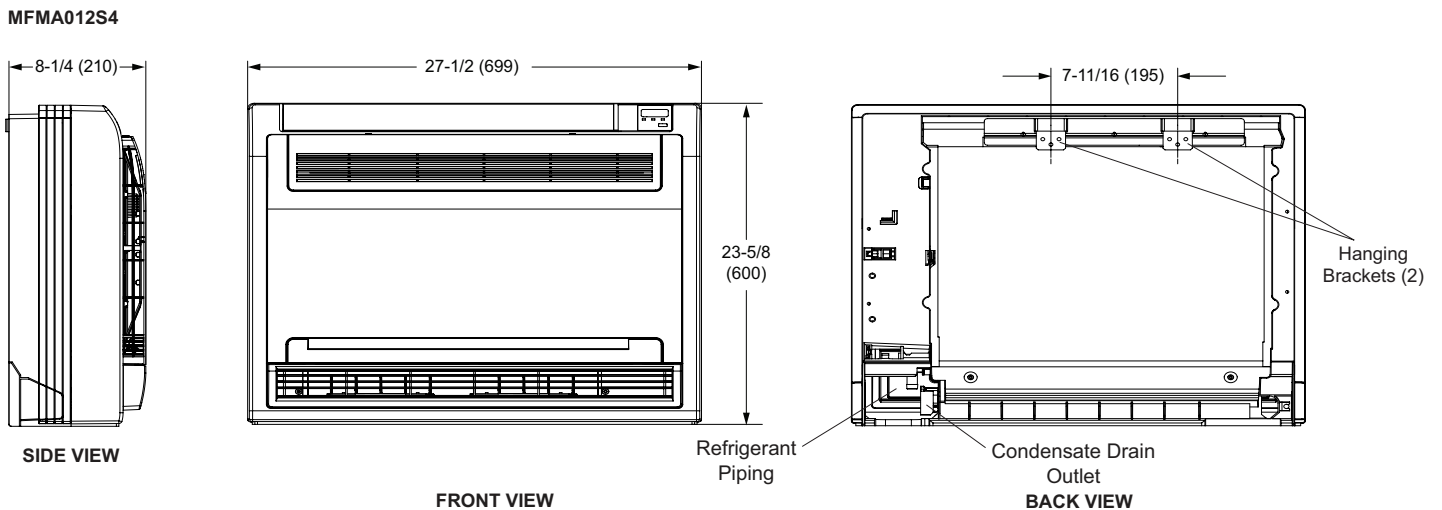
MMDB009S4 | MMDB012S4 | MMDB018S4 | MMDB024S4 | MMDB036S4 | MMDB048S4

MOUNTING LUGS (4)

ELECTRICAL CONTROL BOX

P

N

TOP VIEW

[1] FRESH AIR INTAKE
3-5/8 (92) Diameter (009 thru 018)
5 (127) Diameter (024 thru 048)

MOUNTING LUGS (4)

D
C

SIDE VIEW

[1] NOTE - Outdoor air enters unit AFTER air filter.

E
SUPPLY AIR OPENING
J
H
B
G
F
A

FRONT VIEW

LIQUID PIPE
GAS PIPE
CONVENTIONAL DRAIN CONNECTION
CONDENSATE PUMP DRAIN CONNECTION
AIR FILTER
ELECTRICAL CONTROL BOX

CONVENTIONAL DRAIN CONNECTION
(Alternate Location)

OPTIONAL BOTTOM RETURN AIR OPENING

M

BOTTOM VIEW

RETURN AIR OPENING

L

K

AIR FILTER

REAR VIEW

Size	A		B		C		D		E		F		G		H	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
009 thru 012	27-5/8	702	7-7/8	200	19-7/8	505	17-3/4	451	30-3/4	781	5-3/8	137	21-1/8	537	1-1/8	29
018	34-5/8	879	8-1/4	210	26-1/2	673	23-5/8	600	37-7/8	962	5-1/2	140	27-3/4	705	2	51
024	43-1/4	1099	9-3/4	248	30-1/2	775	27-1/2	699	46-1/2	1181	5-1/2	140	36-1/2	927	2	51
036	53-1/2	1359	9-3/4	249	30-1/2	775	27-1/2	699	56-3/4	1441	5-1/2	140	46-3/4	1187	2	51
048	47-1/4	1200	11-7/8	302	34-3/8	873	31-1/2	800	50-1/2	1283	4-7/8	124	41-1/8	1045	2	51

Size	J		K		L		M		N		P	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
009 thru 012	6	152	23-5/8	600	7-3/8	187	2	51	29-1/8	740	14-1/8	359
018	5-3/8	137	30-3/4	781	7-1/2	191	1-5/8	41	36-1/4	921	20	508
024	6-7/8	175	39-3/8	1000	9	229	1/4	6	44-7/8	1140	23-1/2	597
036	6-7/8	175	49-5/8	1260	9	229	1/4	6	55-1/8	1400	23-1/2	597
048	9	229	43-3/8	1102	11	279	1/4	6	48-7/8	1241	27-1/2	699

24 (610)

12 (305)

24 (610)

Air Inlet

[1] 12 (305)

79 (2007)

Air Outlet
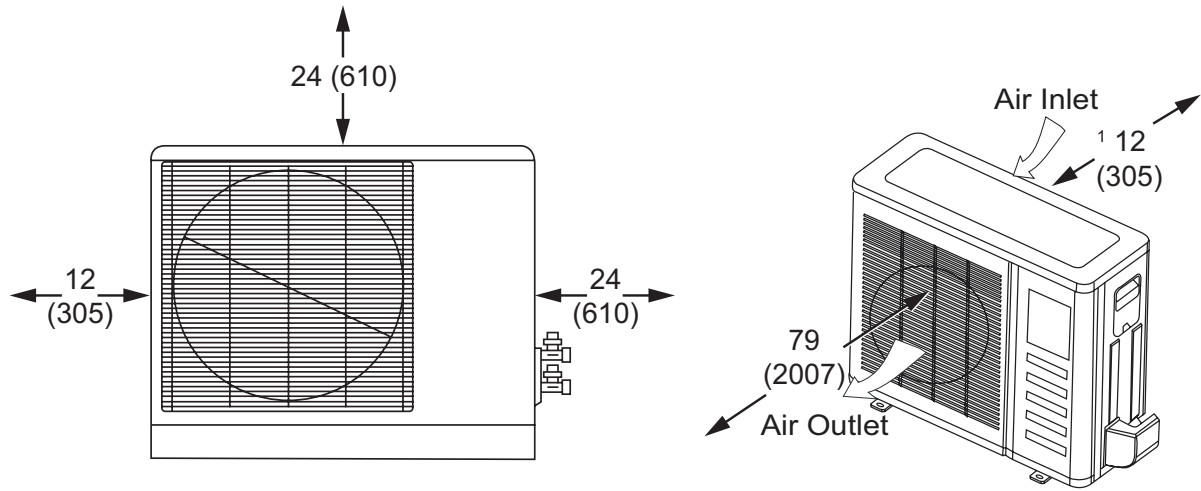
[1] Minimum rear clearance can be 6 inches (152 mm) when mounted on brackets and with no obstructions on the other three sides.

Height of Wall (C)

Unit to Wall (B)

AIR FLOW

118 (2997) (Minimum)

10 (254) (Minimum)

10 (254) (Minimum)

24 (610) (Minimum)

AIR FLOW

Unit Height (A)

60 (1500) (Minimum)
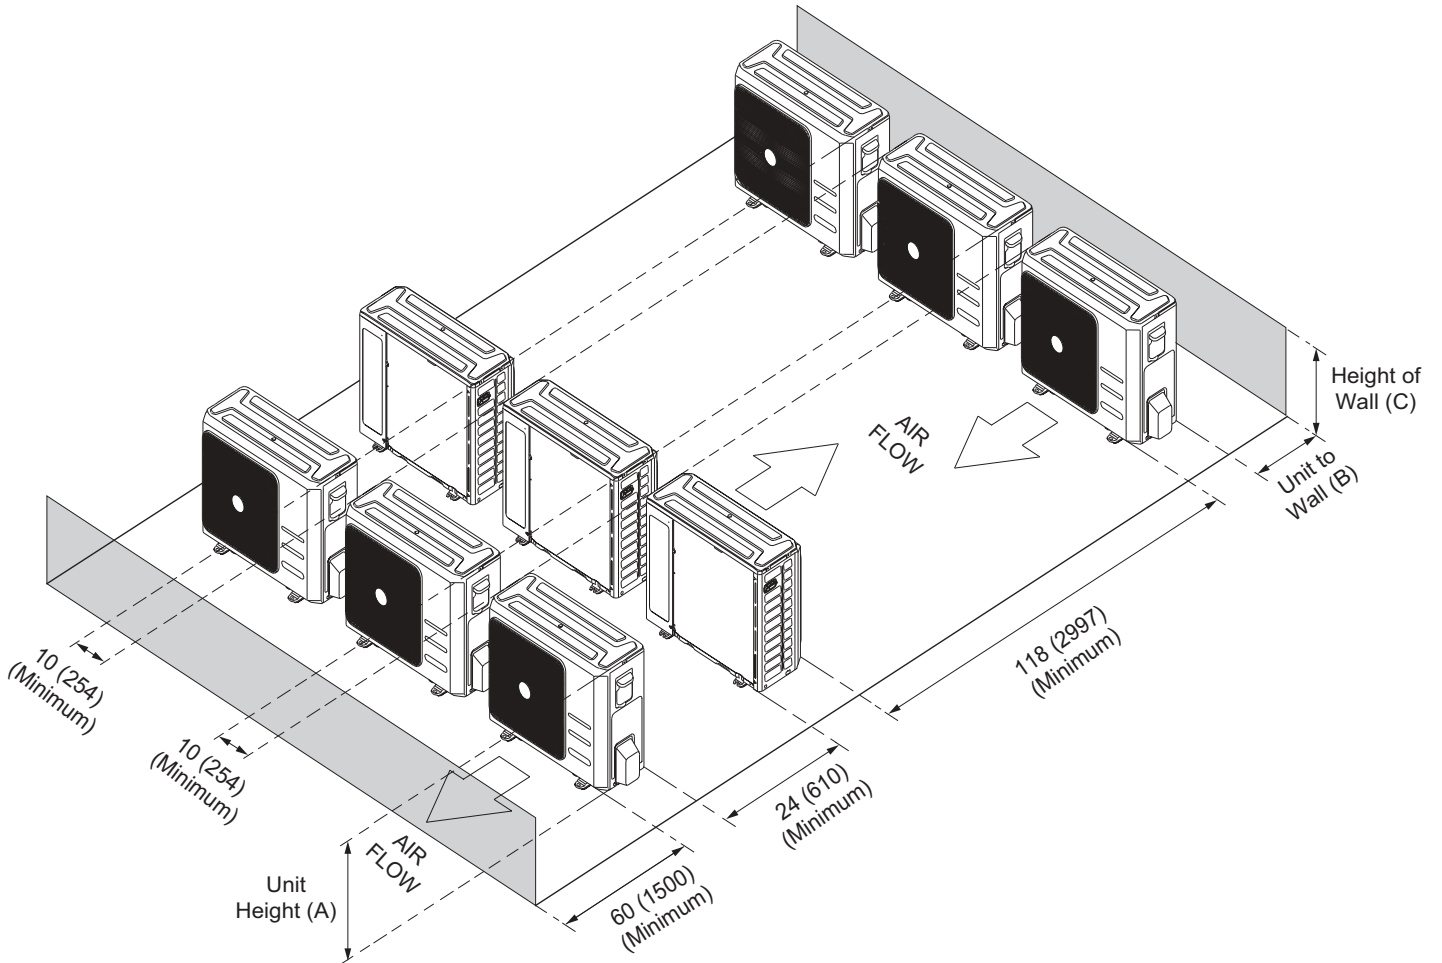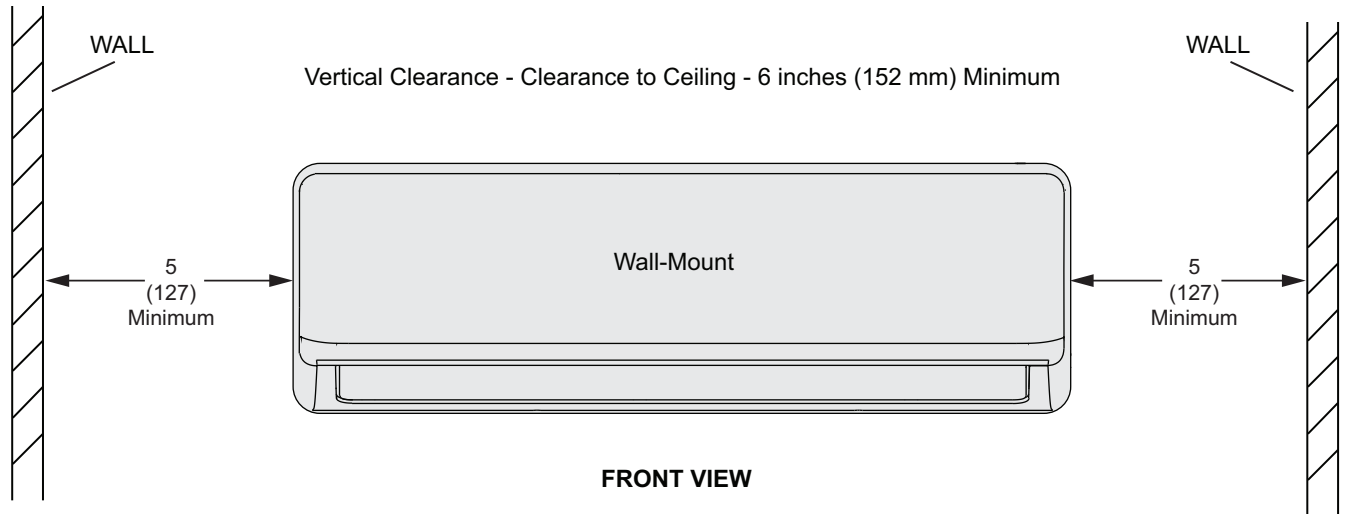
CLEARANCE NOTES FOR MULTIPLE UNITS:

If the height of the wall (C) is less than or equal to the height of the smallest unit (A), the distance from the unit to the wall (B) must be a minimum of 10 inches (254 mm).

If 1/2 the height of the unit (A) is less than the height of the wall (C), the distance from the unit to the wall (B) must be a minimum of 12 inches (305 mm).

If the height of the wall (C) is greater than the height of the unit (A), the distance from the unit to the wall (B) must be a minimum of 20 inches (508 mm).
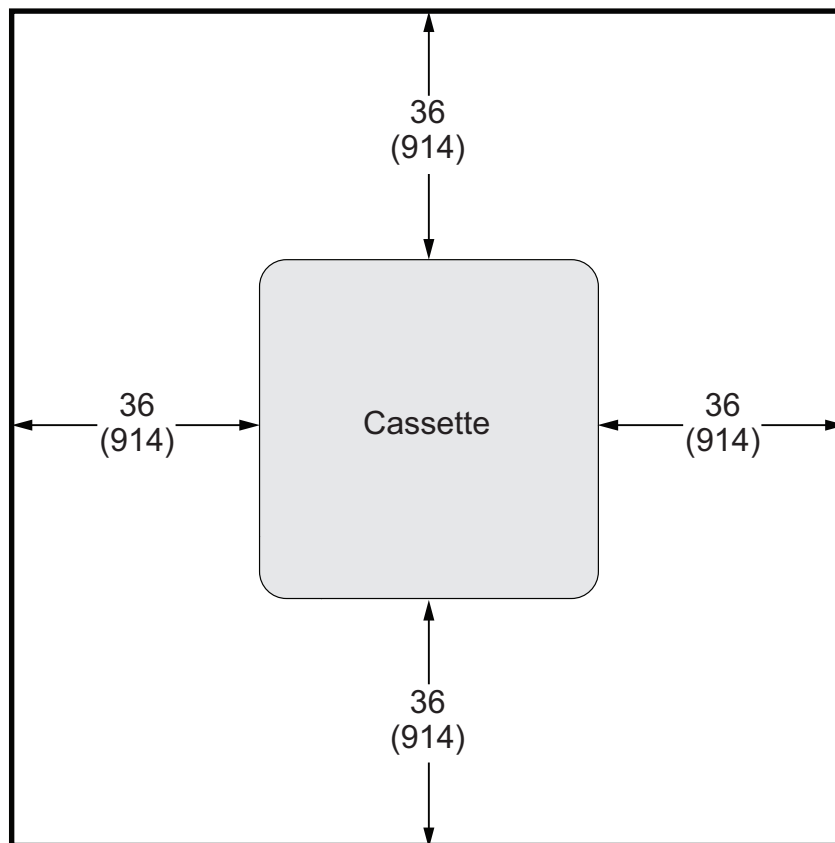
WALL

WALL

Vertical Clearance - Clearance to Ceiling - 6 inches (152 mm) Minimum

Wall-Mount

5
(127)
Minimum

5
(127)
Minimum

FRONT VIEW

Vertical Clearance - Clearance to Floor - 72 inches (1829 mm) Minimum
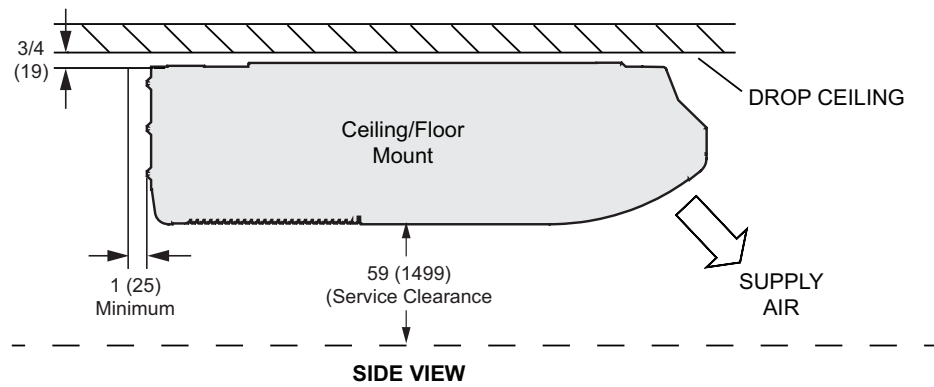NOTE - Provide 96 inches (2438) clearance to floor for best performance

36
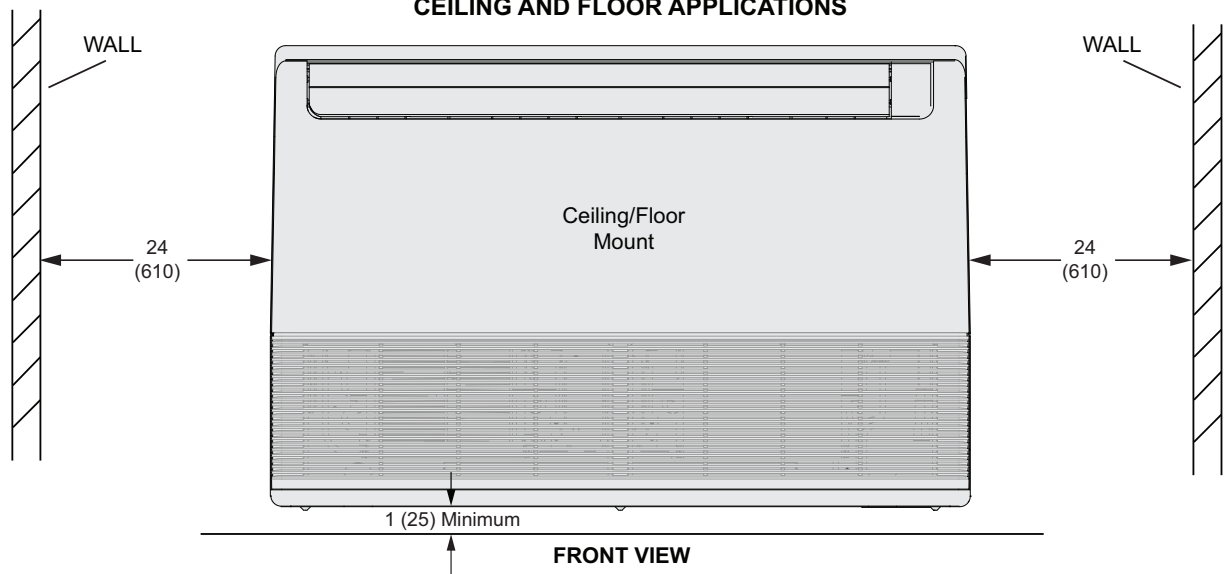(914)

36
(914)

Cassette

36
(914)

36
(914)

Minimum Vertical Clearances:
      Minimum Clearance from Structural Ceiling to Drop Ceiling - 10-1/4 inches (260 mm)
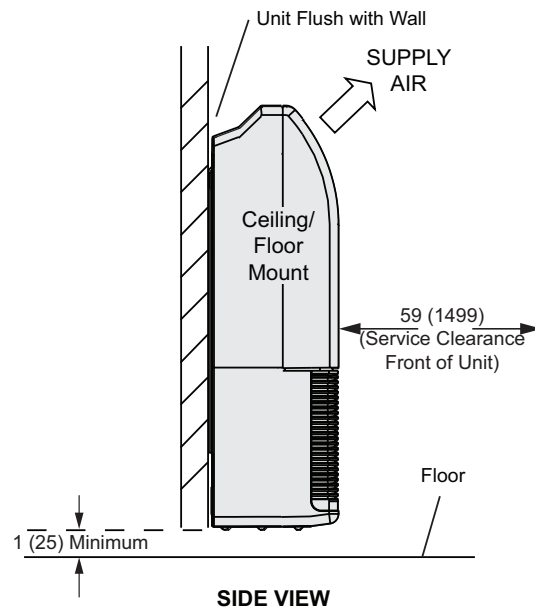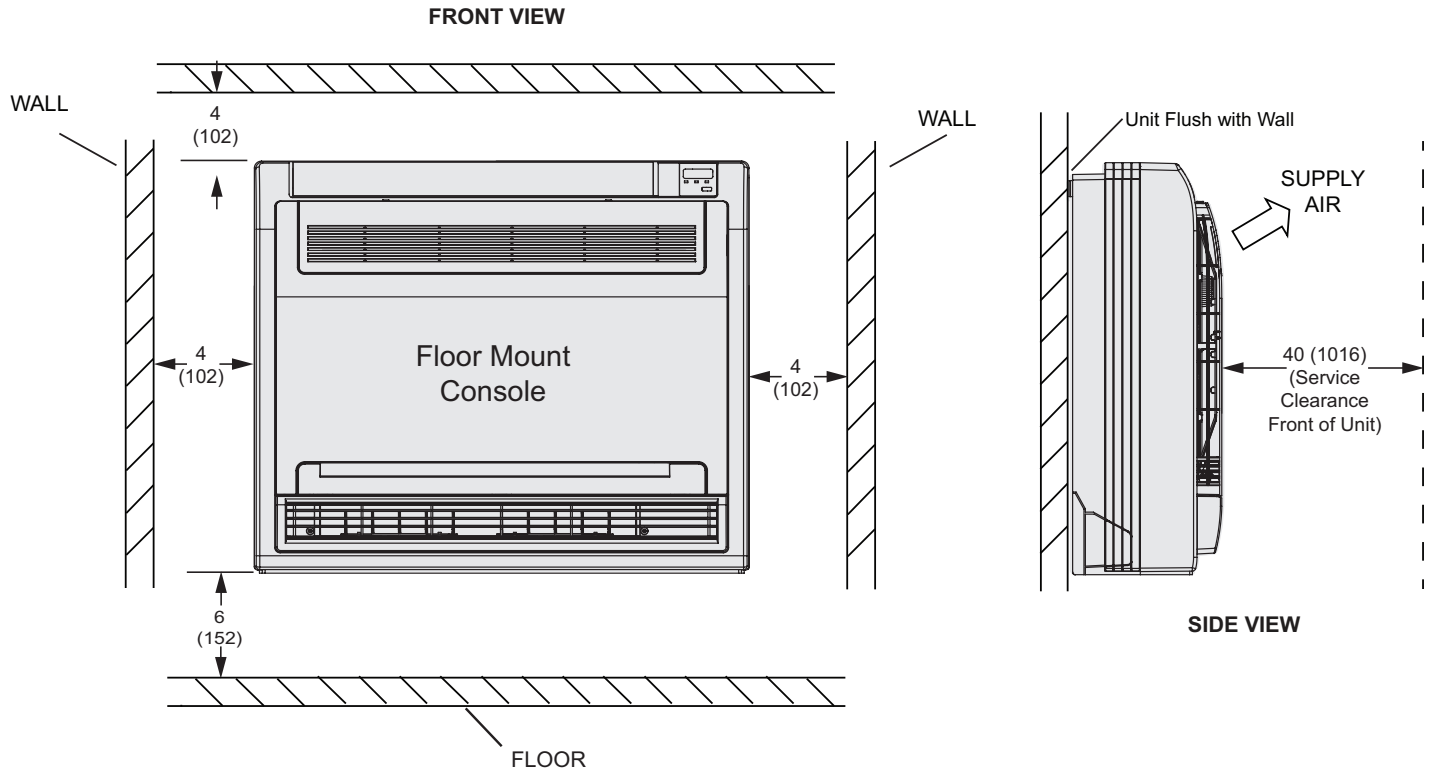   Minimum Clearance to Floor - 98-1/2 inches (2500 mm)

CEILING APPLICATIONS

3/4
(19)

DROP CEILING

Ceiling/Floor
Mount

1 (25)
Minimum

59 (1499)
(Service Clearance

SUPPLY
AIR

SIDE VIEW

CEILING AND FLOOR APPLICATIONS

WALL

WALL

Ceiling/Floor
Mount

24
(610)

24
(610)

1 (25) Minimum

FRONT VIEW

FLOOR APPLICATIONS

Unit Flush with Wall

SUPPLY
AIR

Ceiling/
Floor
Mount

59 (1499)
(Service Clearance
Front of Unit)

Floor

1 (25) Minimum

SIDE VIEW

FRONT VIEW

WALL

WALL

4
(102)

4
(102)

Floor Mount
Console

4
(102)

6
(152)

FLOOR

Unit Flush with Wall

SUPPLY
AIR

40 (1016)
(Service
Clearance
Front of Unit)

SIDE VIEW

Wall

20 (508) Minimum Service Clearance (rear)

Air

Flow

MEDIUM STATIC DUCTED UNIT

* See footnote

24 (610) Minimum Service Clearance (front)

Wall

24 (610) Minimum Service Clearance

TOP VIEW

Ceiling

1 (25) Minimum Clearance (top)

MEDIUM STATIC DUCTED UNIT

* 1 (25) Minimum Clearance (bottom)

Suspended Ceiling
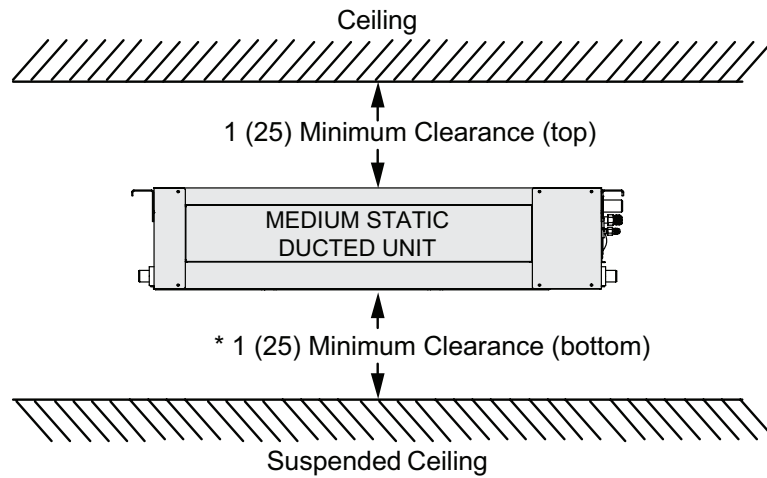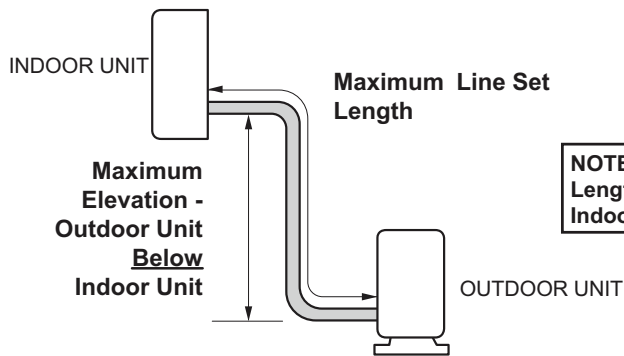
* NOTE - Bottom unit clearance can be 1 inch (25 mm), but allow 12 inches for filter removal on end return air applications
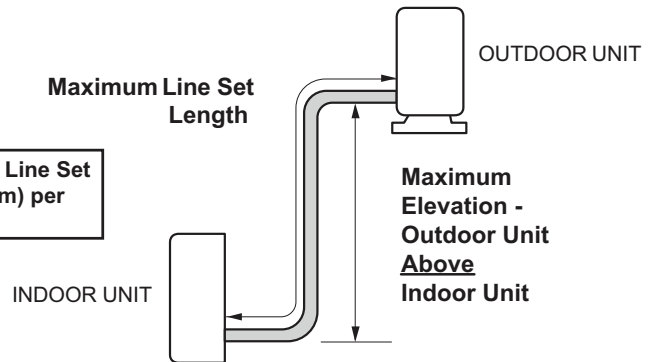
FRONT VIEW

LINE SET AND ELEVATION GUIDELINES

Outdoor Unit BELOW Indoor Unit

INDOOR UNIT

Maximum Line Set Length

Maximum Elevation - Outdoor Unit Below Indoor Unit

OUTDOOR UNIT

NOTE - Minimum Line Set Length - 10 ft. (3 m) per Indoor Unit

Outdoor Unit ABOVE Indoor Unit

OUTDOOR UNIT

Maximum Line Set Length

Maximum Elevation - Outdoor Unit Above Indoor Unit

INDOOR UNIT

Size	Line Set Diameters (in.)		Maximum Elevation - Outdoor Unit Below Indoor Unit ft. (m)	Maximum Elevation - Outdoor Unit Above Indoor Unit ft. (m)	Maximum Line Set Length ft. (m)
	Liquid	Gas			
009	1/4	3/8	66 ft. (20 m)	66 ft. (20 m)	98 ft. (30 m)
012	1/4	1/2	66 ft. (20 m)	66 ft. (20 m)	98 ft. (30 m)
018	1/4	1/2	66 ft. (20 m)	66 ft. (20 m)	98 ft. (30 m)
024	3/8	5/8	82 ft. (25 m)	82 ft. (25 m)	164 ft. (50 m)
036, 048	3/8	5/8	98 ft. (30 m)	98 ft. (30 m)	213 ft. (65 m)

REVISIONS

Sections	Description of Change
AHRI Ratings	Updated Energy Star Cerification.

AHRI CERTIFIED™
C
www.ahridirectory.org
Unitary Small HP
AHRI Standard 210/240
Certification applies only when the complete system
is listed with AHRI.

HRAI
✓MEMBER COMPANY

C ETL US
LISTED
CM
Intertek

LENNOX®

Visit us at www.Lennox.com

For the latest technical information, www.LennoxPros.com

Contact us at 1-800-9-LENNOX