

## KGA/KCA072 All-Aluminum Coil Refrigerant Charge and Check

**WARNING-Do not exceed nameplate charge under any condition.**

This unit is factory charged and should require no further adjustment. If the system requires additional refrigerant, reclaim the charge, evacuate the system, and add required nameplate charge.

**NOTE - System charging is not recommended below 60°F (15°C). In temperatures below 60°F (15°C), the charge *must* be weighed into the system.**

If weighing facilities are not available, or to check the charge, use the following procedure:

1-Make sure outdoor coil is clean. Attach gauge manifolds and operate unit at full CFM in cooling mode with economizer disabled until system stabilizes (approximately five minutes). Make sure all outdoor air dampers are closed.

2-Compare the normal operating pressures to the pressures obtained from the gauges. Check unit components if there are significant differences.

3-Measure the outdoor ambient temperature and the suction pressure. Refer to the charging curve to determine a target liquid temperature.

*Note - Pressures are listed for sea level applications.*

4-Use the same thermometer to accurately measure the liquid temperature (in the outdoor section).


- If measured liquid temperature is higher than the target liquid temperature, add refrigerant to the system.
- If measured liquid temperature is lower than the target liquid temperature, recover some refrigerant from the system.

5-Add or remove charge in increments. Allow the system to stabilize each time refrigerant is added or removed.

6-Continue the process until measured liquid temperature agrees with the target liquid temperature. Do not go below the target liquid temperature when adjusting charge. Note that suction pressure can change as charge is adjusted.

7-Example: At 95°F outdoor ambient and a measured suction pressure of 130psig, the target liquid temperature is 107°F. For a measured liquid temperature of 110°F, add charge in increments until measured liquid temperature agrees with the target liquid temperature.

Normal Operating Pressures											
Outdoor Coil Entering Air Temperature											
65 °F		75 °F		85 °F		95 °F		105 °F		115 °F	
Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)
106	250	111	288	115	329	118	375	121	428	124	482
110	256	116	295	122	338	126	383	129	434	132	490
124	254	130	309	135	351	141	398	146	449	149	508
138	289	145	329	151	373	157	422	163	473	169	527

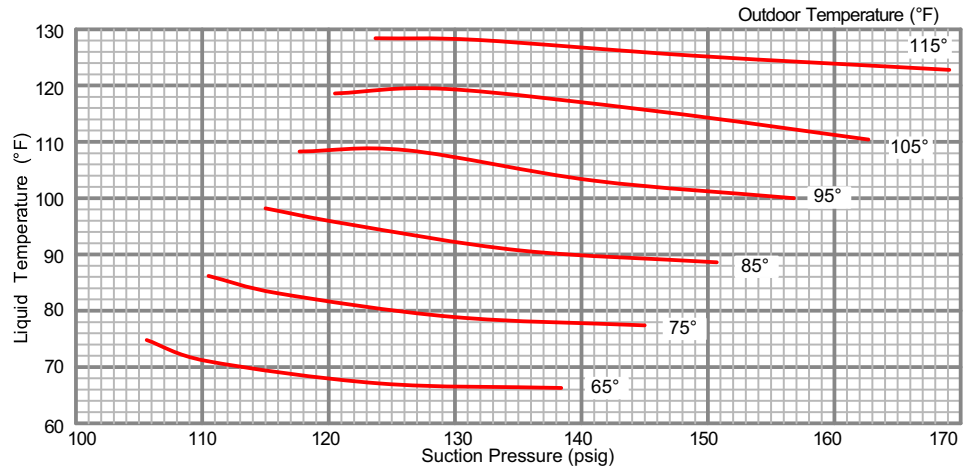

## KGA/KCA072 All-Aluminum Coil Refrigerant Charge and Check

**WARNING-Do not exceed nameplate charge under any condition.**

This unit is factory charged and should require no further adjustment. If the system requires additional refrigerant, reclaim the charge, evacuate the system, and add required nameplate charge.

**NOTE - System charging is not recommended below 60°F (15°C). In temperatures below 60°F (15°C), the charge *must* be weighed into the system.**

If weighing facilities are not available, or to check the charge, use the following procedure:

1-Make sure outdoor coil is clean. Attach gauge manifolds and operate unit at full CFM in cooling mode with economizer disabled until system stabilizes (approximately five minutes). Make sure all outdoor air dampers are closed.

2-Compare the normal operating pressures to the pressures obtained from the gauges. Check unit components if there are significant differences.

3-Measure the outdoor ambient temperature and the suction pressure. Refer to the charging curve to determine a target liquid temperature.

*Note - Pressures are listed for sea level applications.*

4-Use the same thermometer to accurately measure the liquid temperature (in the outdoor section).

- If measured liquid temperature is higher than the target liquid temperature, add refrigerant to the system.
- If measured liquid temperature is lower than the target liquid temperature, recover some refrigerant from the system.

5-Add or remove charge in increments. Allow the system to stabilize each time refrigerant is added or removed.

6-Continue the process until measured liquid temperature agrees with the target liquid temperature. Do not go below the target liquid temperature when adjusting charge. Note that suction pressure can change as charge is adjusted.

7-Example: At 95°F outdoor ambient and a measured suction pressure of 130psig, the target liquid temperature is 107°F. For a measured liquid temperature of 110°F, add charge in increments until measured liquid temperature agrees with the target liquid temperature.

Normal Operating Pressures											
Outdoor Coil Entering Air Temperature											
65 °F		75 °F		85 °F		95 °F		105 °F		115 °F	
Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)	Suct (psig)	Disc (psig)
106	250	111	288	115	329	118	375	121	428	124	482
110	256	116	295	122	338	126	383	129	434	132	490
124	254	130	309	135	351	141	398	146	449	149	508
138	289	145	329	151	373	157	422	163	473	169	527

