

ZGB/ZCB060 All-Aluminum Coil Refrigerant Charge and Check

WARNING-Do not exceed nameplate charge under any condition.

This unit is factory charged and should require no further adjustment. If the system requires additional refrigerant, reclaim the charge, evacuate the system, and add required nameplate charge.

NOTE - System charging is not recommended below 60°F (15°C). In temperatures below 60°F (15°C), the charge must be weighed into the system.

If weighing facilities are not available, or to check the charge, use the following procedure:

1-Make sure outdoor coil is clean. Attach gauge manifolds and operate unit at full CFM in cooling mode with economizer disabled until system stabilizes (approximately five minutes). Make sure all outdoor air dampers are closed.

2-Compare the normal operating pressures to the pressures obtained from the gauges. Check unit components if there are significant differences.

3-Measure the outdoor ambient temperature and the suction pressure. Refer to the charging curve to determine a target liquid temperature.

Note - Pressures are listed for sea level applications.

4-Use the same thermometer to accurately measure the liquid temperature (in the outdoor section).


- If measured liquid temperature is higher than the target liquid temperature, add refrigerant to the system.
- If measured liquid temperature is lower than the target liquid temperature, recover some refrigerant from the system.

5-Add or remove charge in increments. Allow the system to stabilize each time refrigerant is added or removed.

6-Continue the process until measured liquid temperature agrees with the target liquid temperature. Do not go below the target liquid temperature when adjusting charge. Note that suction pressure can change as charge is adjusted.

7-Example: At 95°F outdoor ambient and a measured suction pressure of 130psig, the target liquid temperature is 100°F. For a measured liquid temperature of 112°F, add charge in increments until measured liquid temperature agrees with the target liquid temperature.

Normal Operating Pressures											
Outdoor Coil Entering Air Temperature											
65 °F		75 °F		85 °F		95 °F		105 °F		115 °F	
Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig
106	248	110	288	114	331	118	378	123	428	126	483
114	254	118	292	122	336	125	384	129	435	133	493
130	267	134	308	138	353	142	401	146	455	151	511
147	290	151	329	155	372	159	420	164	477	169	533

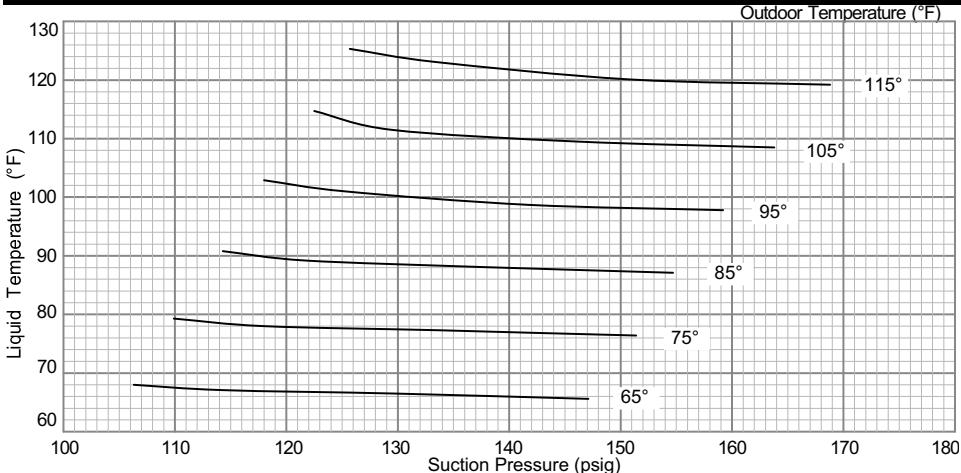

0115
580769-01

ZGB/ZCB060 All-Aluminum Coil Refrigerant Charge and Check

WARNING-Do not exceed nameplate charge under any condition.

This unit is factory charged and should require no further adjustment. If the system requires additional refrigerant, reclaim the charge, evacuate the system, and add required nameplate charge.

NOTE - System charging is not recommended below 60°F (15°C). In temperatures below 60°F (15°C), the charge must be weighed into the system.

If weighing facilities are not available, or to check the charge, use the following procedure:

1-Make sure outdoor coil is clean. Attach gauge manifolds and operate unit at full CFM in cooling mode with economizer disabled until system stabilizes (approximately five minutes). Make sure all outdoor air dampers are closed.

2-Compare the normal operating pressures to the pressures obtained from the gauges. Check unit components if there are significant differences.

3-Measure the outdoor ambient temperature and the suction pressure. Refer to the charging curve to determine a target liquid temperature.

Note - Pressures are listed for sea level applications.

4-Use the same thermometer to accurately measure the liquid temperature (in the outdoor section).


- If measured liquid temperature is higher than the target liquid temperature, add refrigerant to the system.
- If measured liquid temperature is lower than the target liquid temperature, recover some refrigerant from the system.

5-Add or remove charge in increments. Allow the system to stabilize each time refrigerant is added or removed.

6-Continue the process until measured liquid temperature agrees with the target liquid temperature. Do not go below the target liquid temperature when adjusting charge. Note that suction pressure can change as charge is adjusted.

7-Example: At 95°F outdoor ambient and a measured suction pressure of 130psig, the target liquid temperature is 100°F. For a measured liquid temperature of 112°F, add charge in increments until measured liquid temperature agrees with the target liquid temperature.

Normal Operating Pressures											
Outdoor Coil Entering Air Temperature											
65 °F		75 °F		85 °F		95 °F		105 °F		115 °F	
Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig	Suct psig	Disc psig
106	248	110	288	114	331	118	378	123	428	126	483
114	254	118	292	122	336	125	384	129	435	133	493
130	267	134	308	138	353	142	401	146	455	151	511
147	290	151	329	155	372	159	420	164	477	169	533

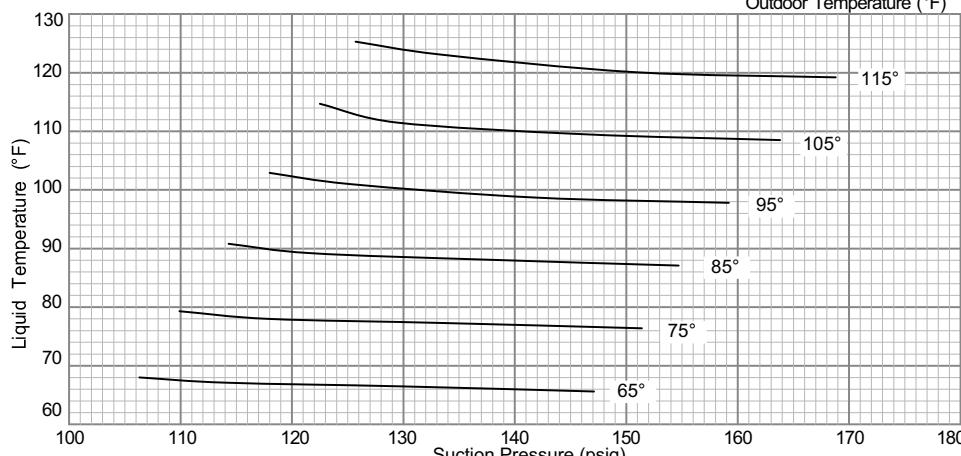

0115
580769-01